







371-1

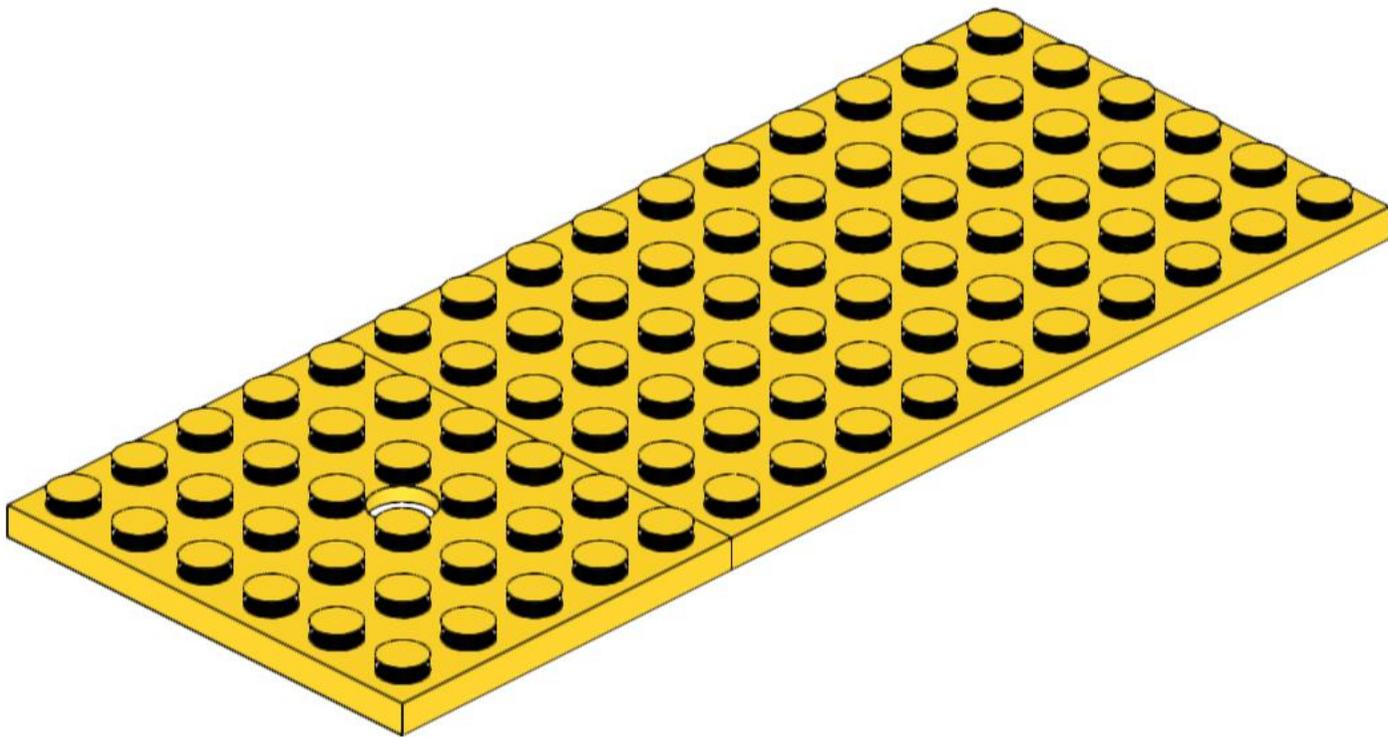



1

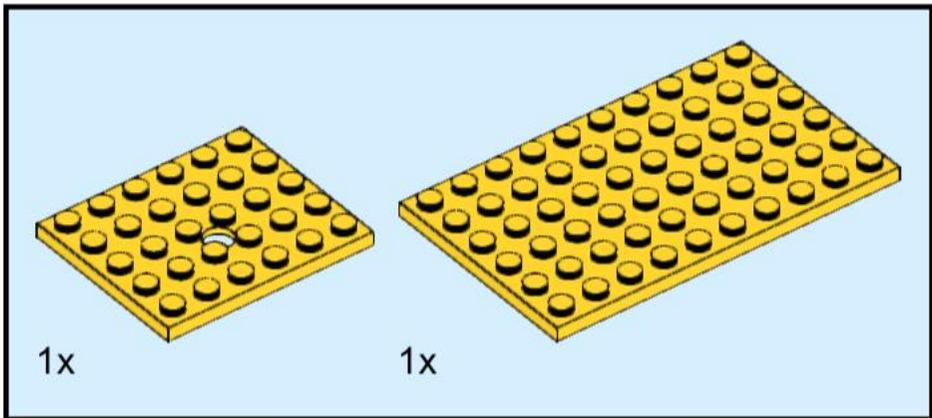



2

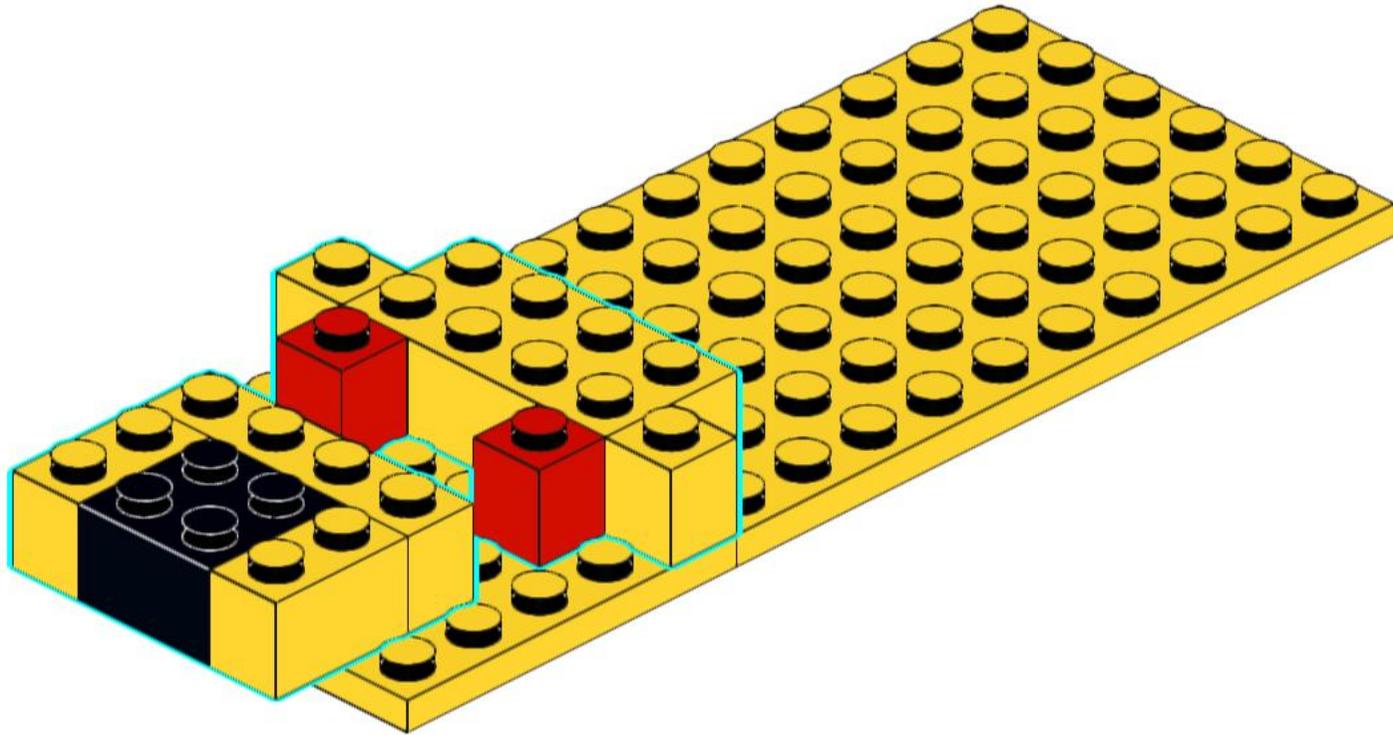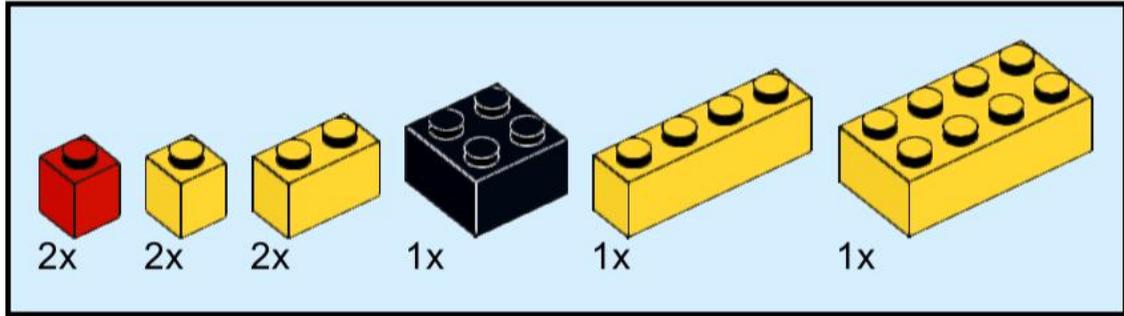




3

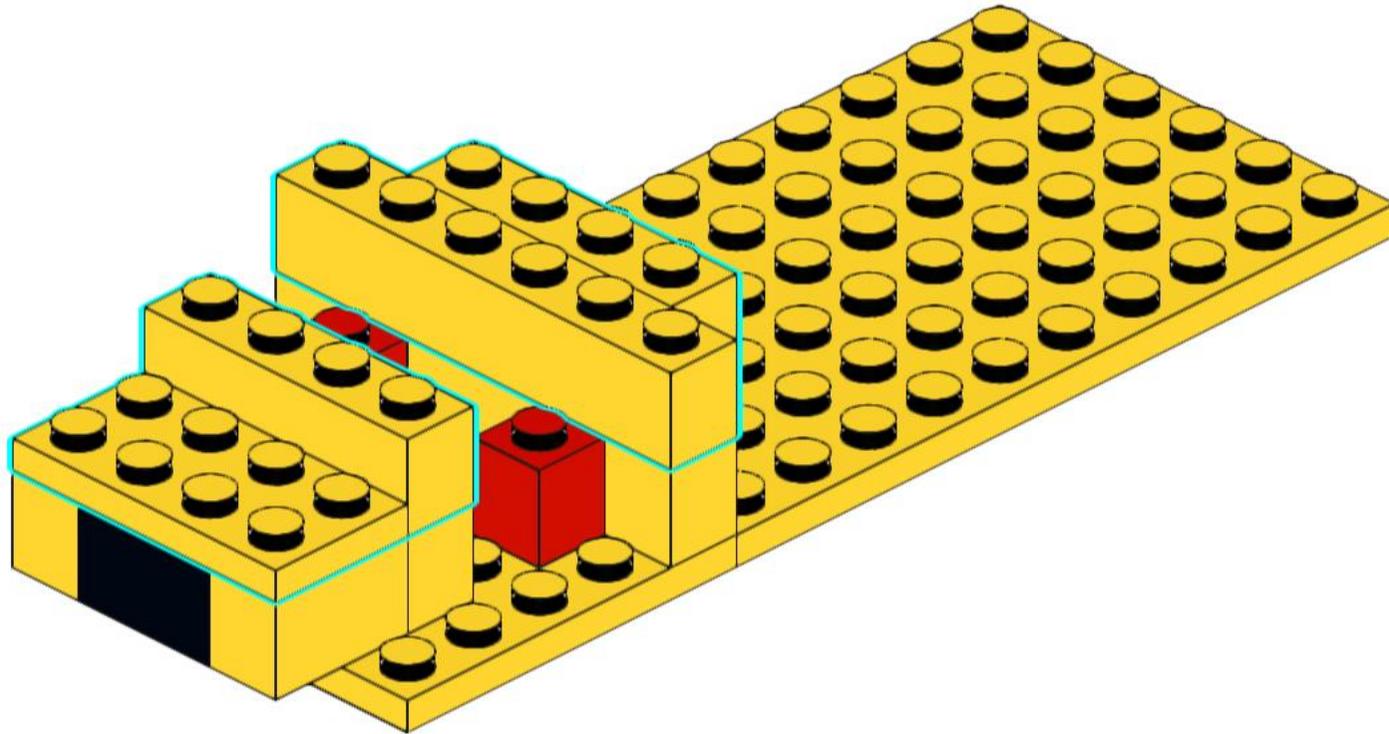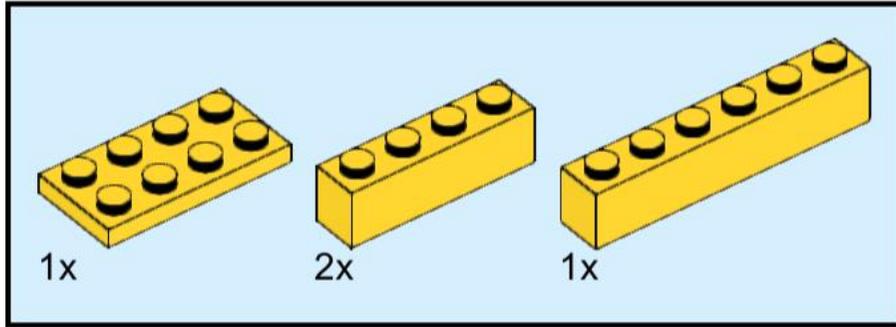




5

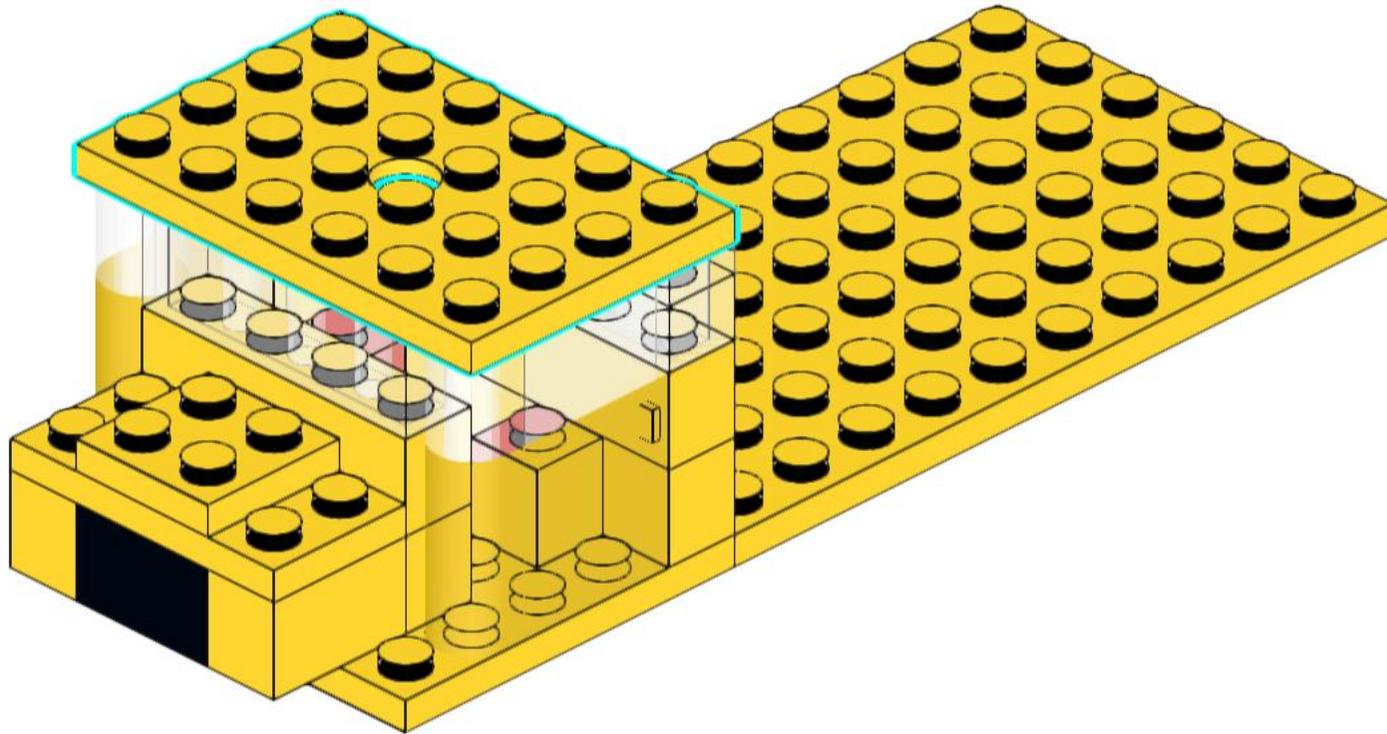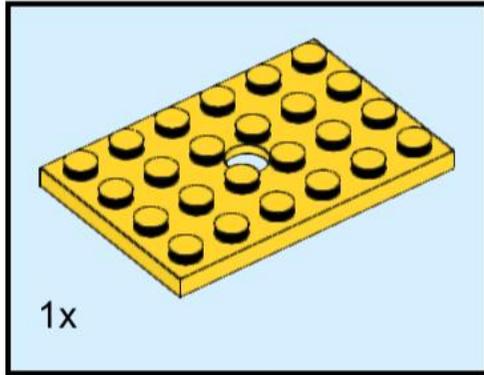




6

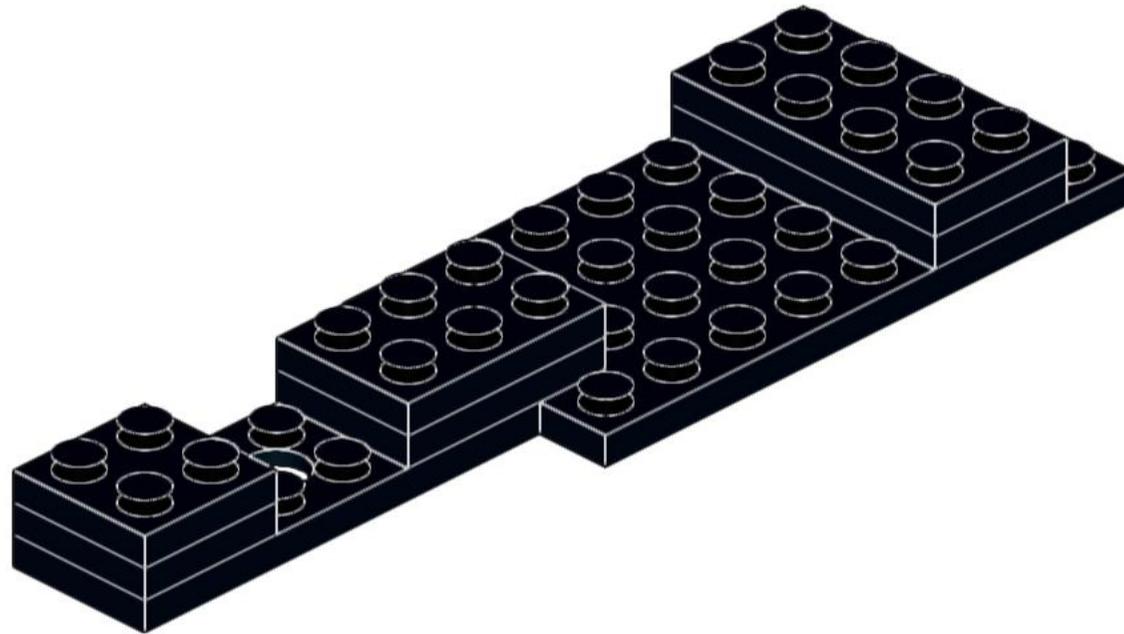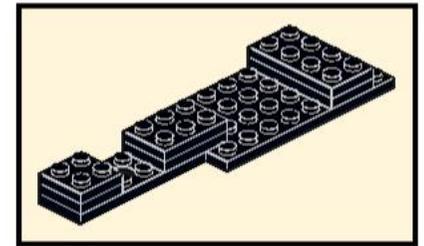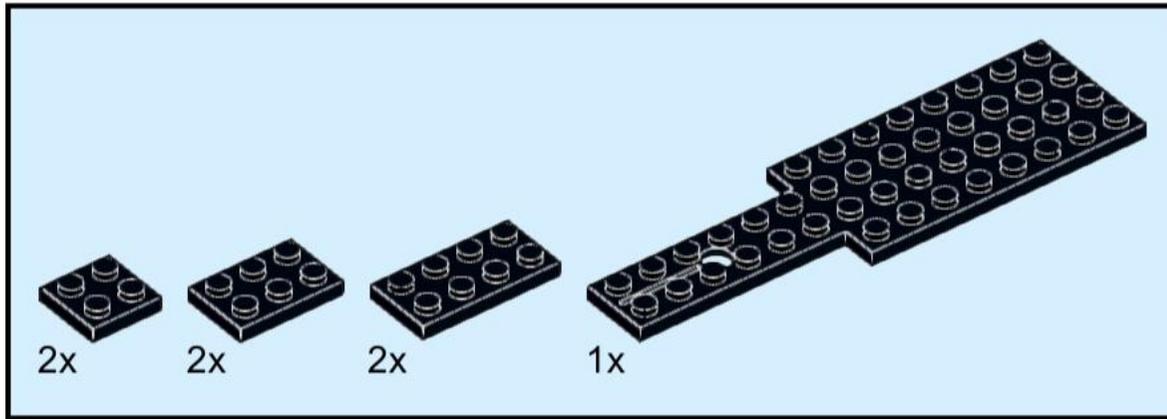


7

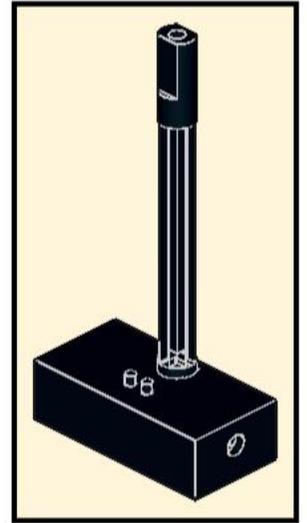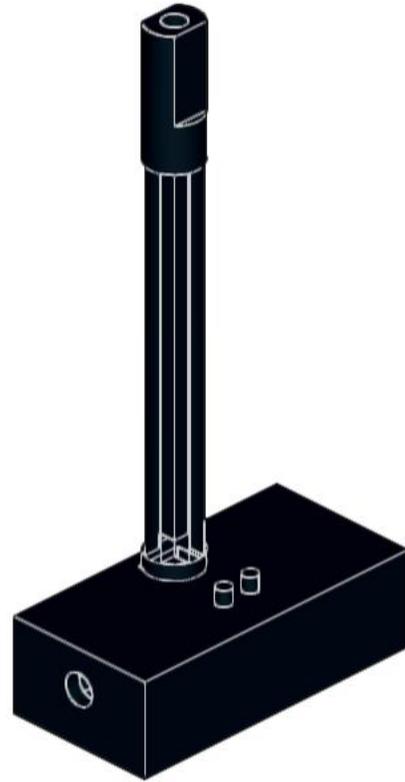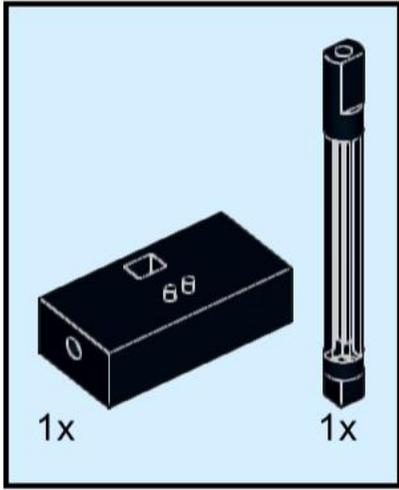



8

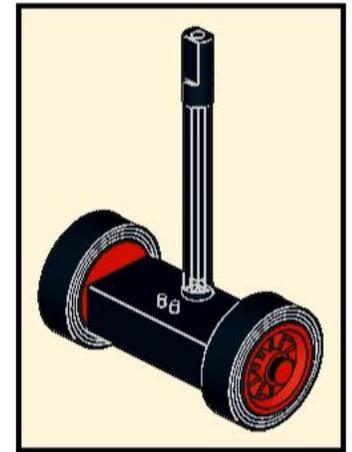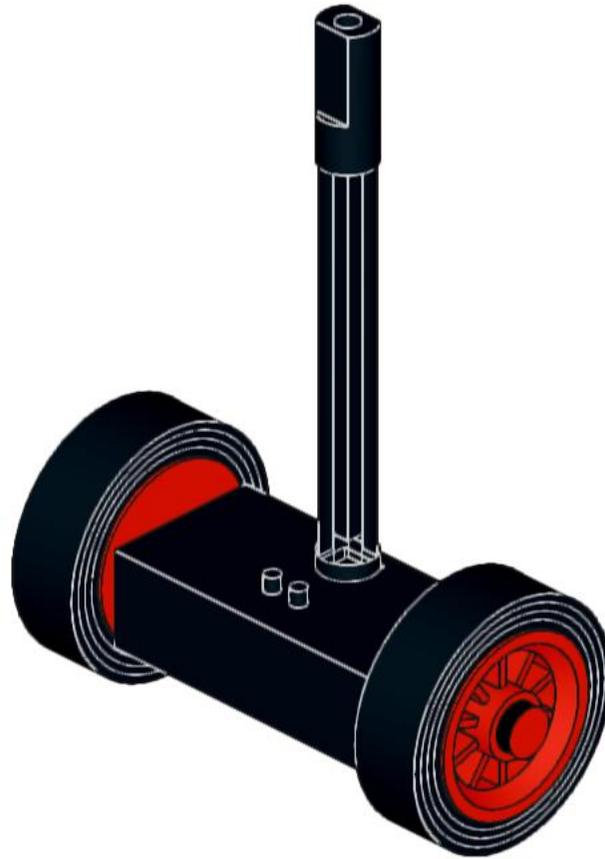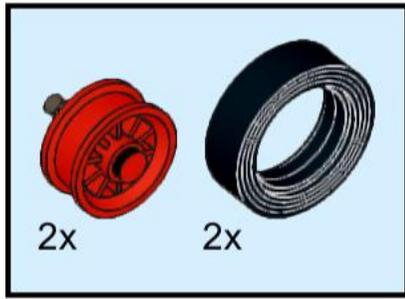



9

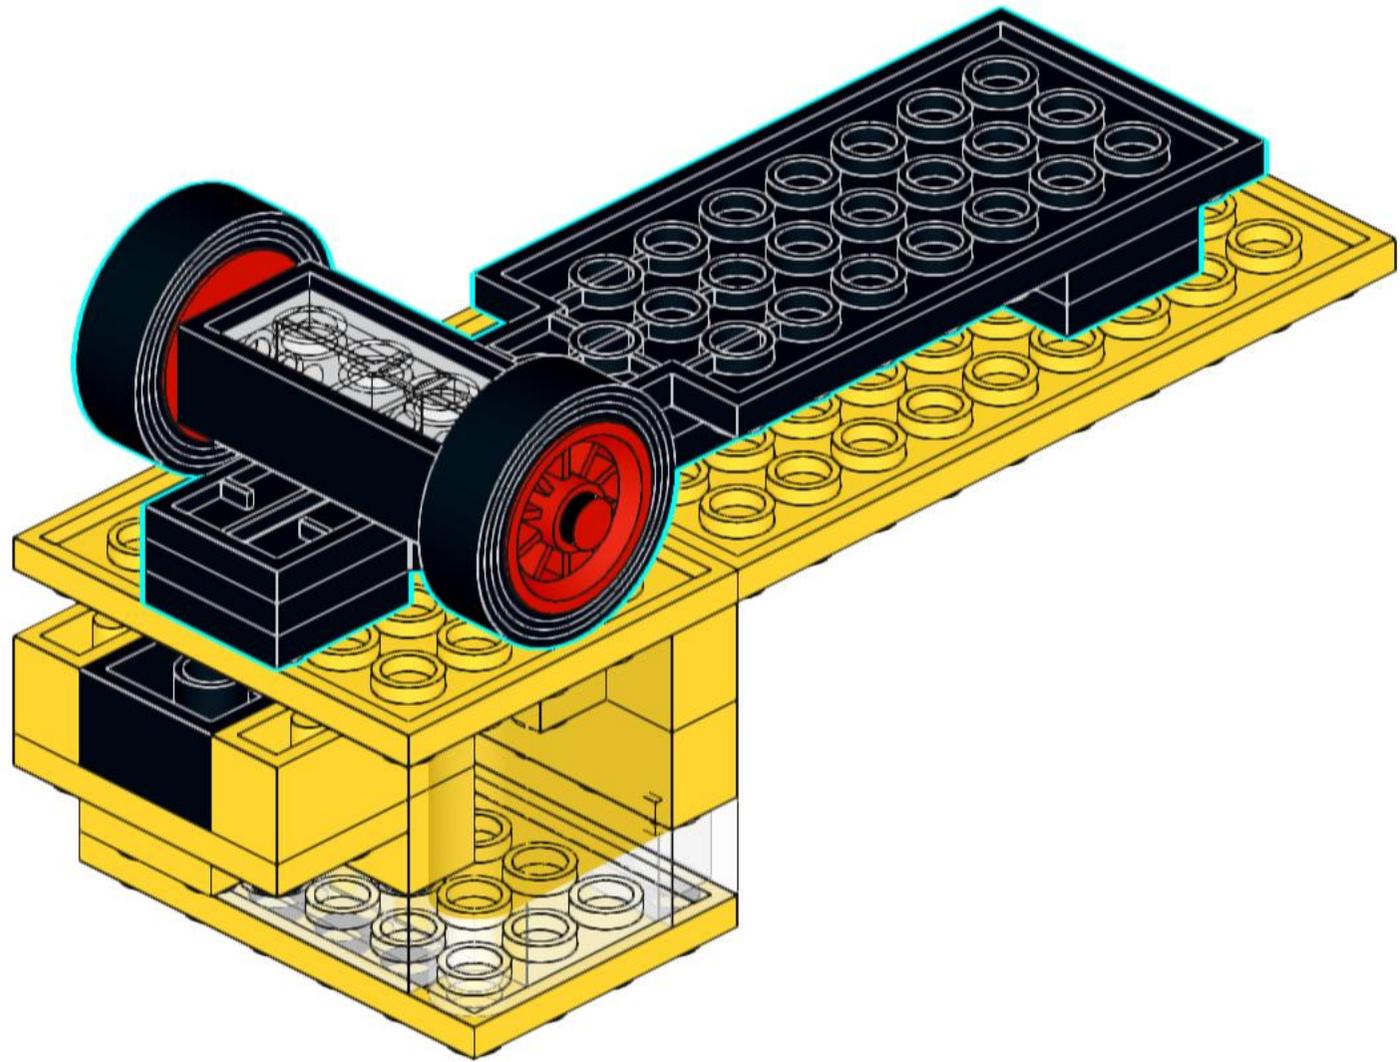




10

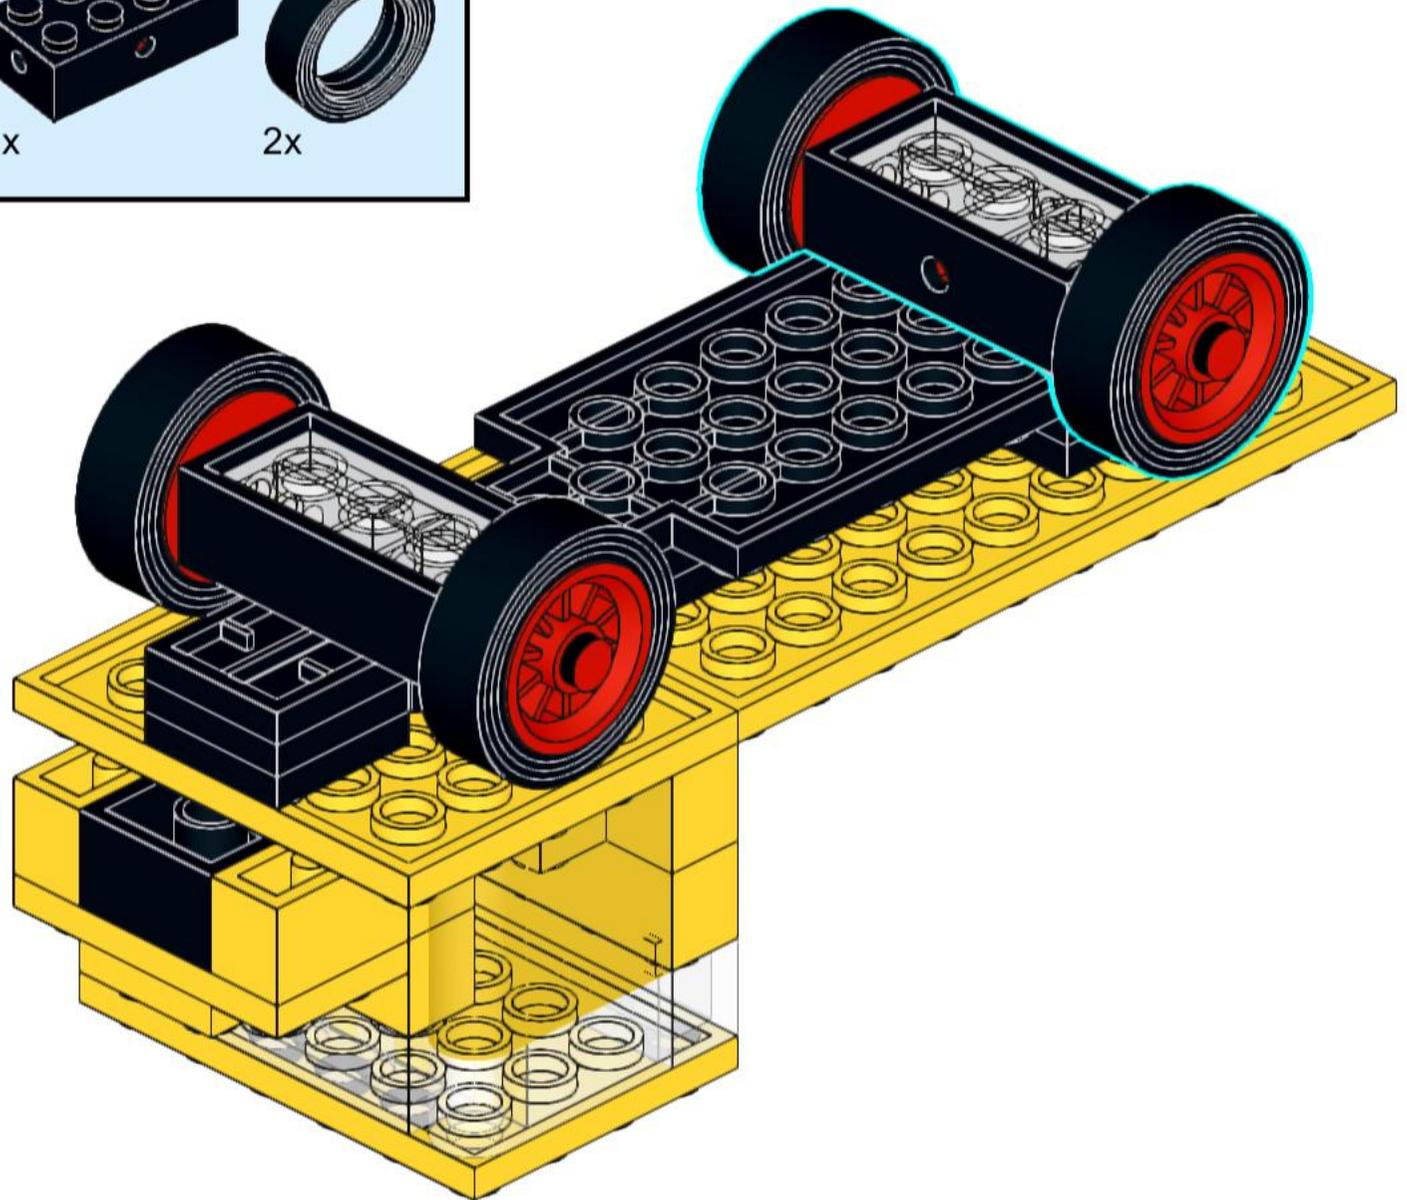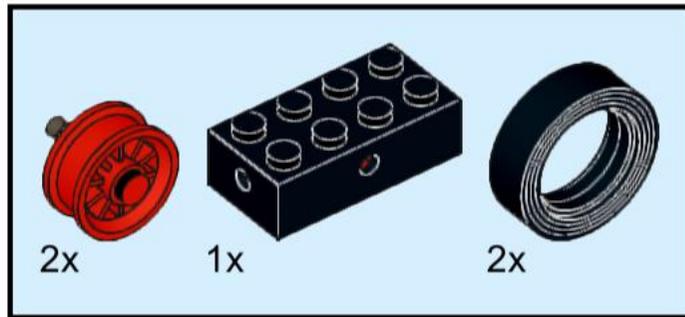


11

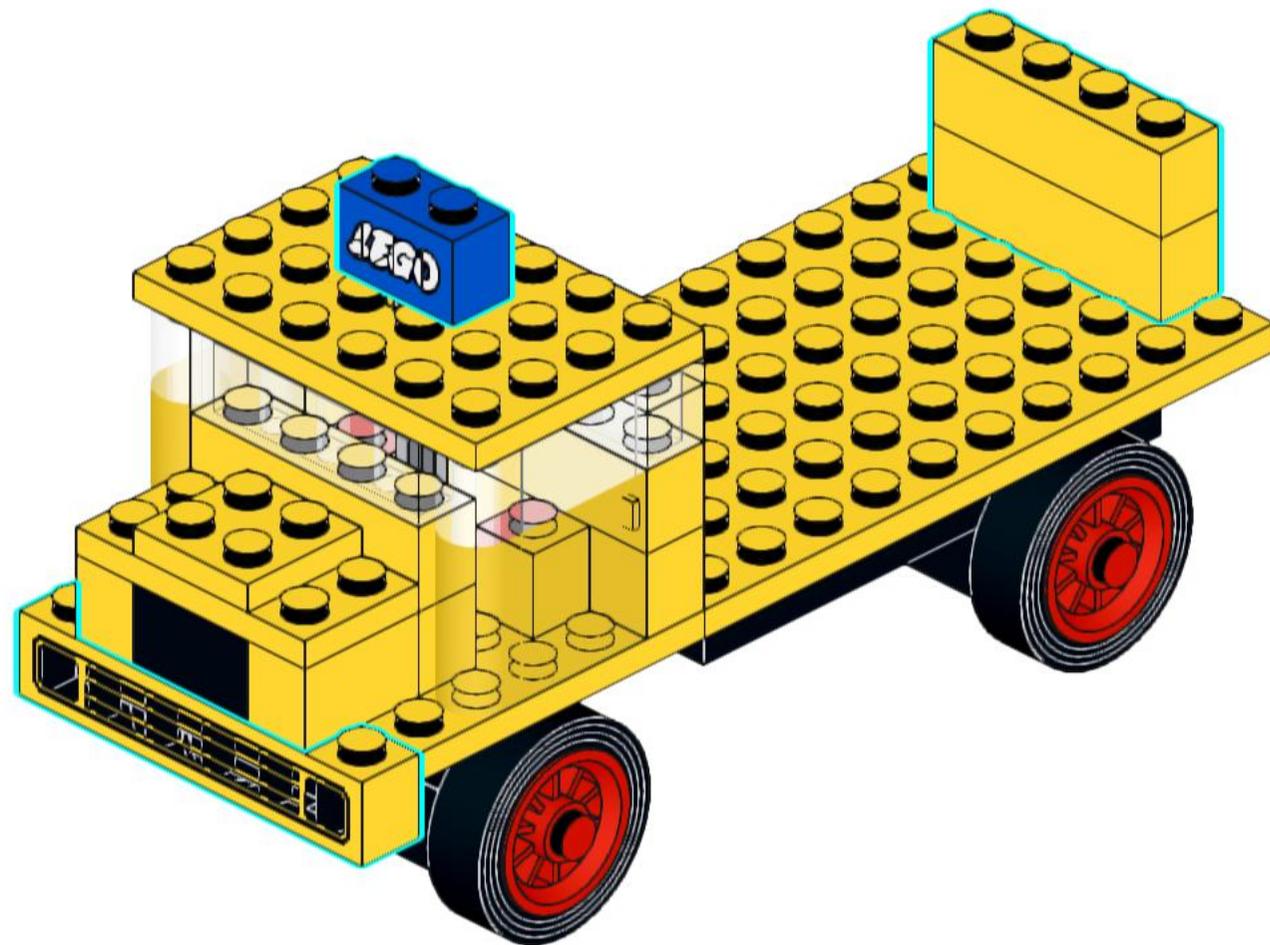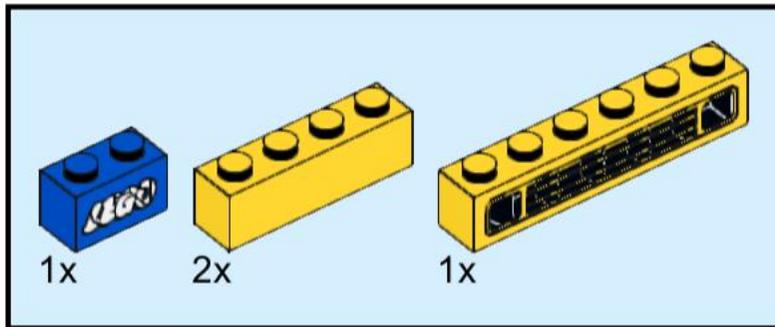

12

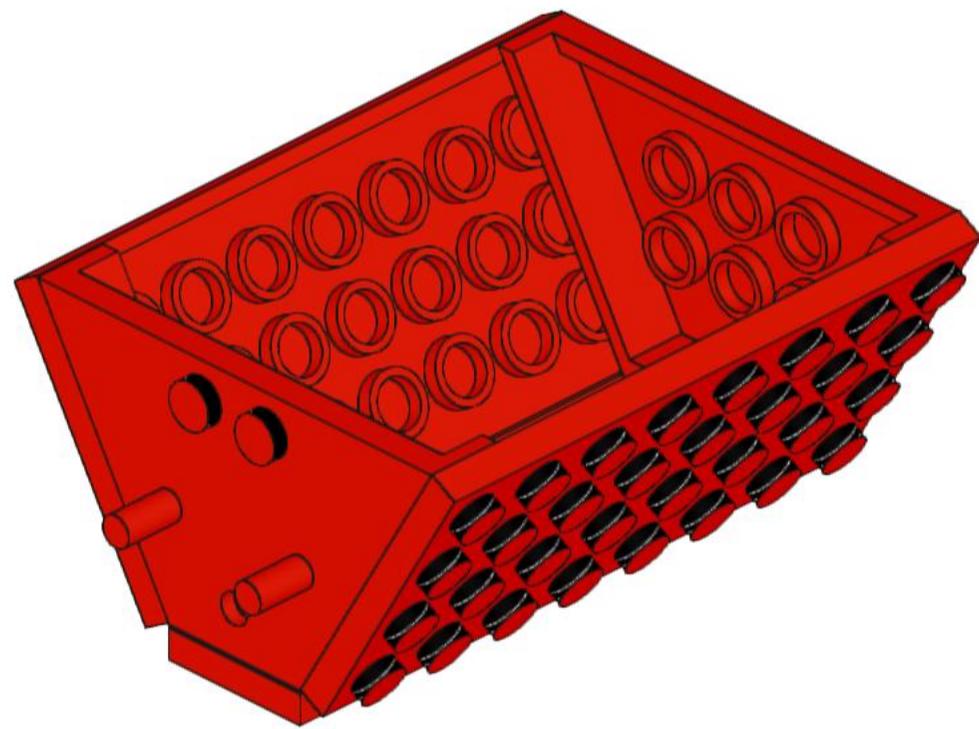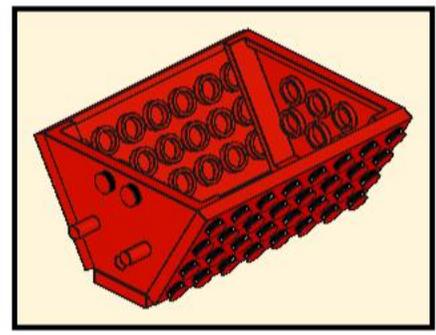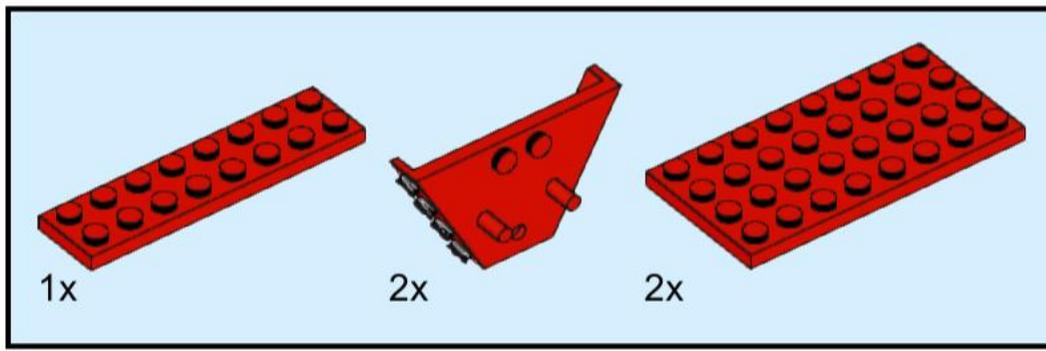

13

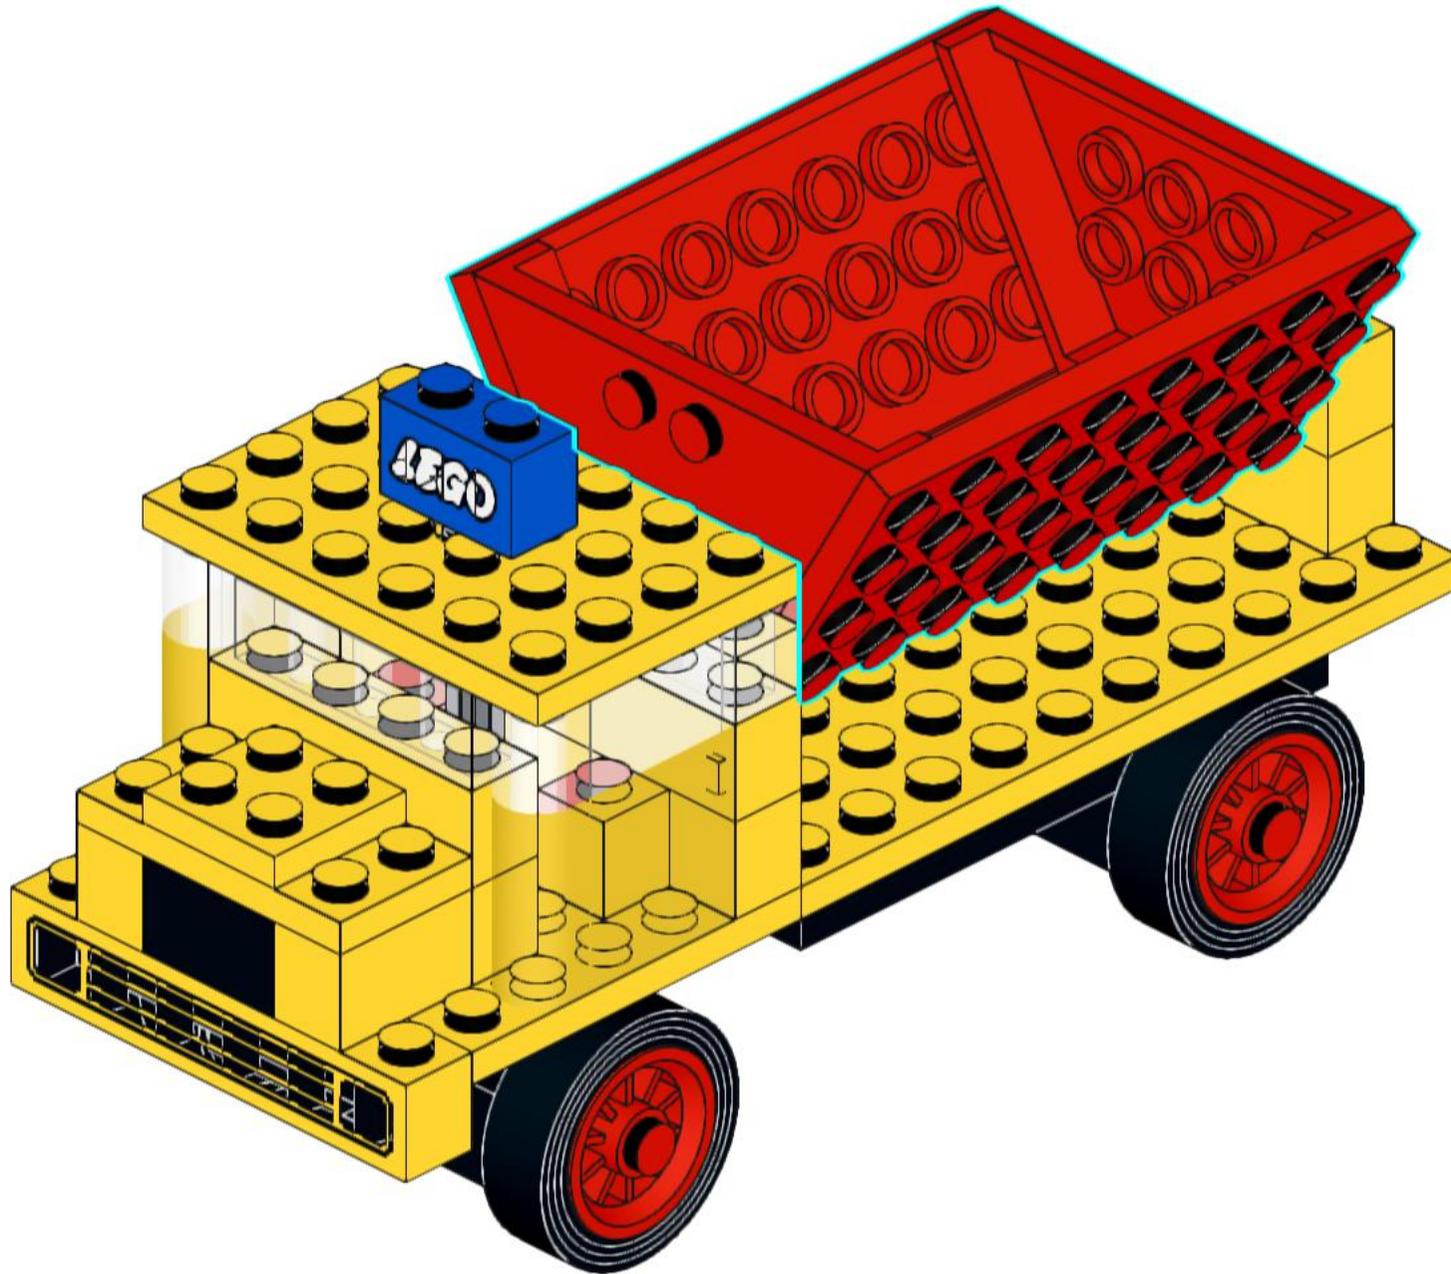





2x
3022
Black



2x
3020
Black

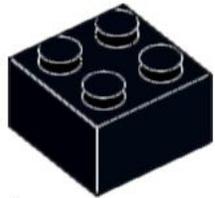

1x
3003
Black

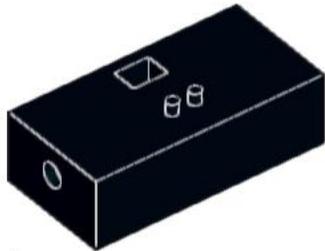

1x
800
Black



1x
799
Black



2x
3021
Black




1x
7049b
Black



4x
132old
Black




1x
804
Black




2x
3005
Red




4x
bb0019
Red

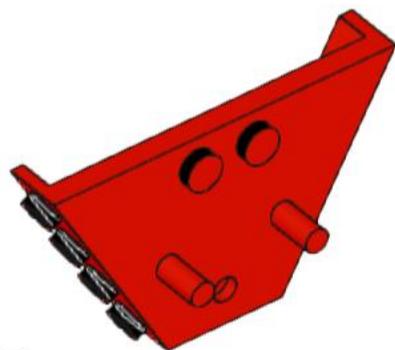


2x
3145
Red

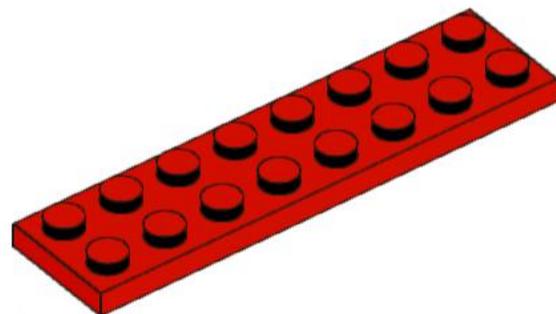


1x
3034
Red

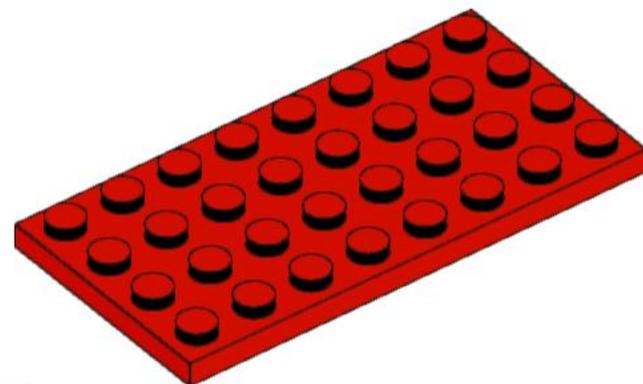


2x
3035
Red




2x
3005
Yellow

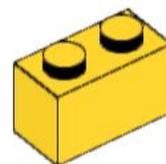


2x
3004
Yellow

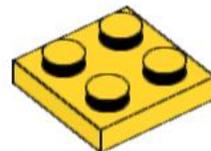


1x
3022
Yellow

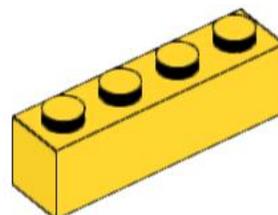


5x
3010
Yellow

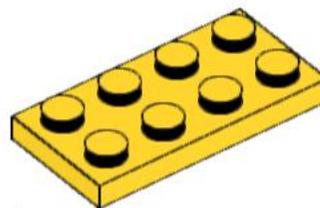


1x
3020
Yellow

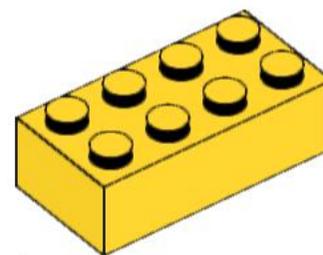


1x
3001
Yellow

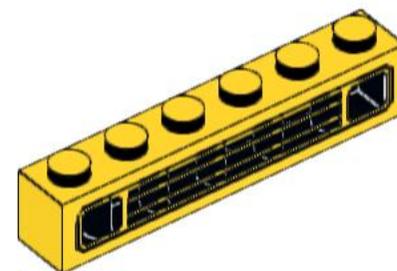


1x
3009p01
Yellow

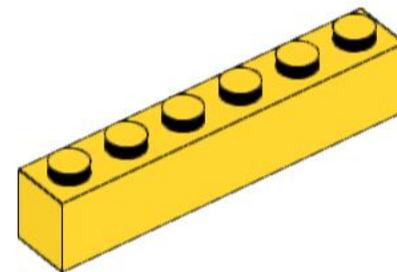


1x
3009
Yellow

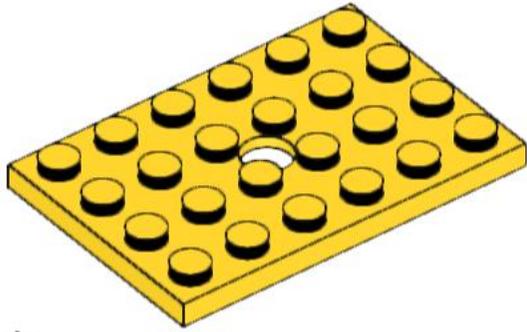

1x
709
Yellow

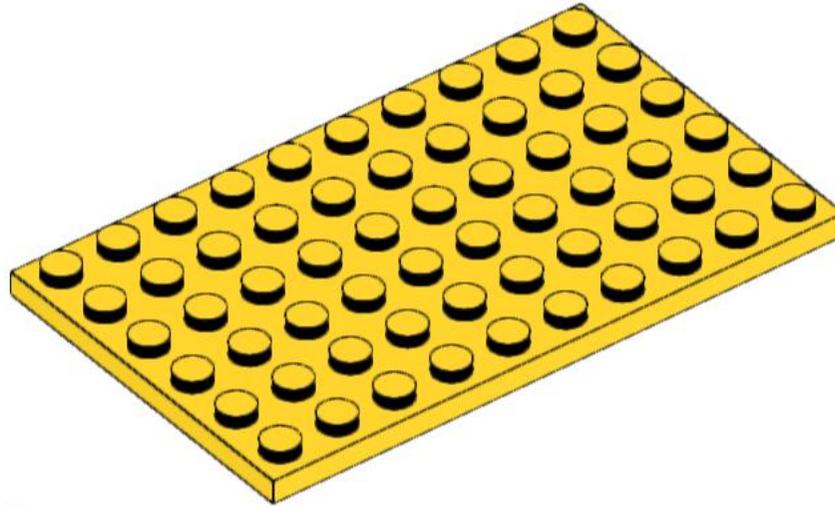

1x
802pb03
Trans-Clear

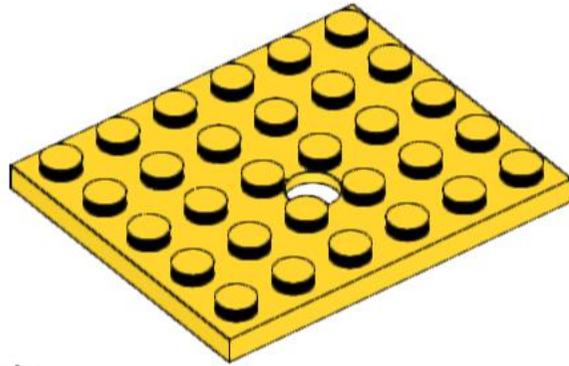


1x
711
Yellow


1x
3033
Yellow




1x
3004p50
Blue

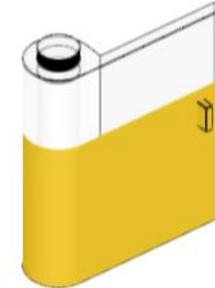

1x
801pb03
Trans-Clear

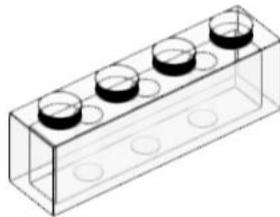

1x
3010
Trans-Clear

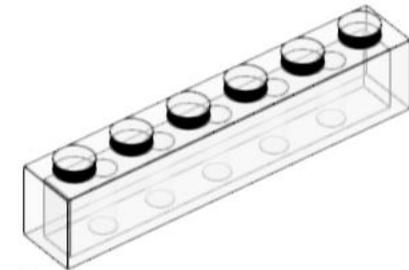

1x
3009
Trans-Clear