



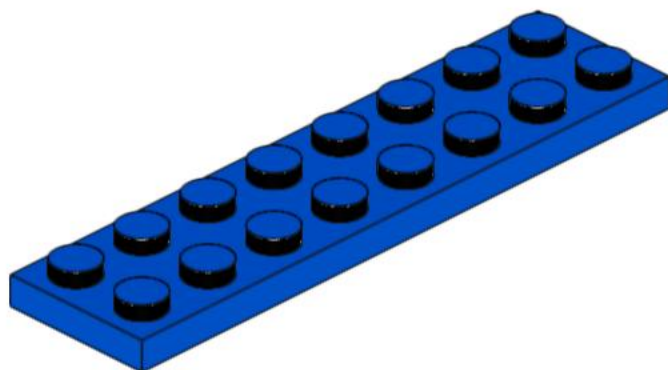



410-1

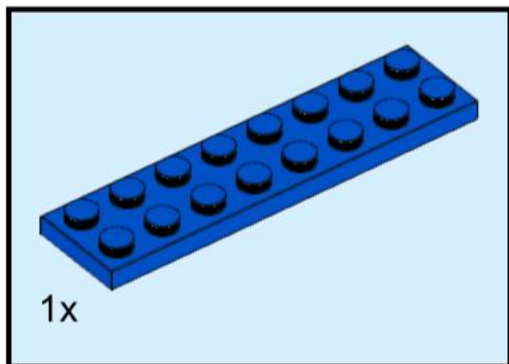



1





2

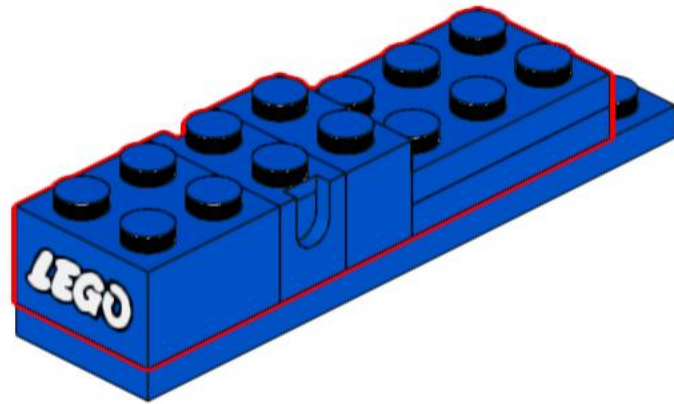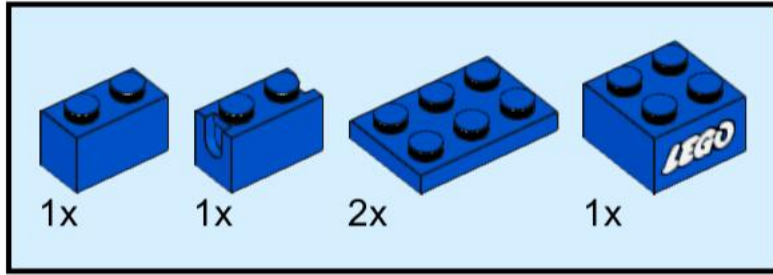



3

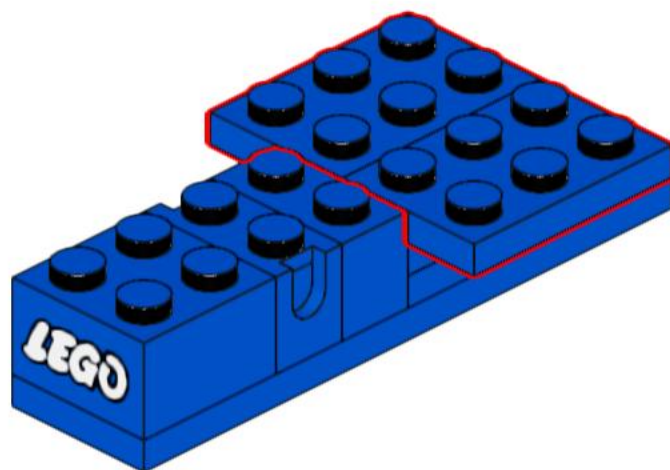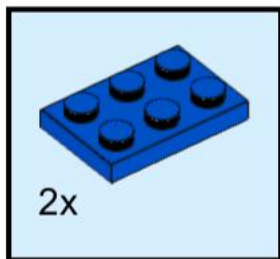




4

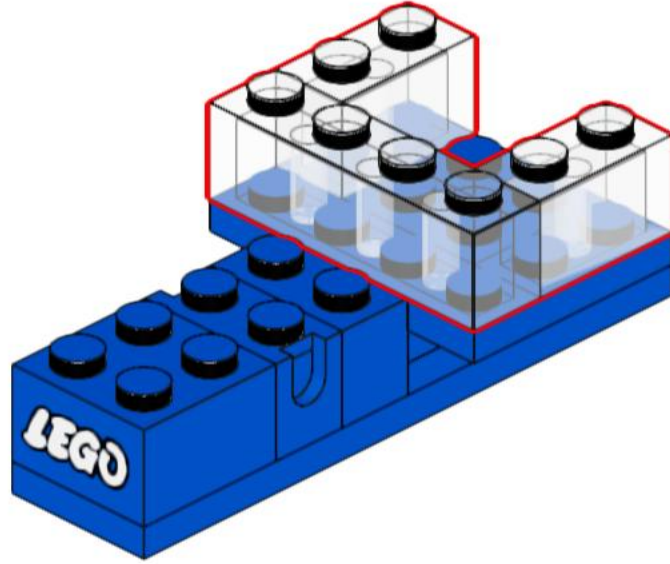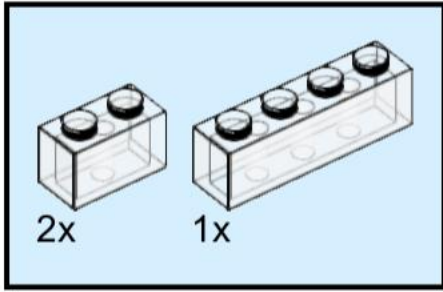


5

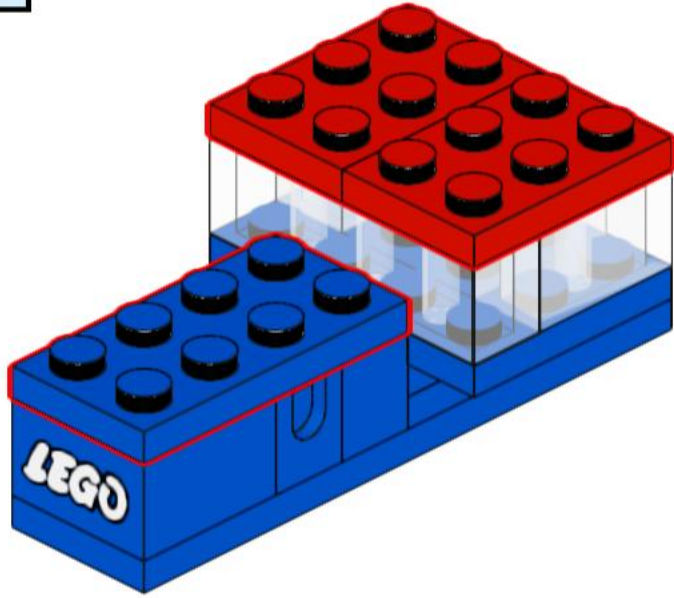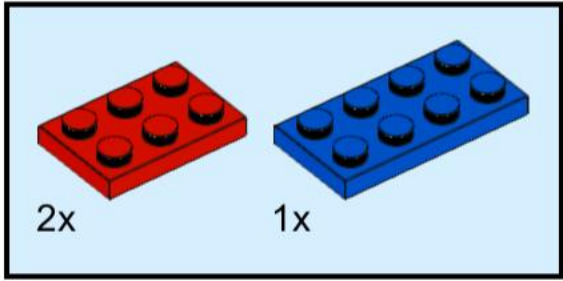



6

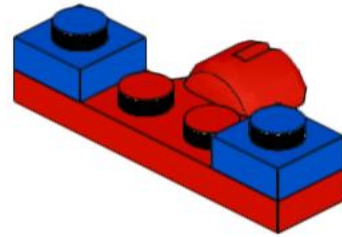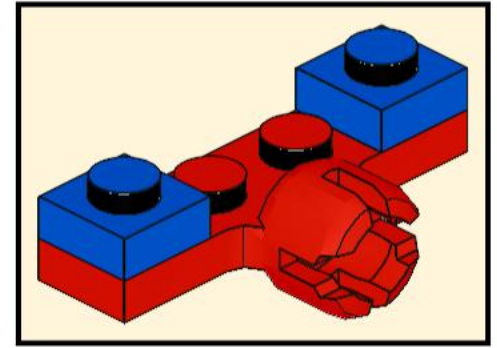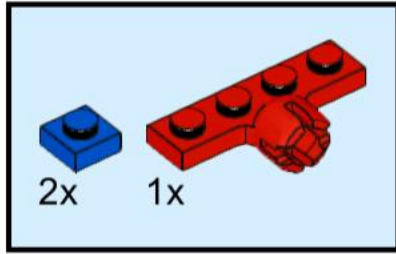



7

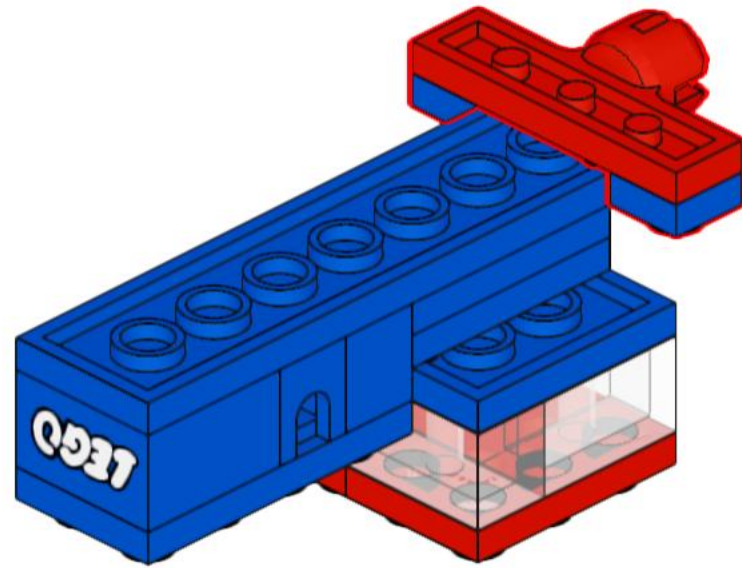


8

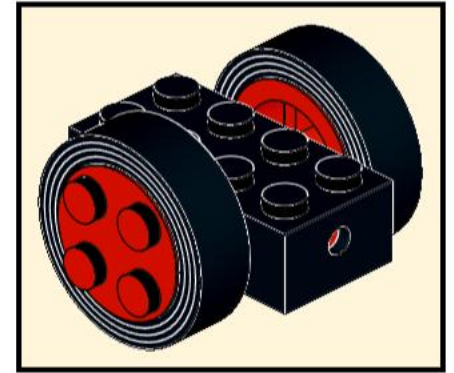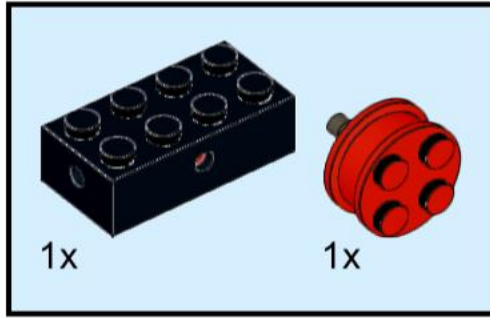


9

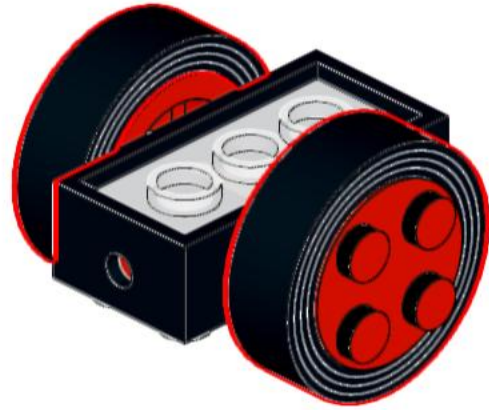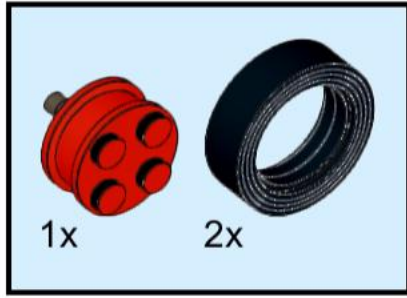



10

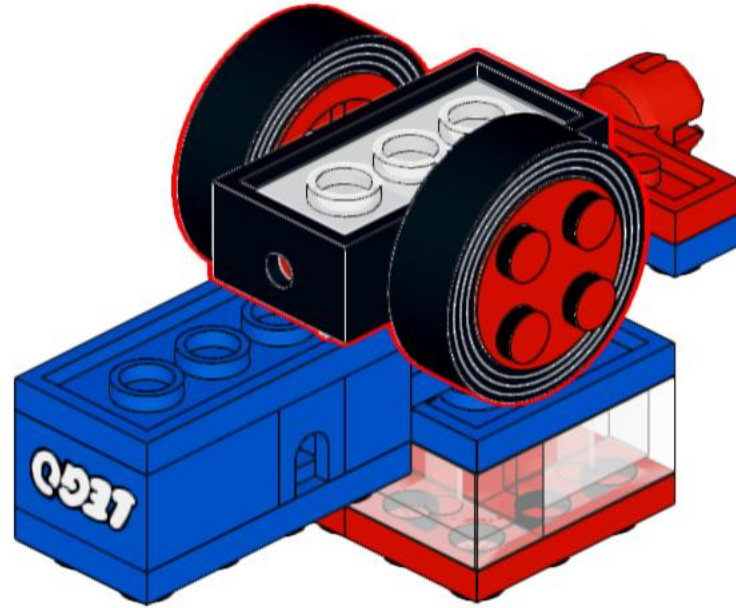



11

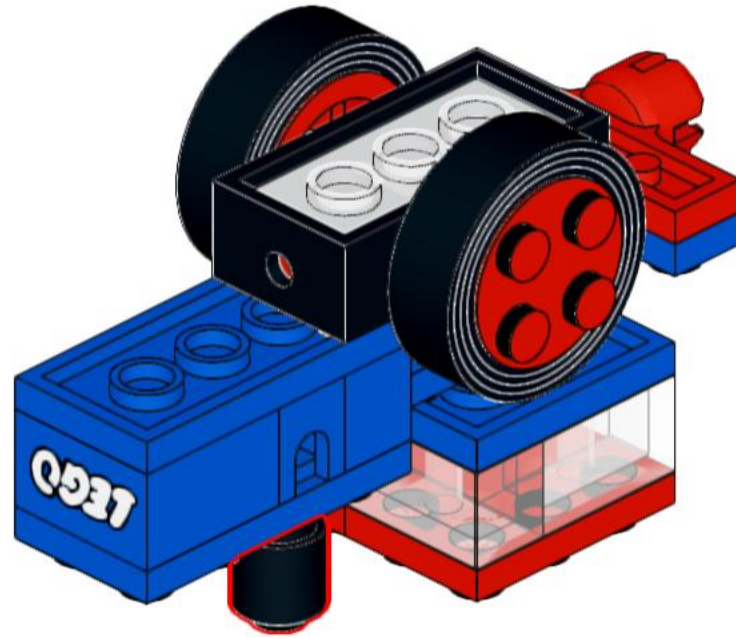

12

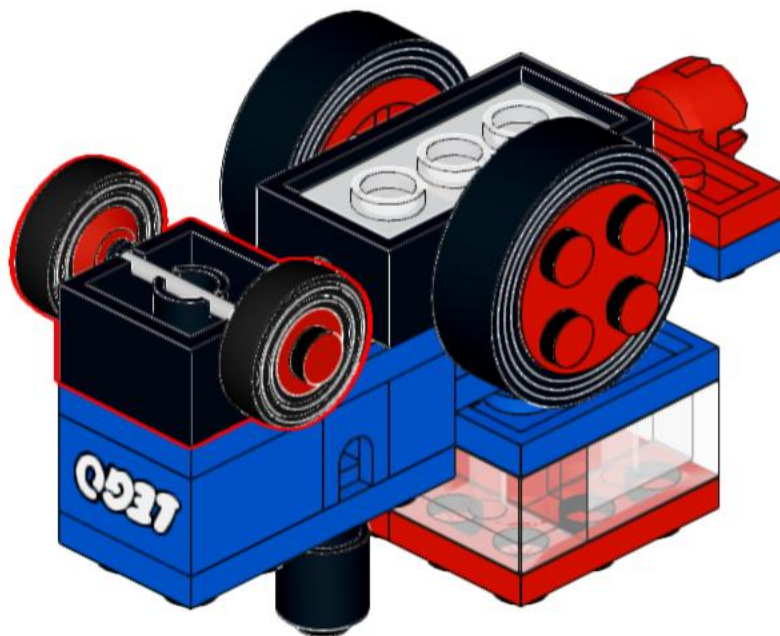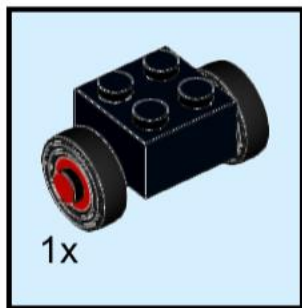


13

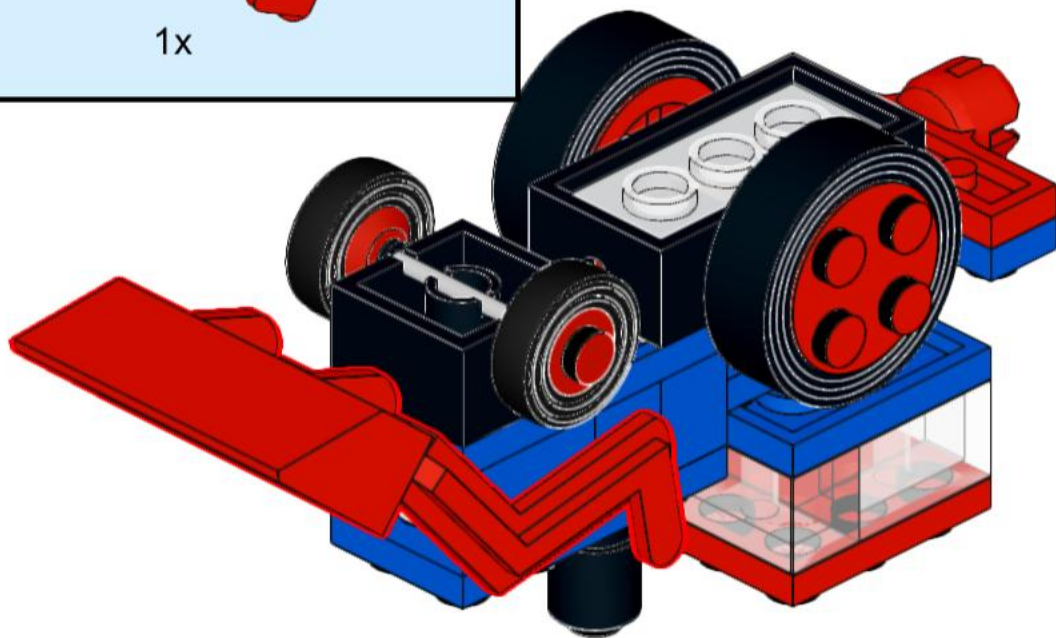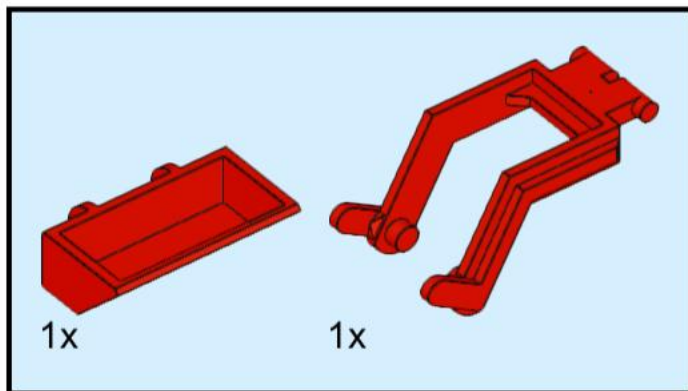





1x
3062a
Black

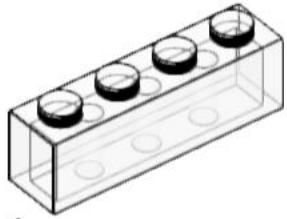

1x
3010
Trans-Clear

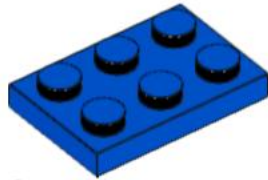


4x
3021
Blue

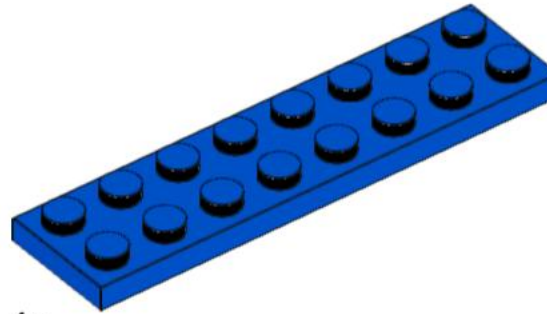

1x
3034
Blue




2x
7039
Red

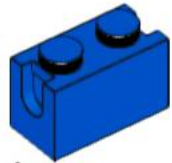


1x
3317
Blue



1x
7049b
Black

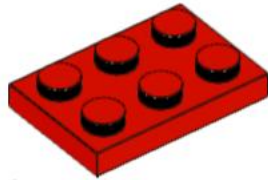


2x
3021
Red

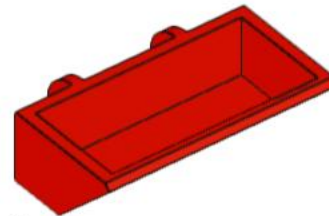

1x
784
Red




2x
132old
Black

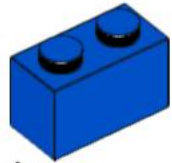


1x
3004
Blue



1x
3003pb008
Blue

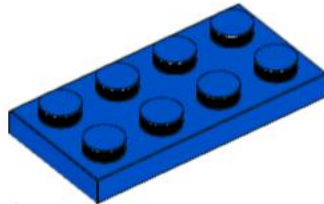


1x
3020
Blue

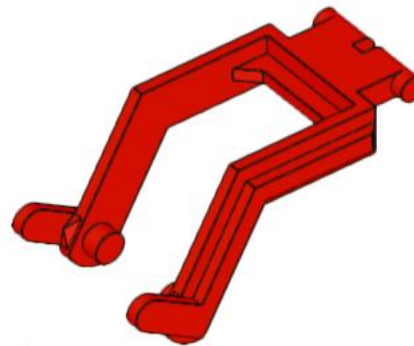

1x
3314
Red




1x
3137c01assy1
Black

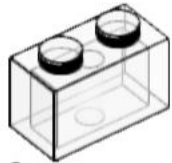

2x
3004
Trans-Clear



2x
3024
Blue

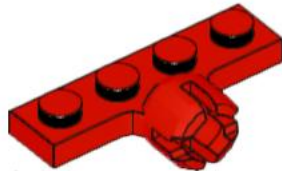

1x
3183b
Red