


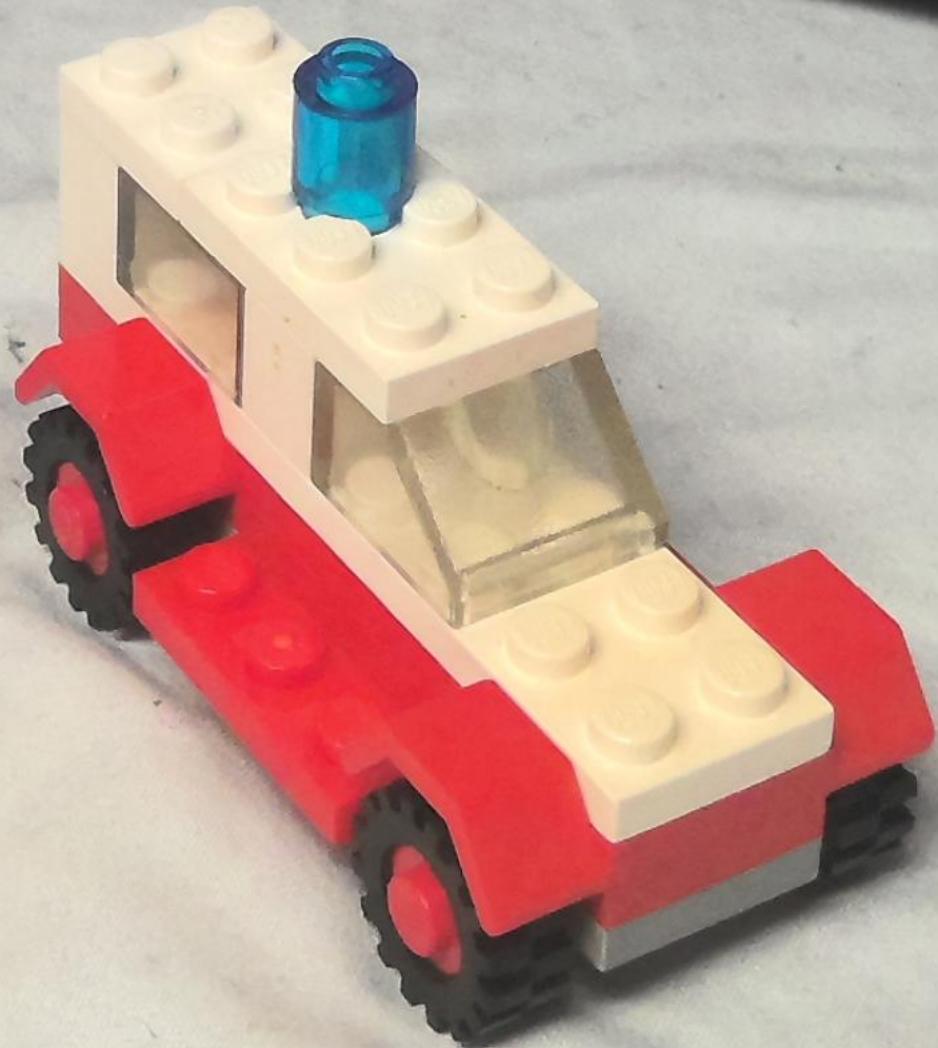


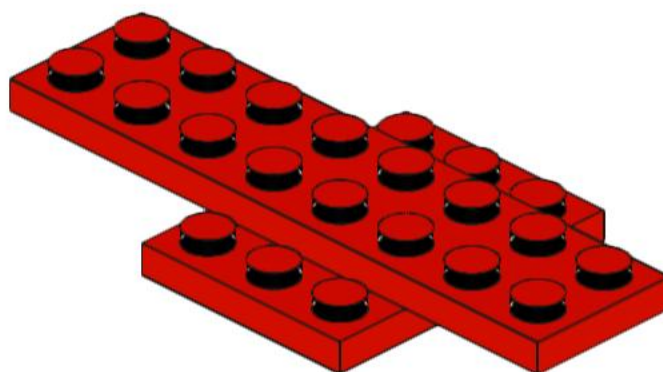



606-1

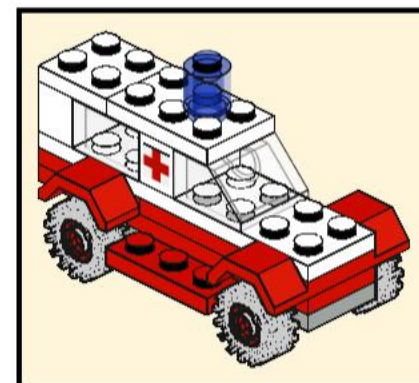



1

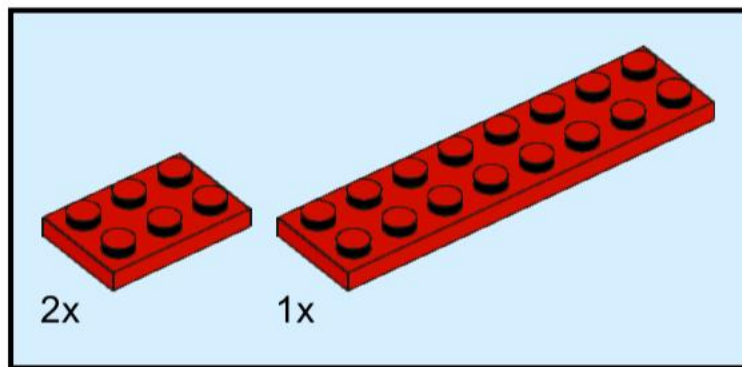



2

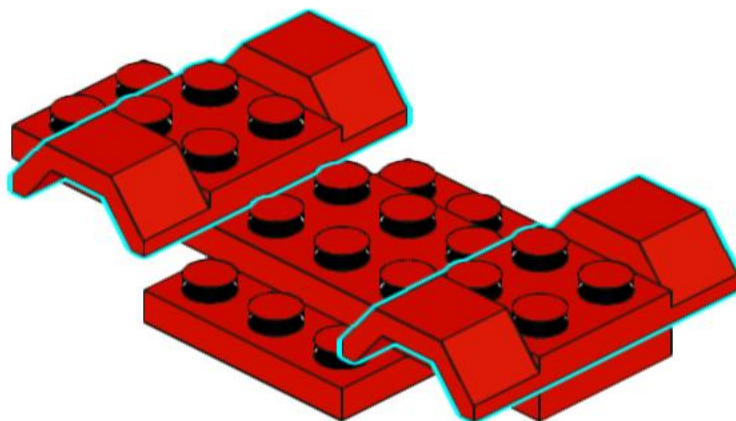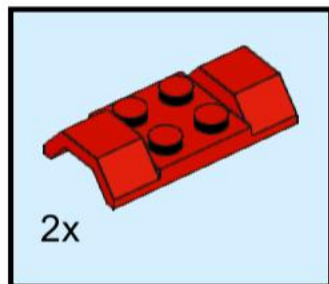



3

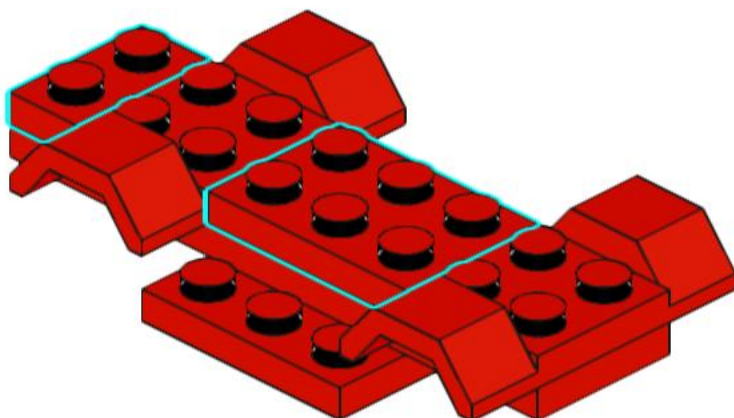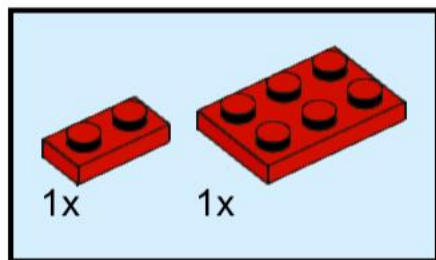



4

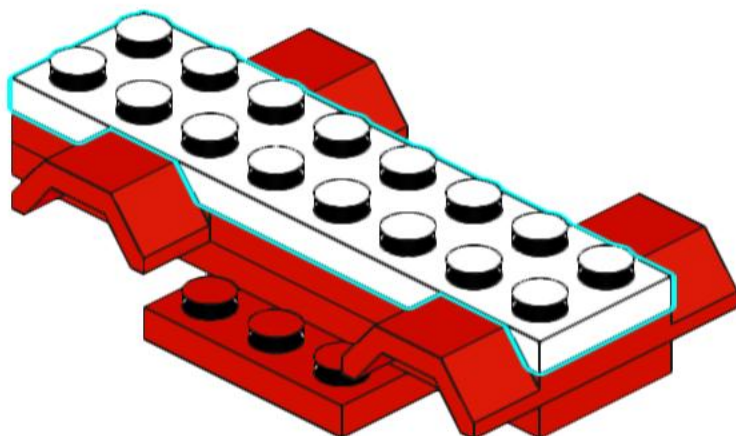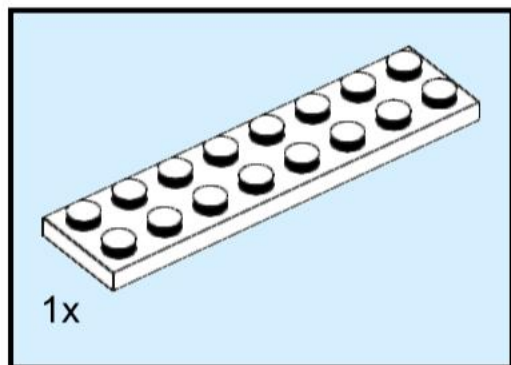



5

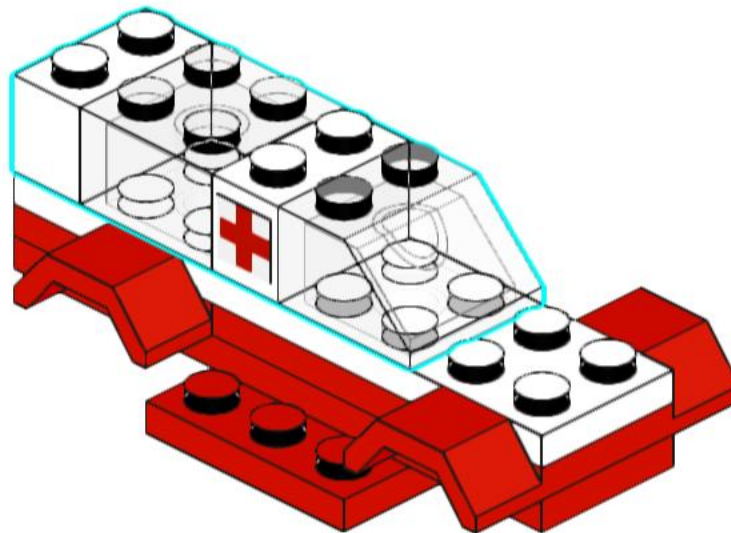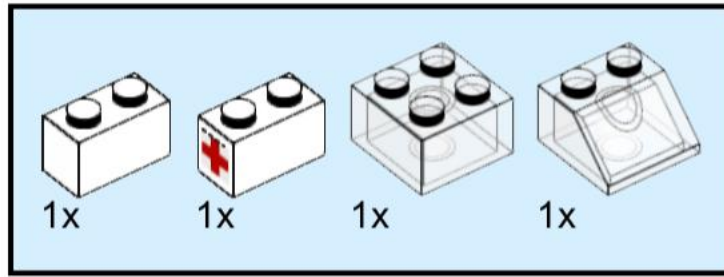



6

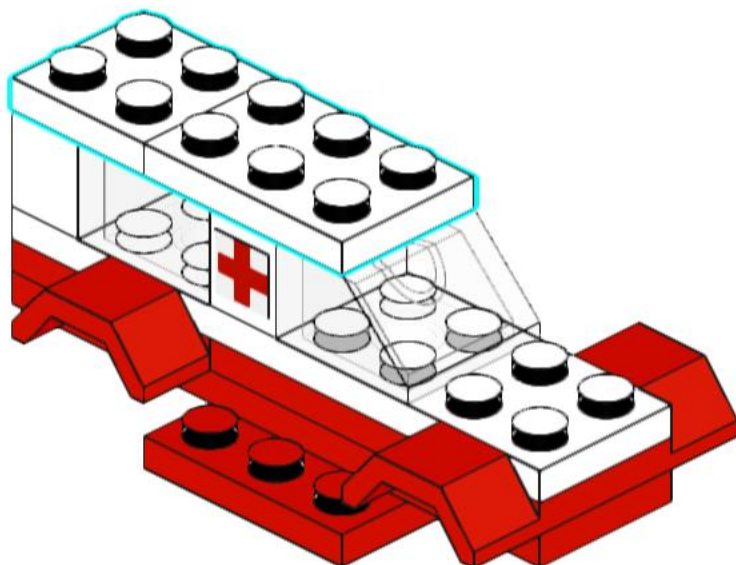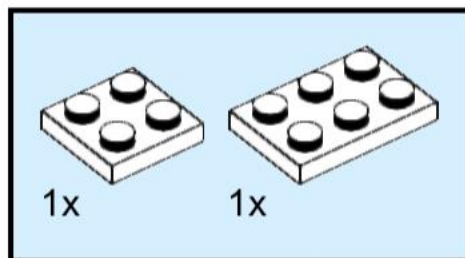



7

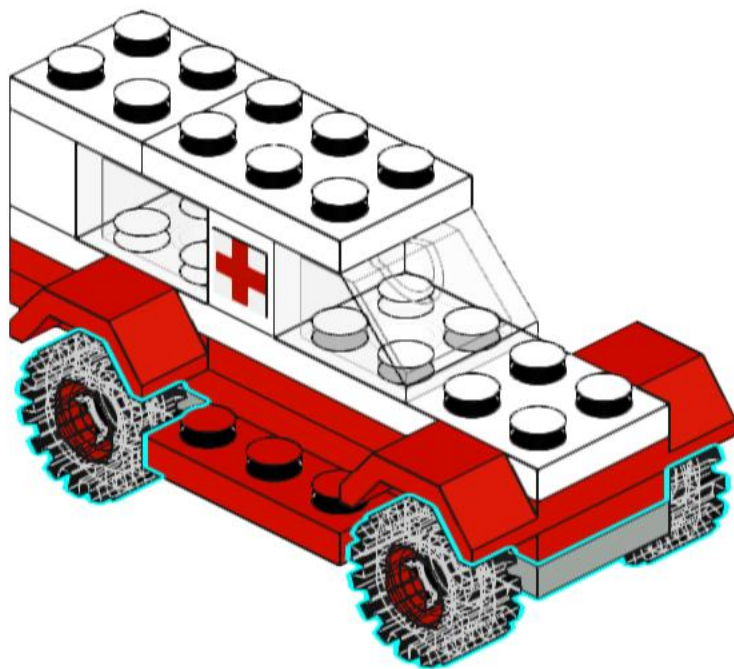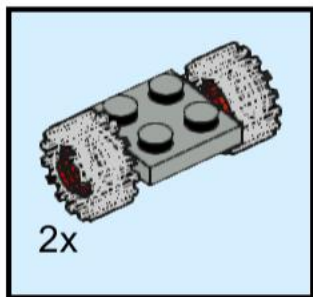


8

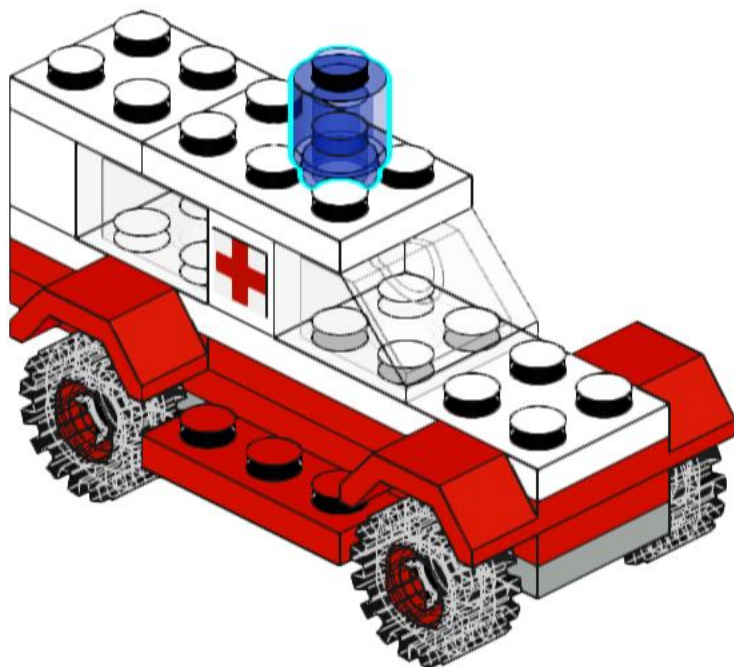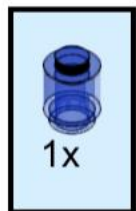

9

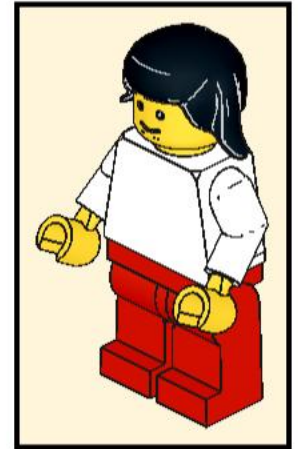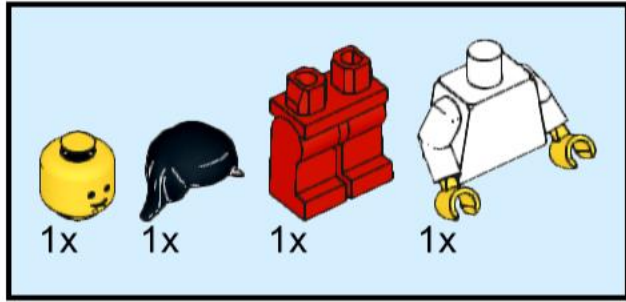

10

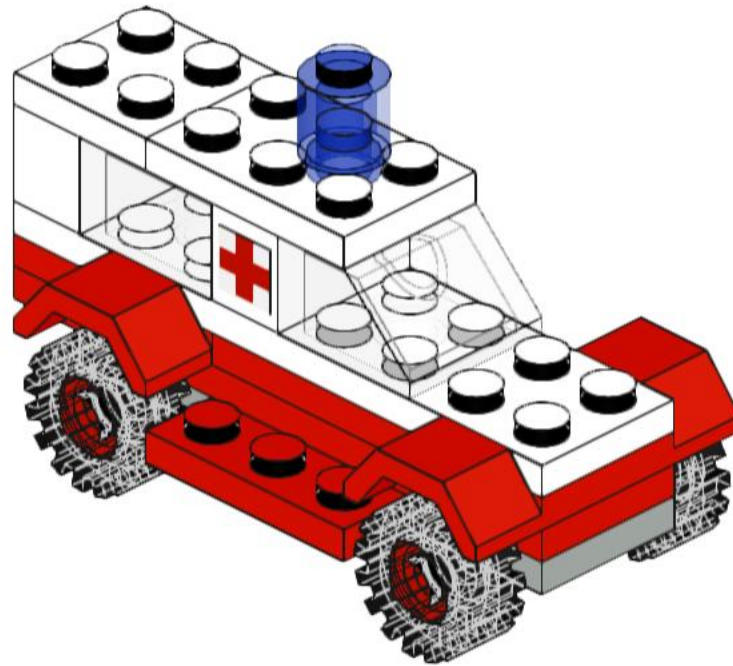





1x
3062a
Trans-Dark Blue




1x
x103
Black

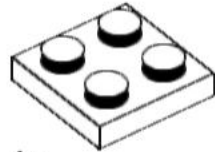


1x
3022
White

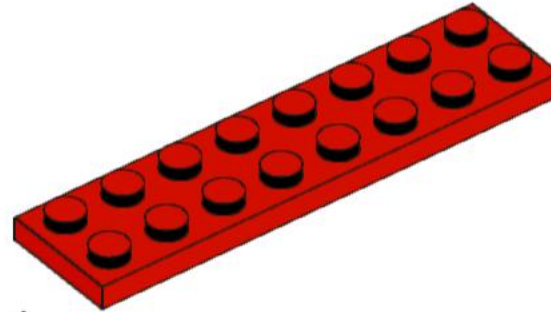


1x
3034
Red

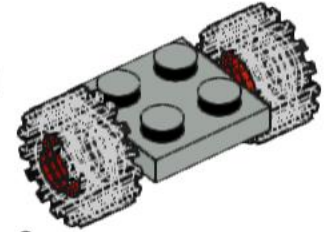


2x
122c01assy2
Light Gray

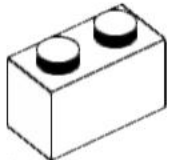


1x
3004
White

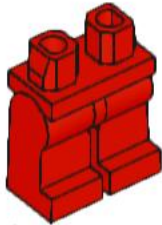


1x
970c00
Red

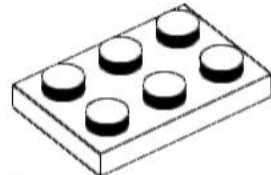


1x
3021
White

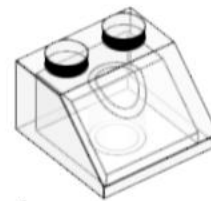


1x
3039
Trans-Clear

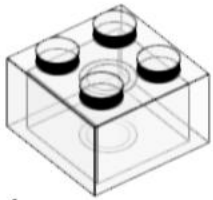


1x
3003
Trans-Clear

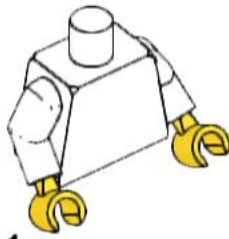


1x
973c001
White

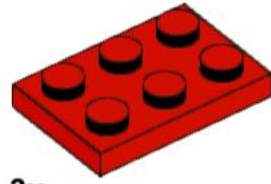


3x
3021
Red

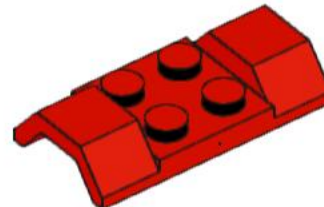


2x
3787
Red

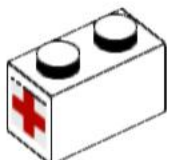

1x
3004pb109
White



1x
3023
Red

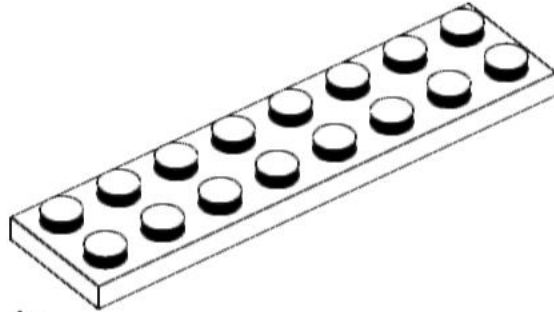

1x
3034
White



1x
3626ap01
Yellow