



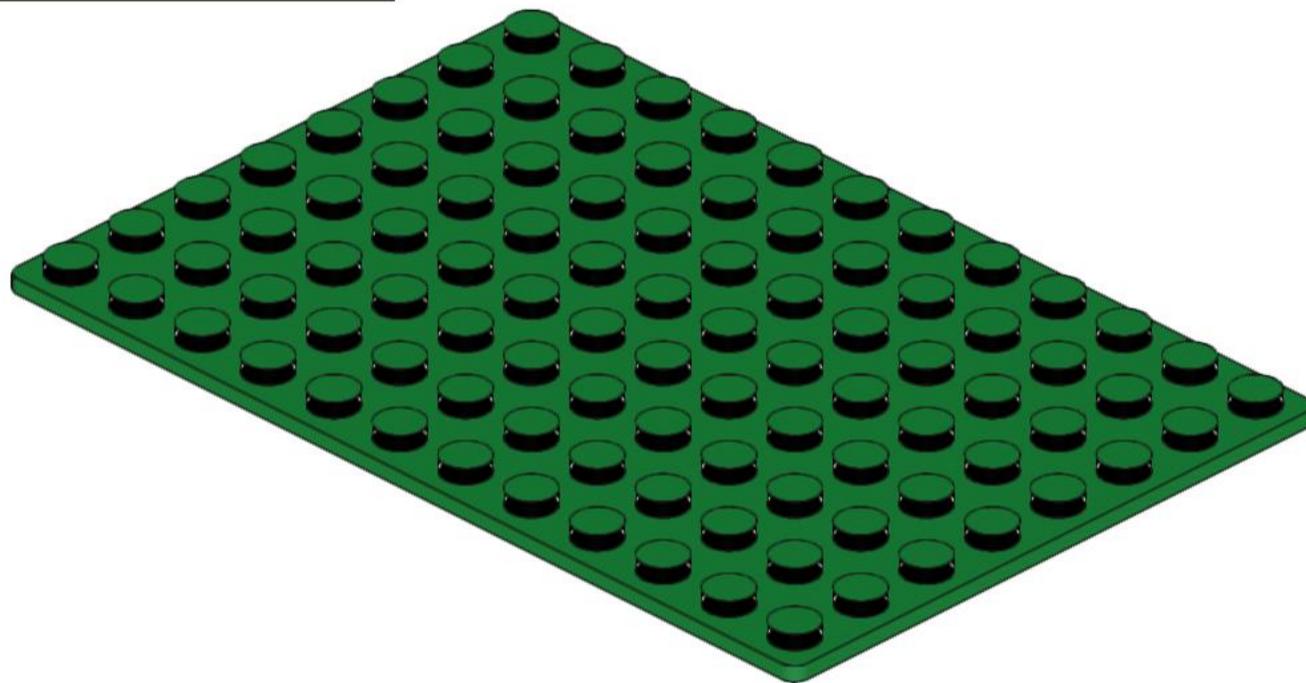



608-1

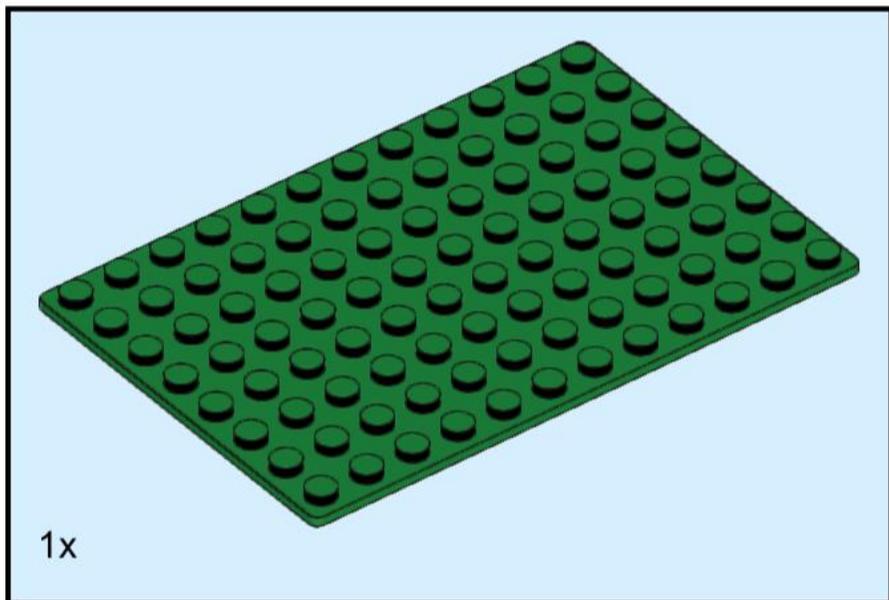



1





2

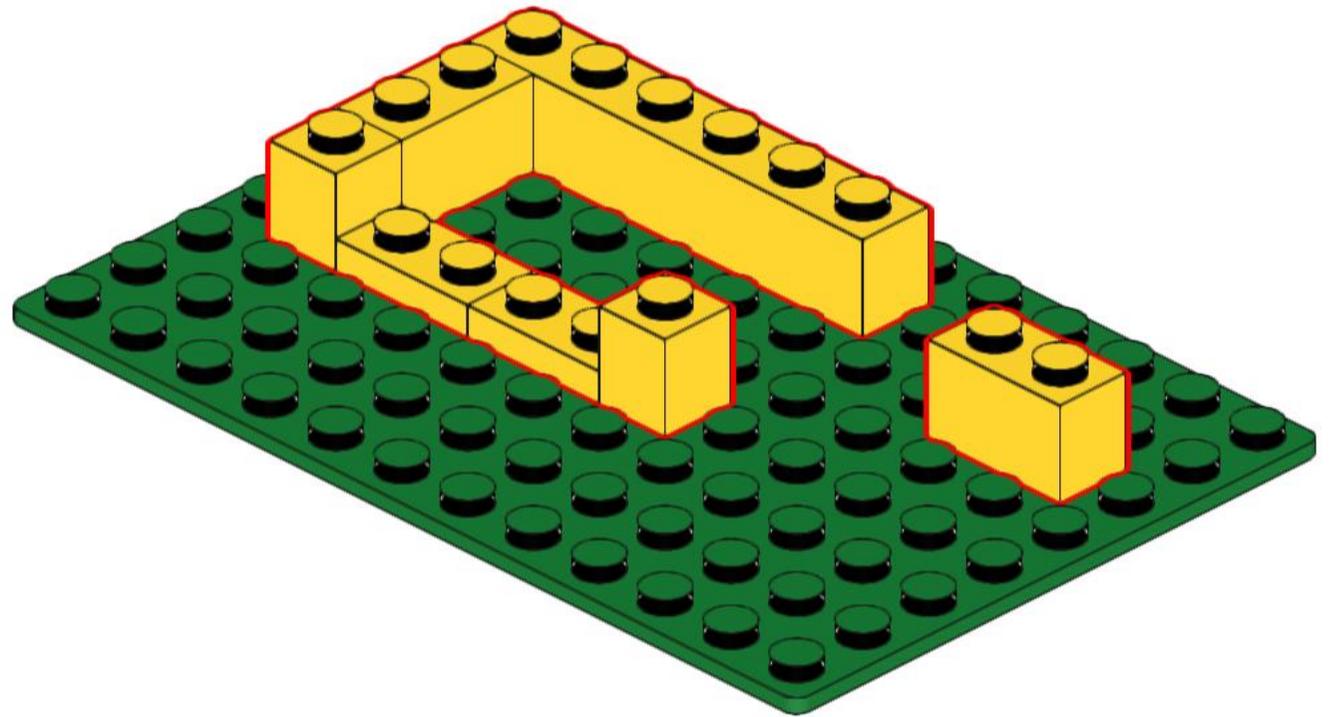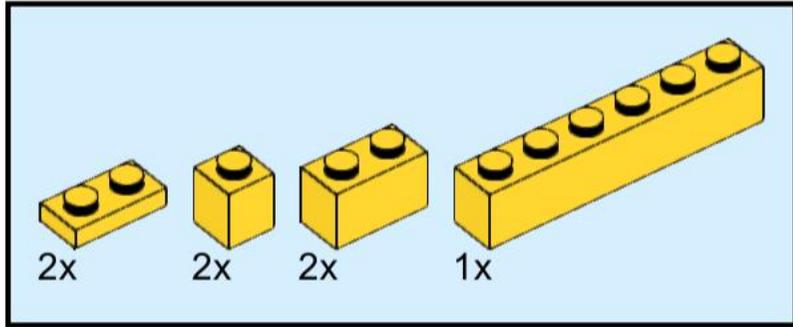



3

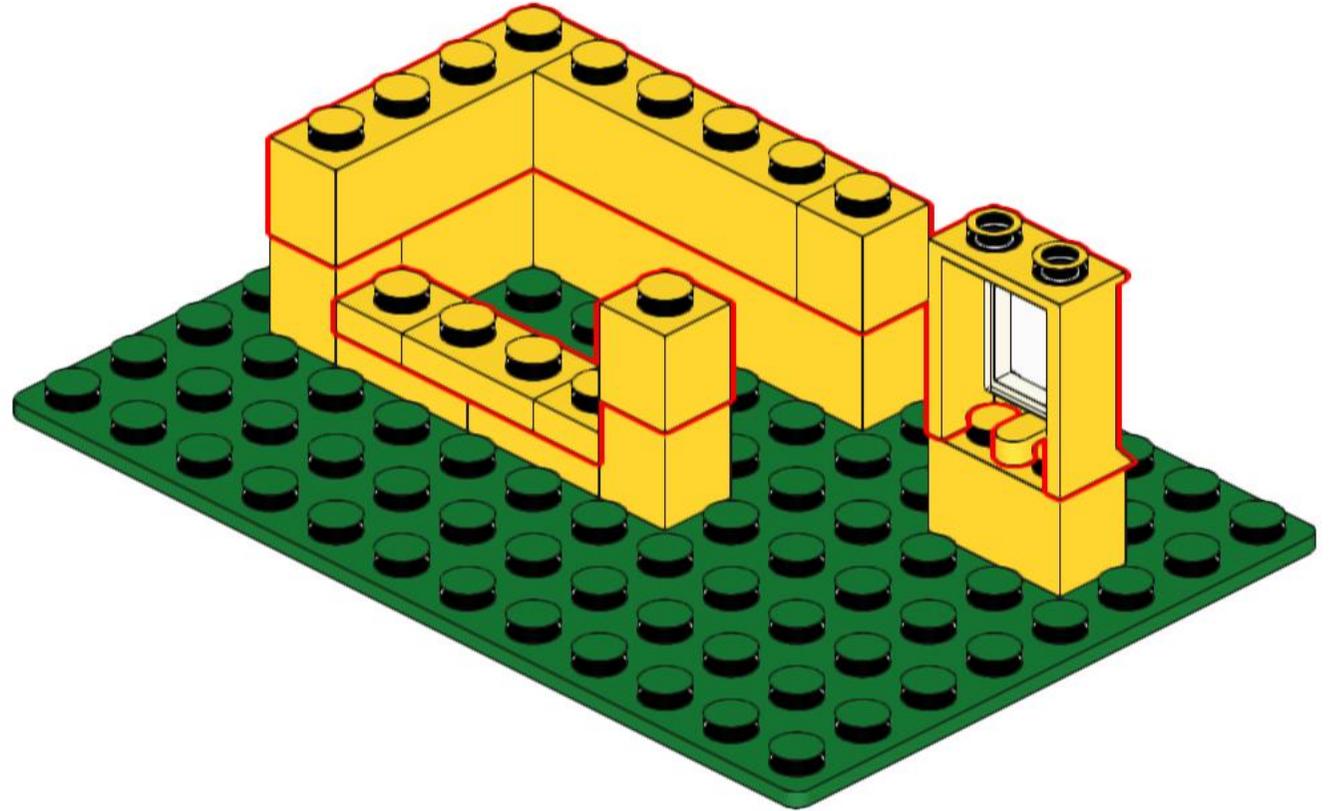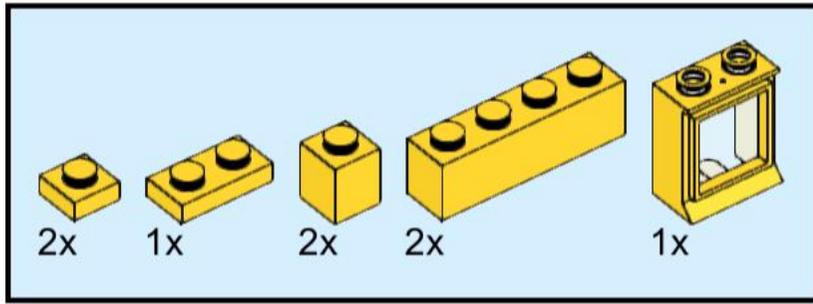



4

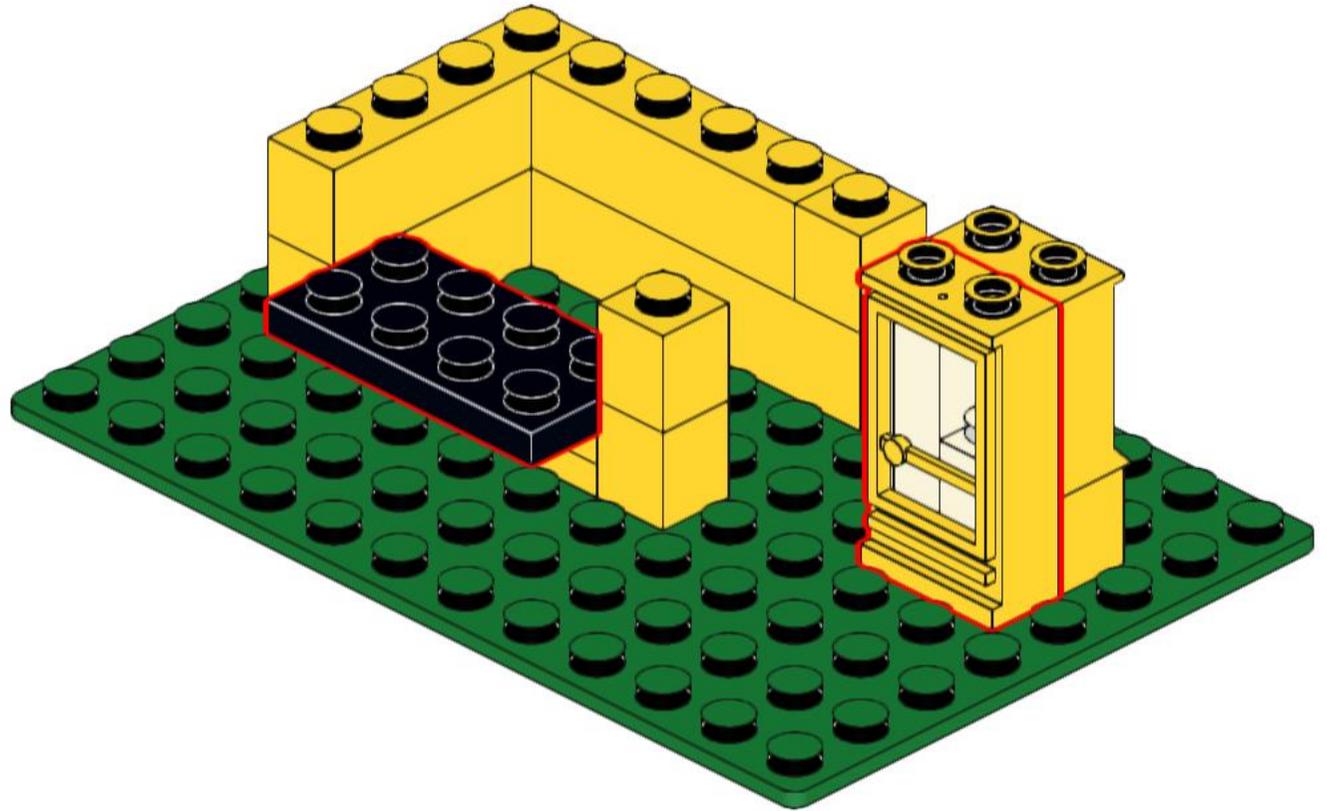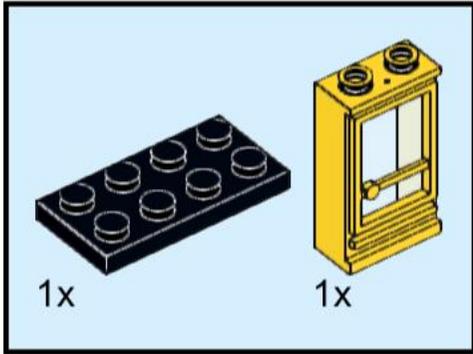


6

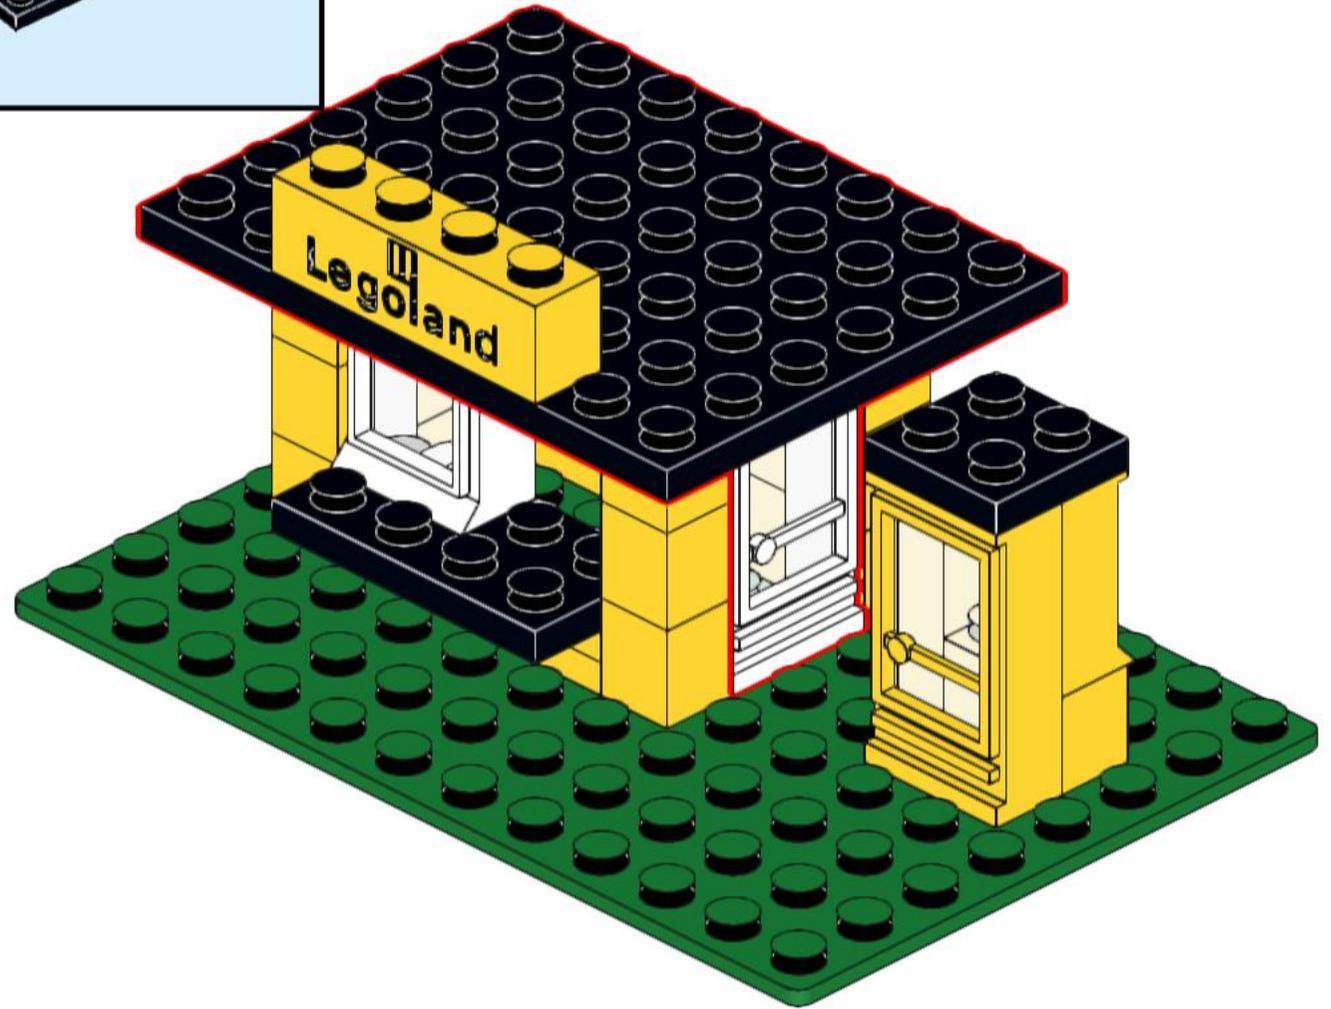
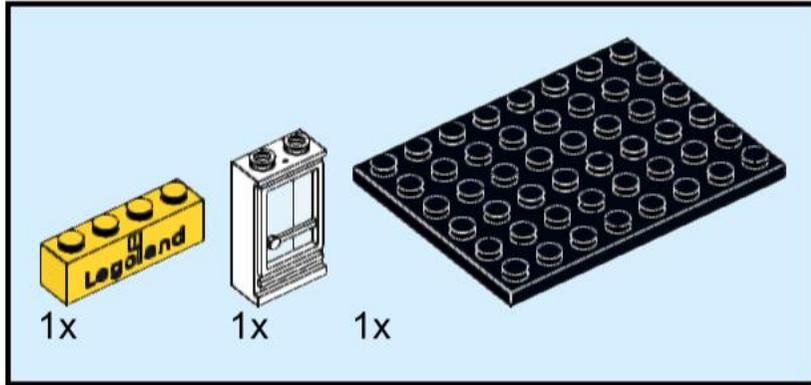


7

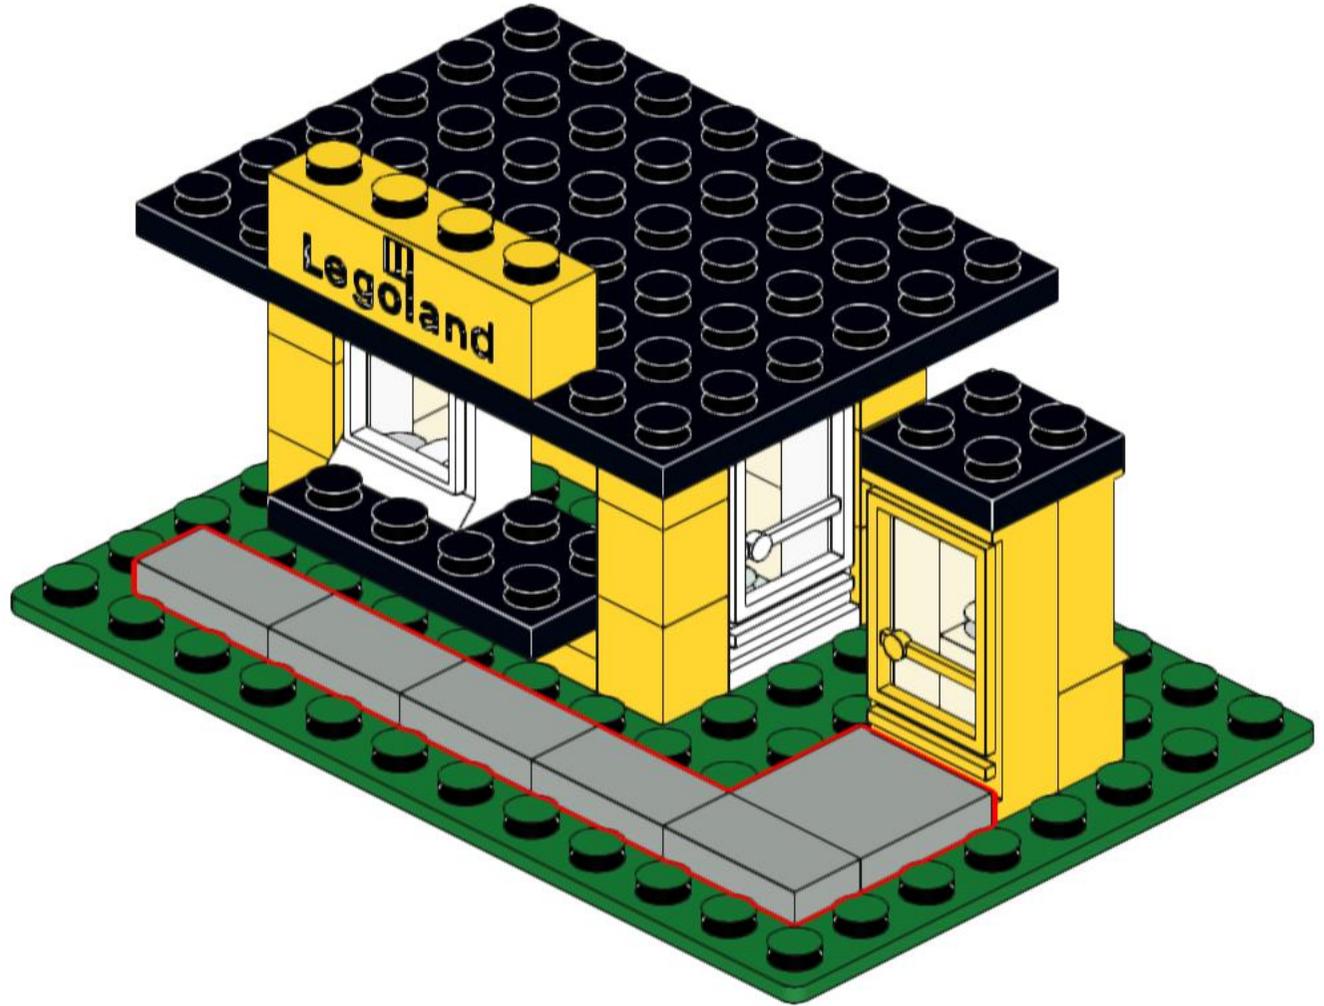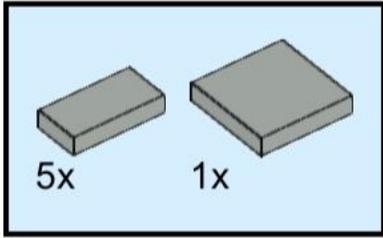


8

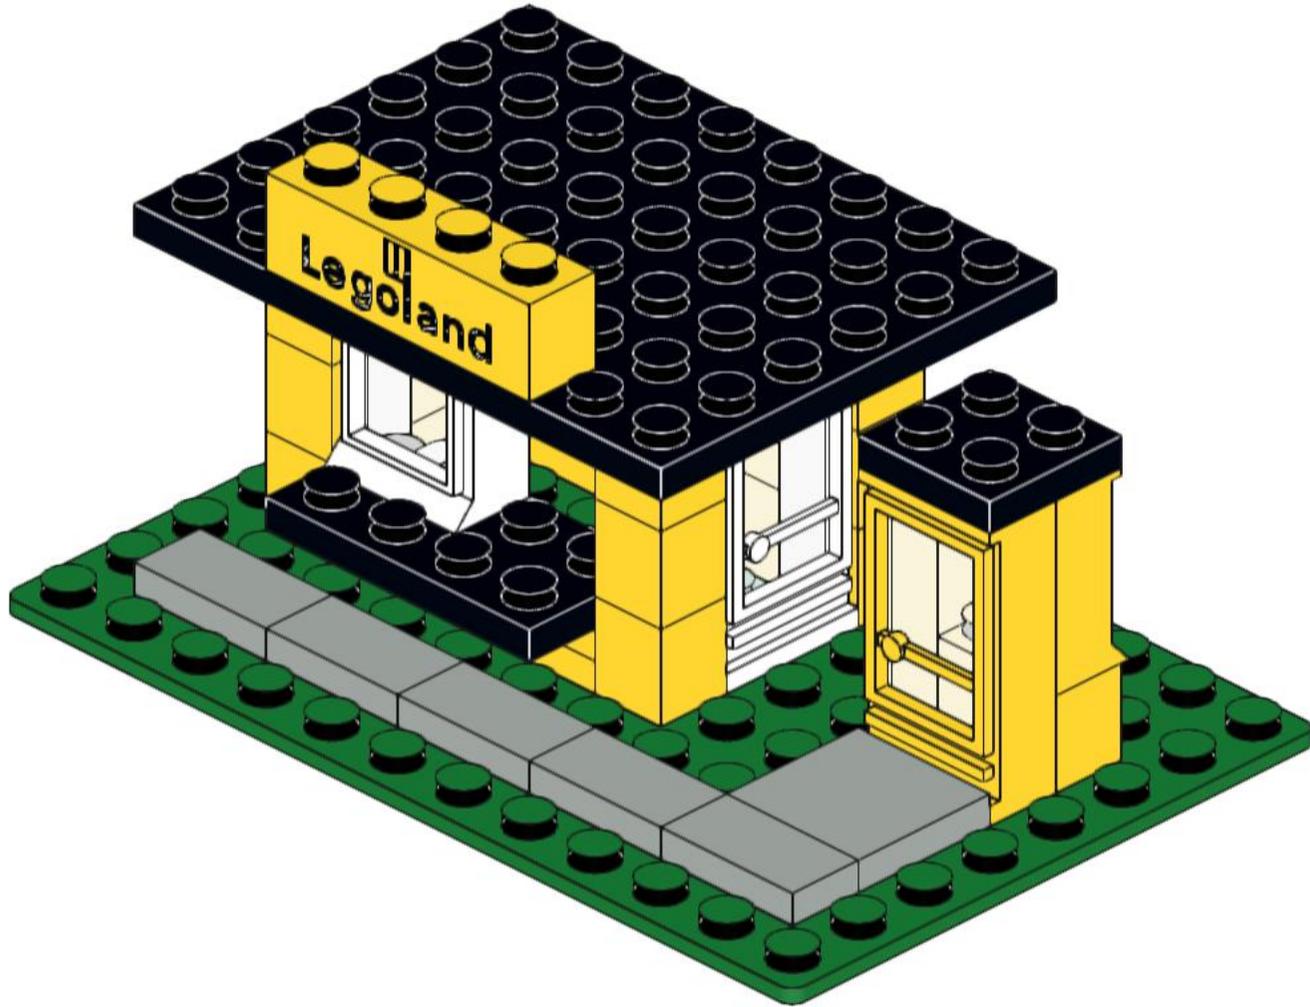


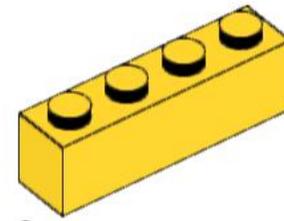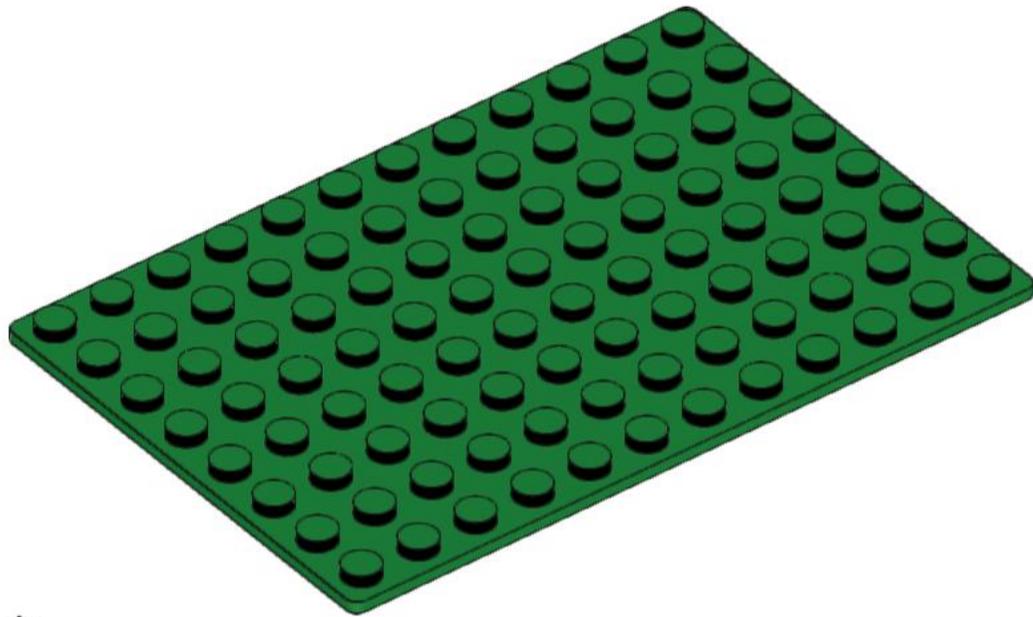


2x
3010
Yellow

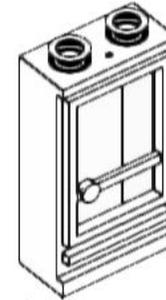

1x
33bc01
White

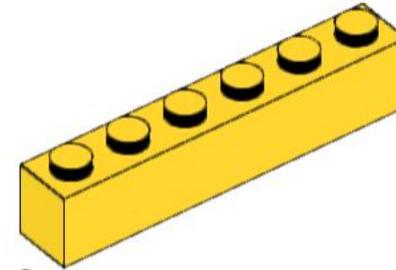


2x
3009
Yellow

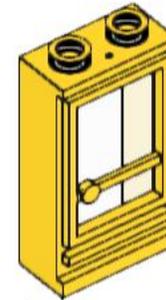


1x
33bc01
Yellow


1x
bb0031
Green




6x
3005
Yellow

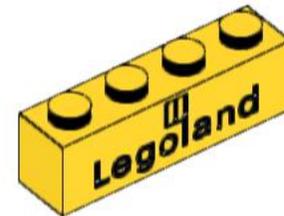


1x
3010p30
Yellow



2x
3024
Yellow

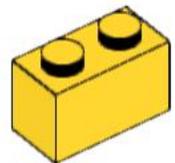

3x
3004
Yellow



3x
3023
Yellow




1x
3022
Black




1x
3020
Black




1x
3036
Black

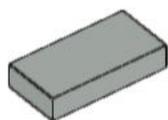


5x
3069a
Light Gray

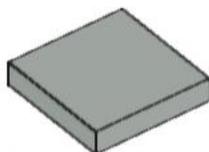

1x
3068a
Light Gray

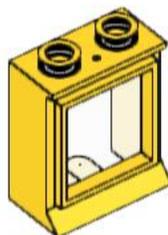

1x
7026bc01
Yellow

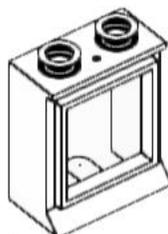

1x
7026bc01
White