



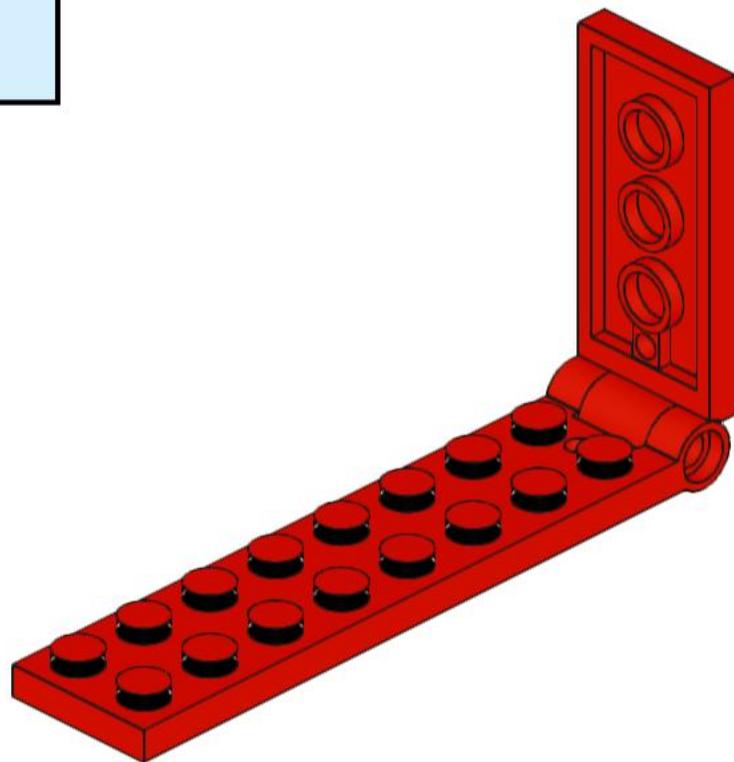



642-2

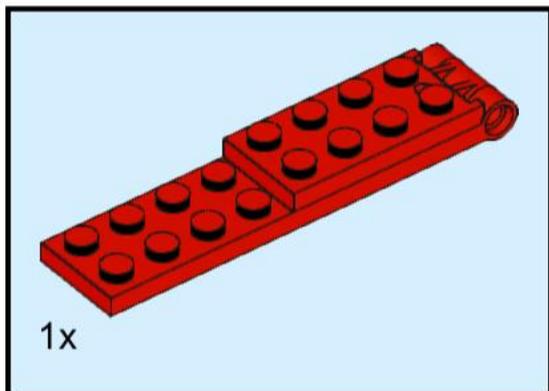



1





2

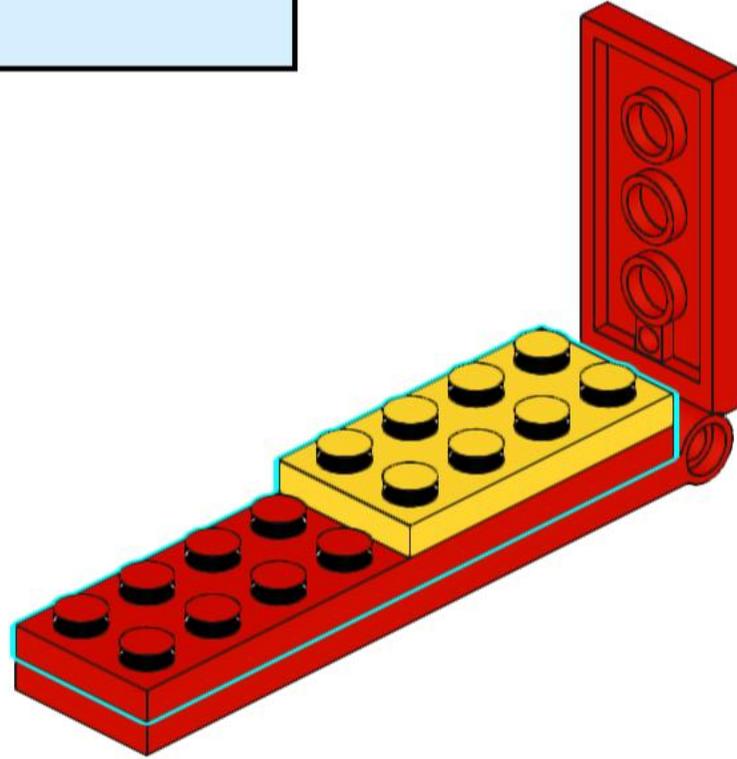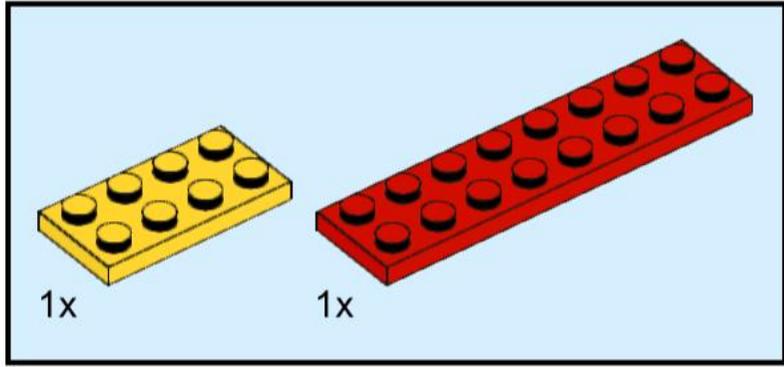



3

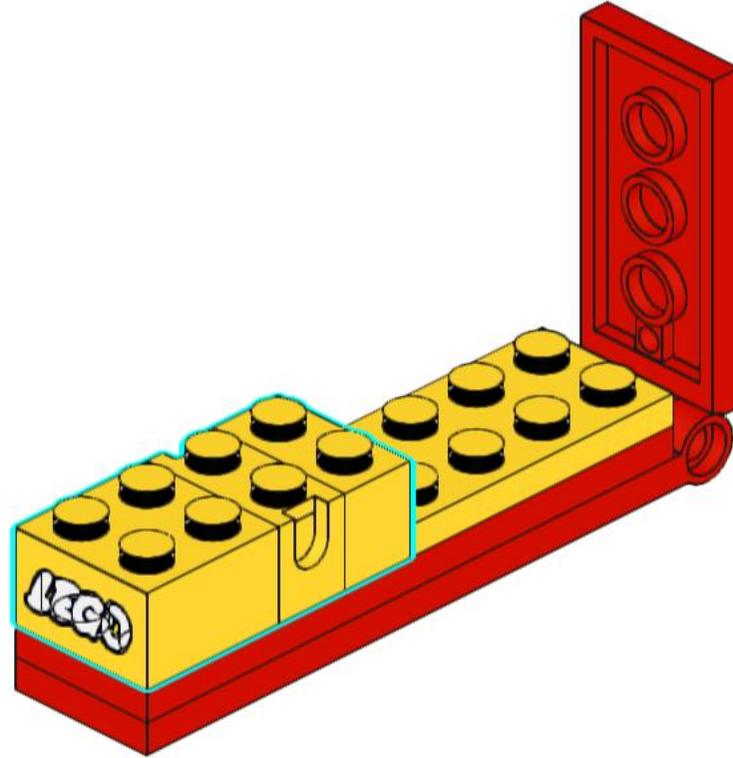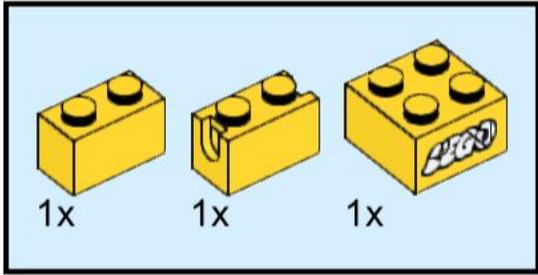



4

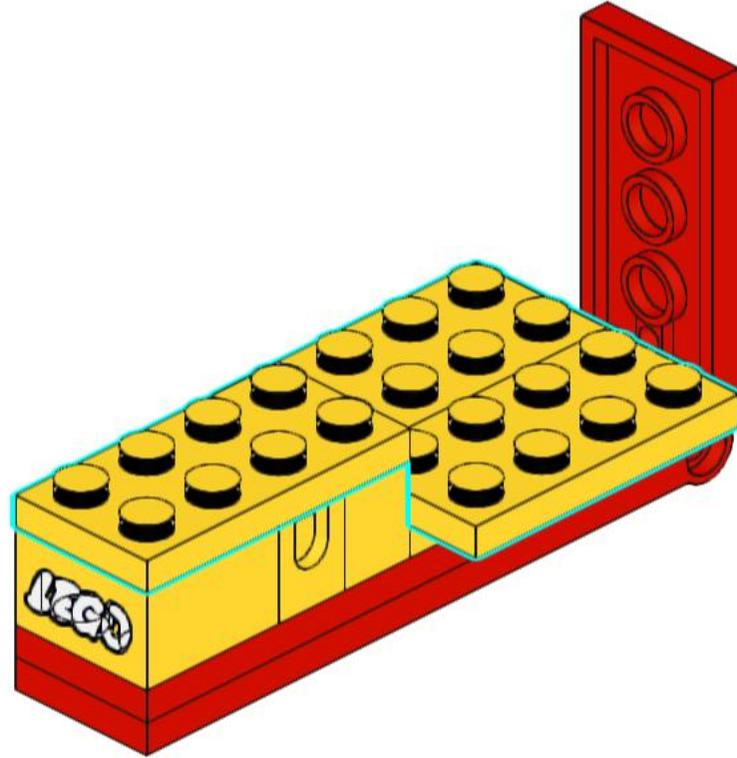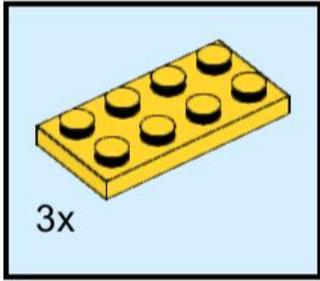

5


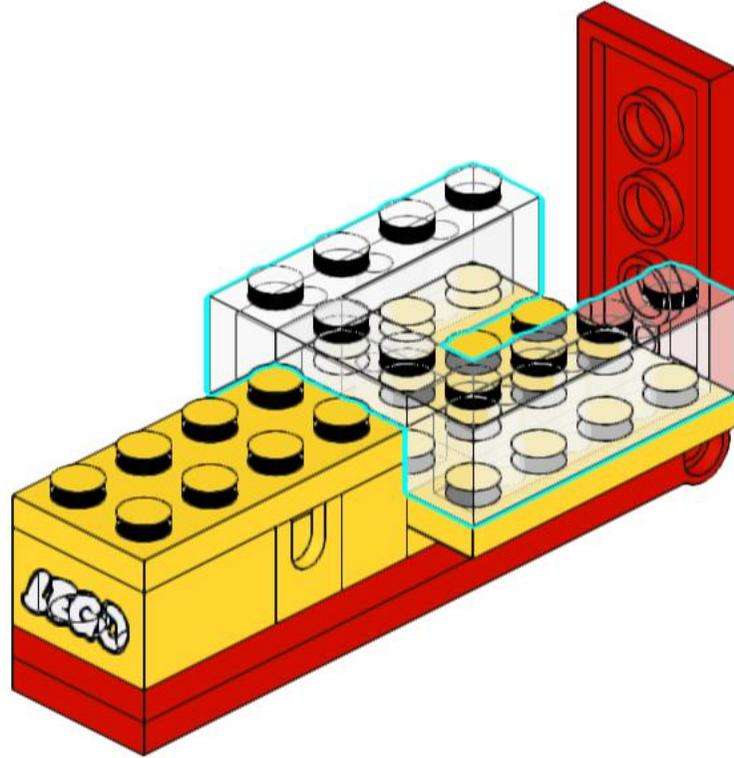
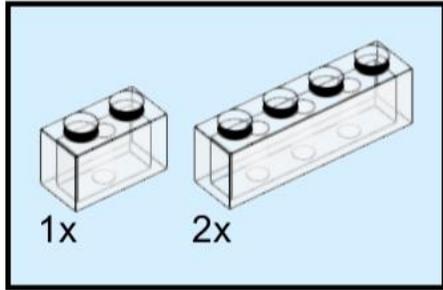


6

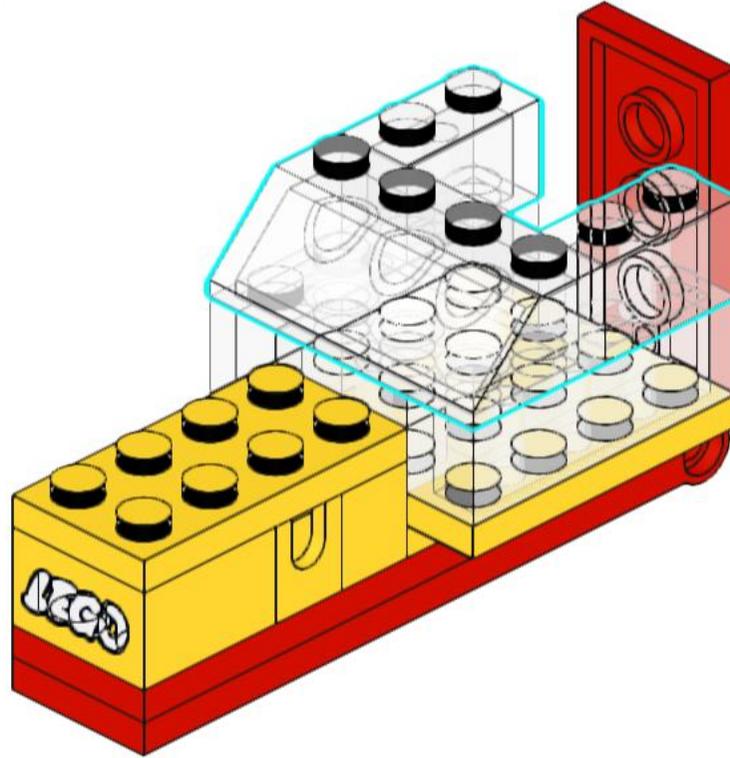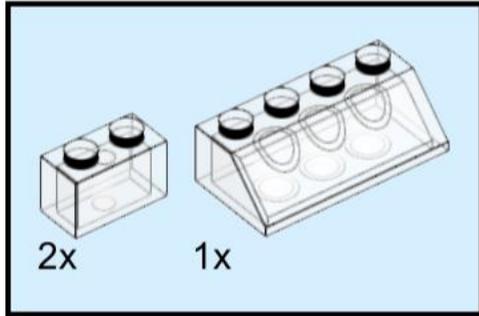





8

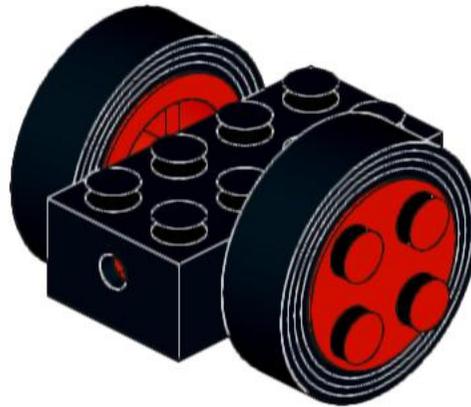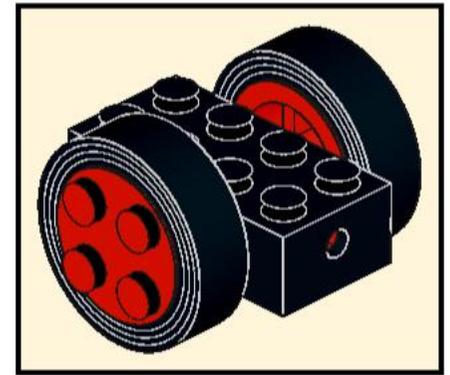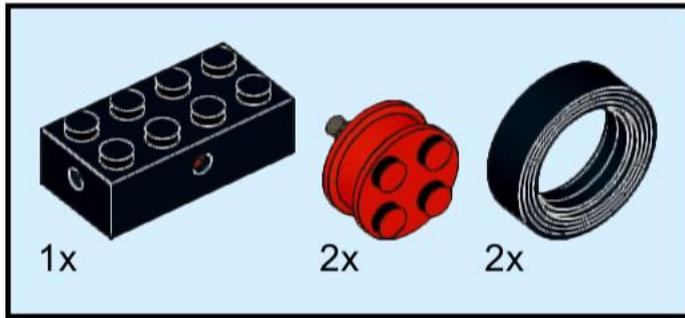



9



# 10

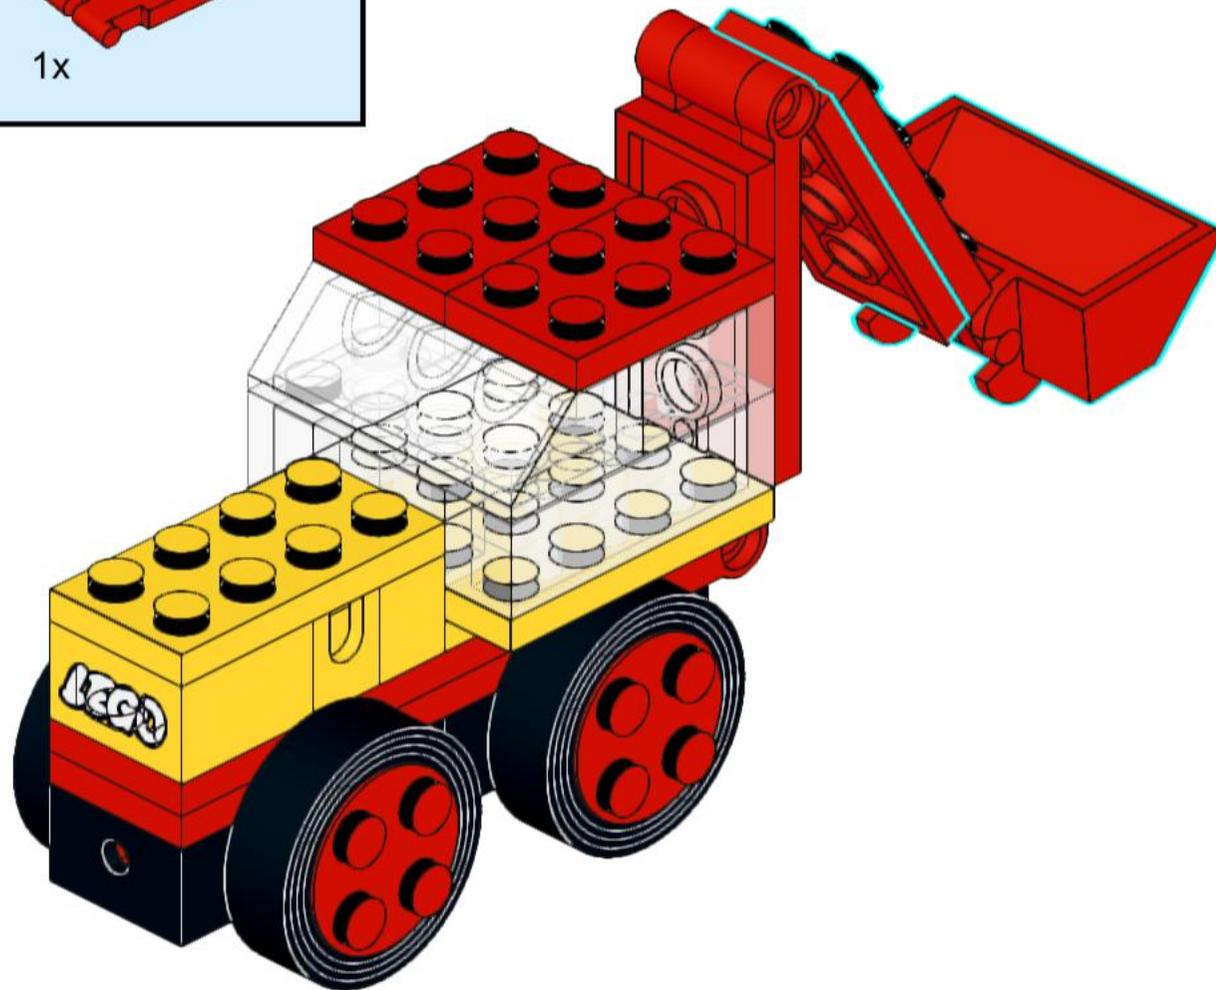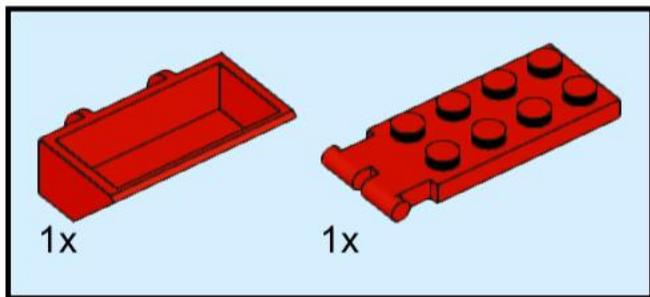

# 11

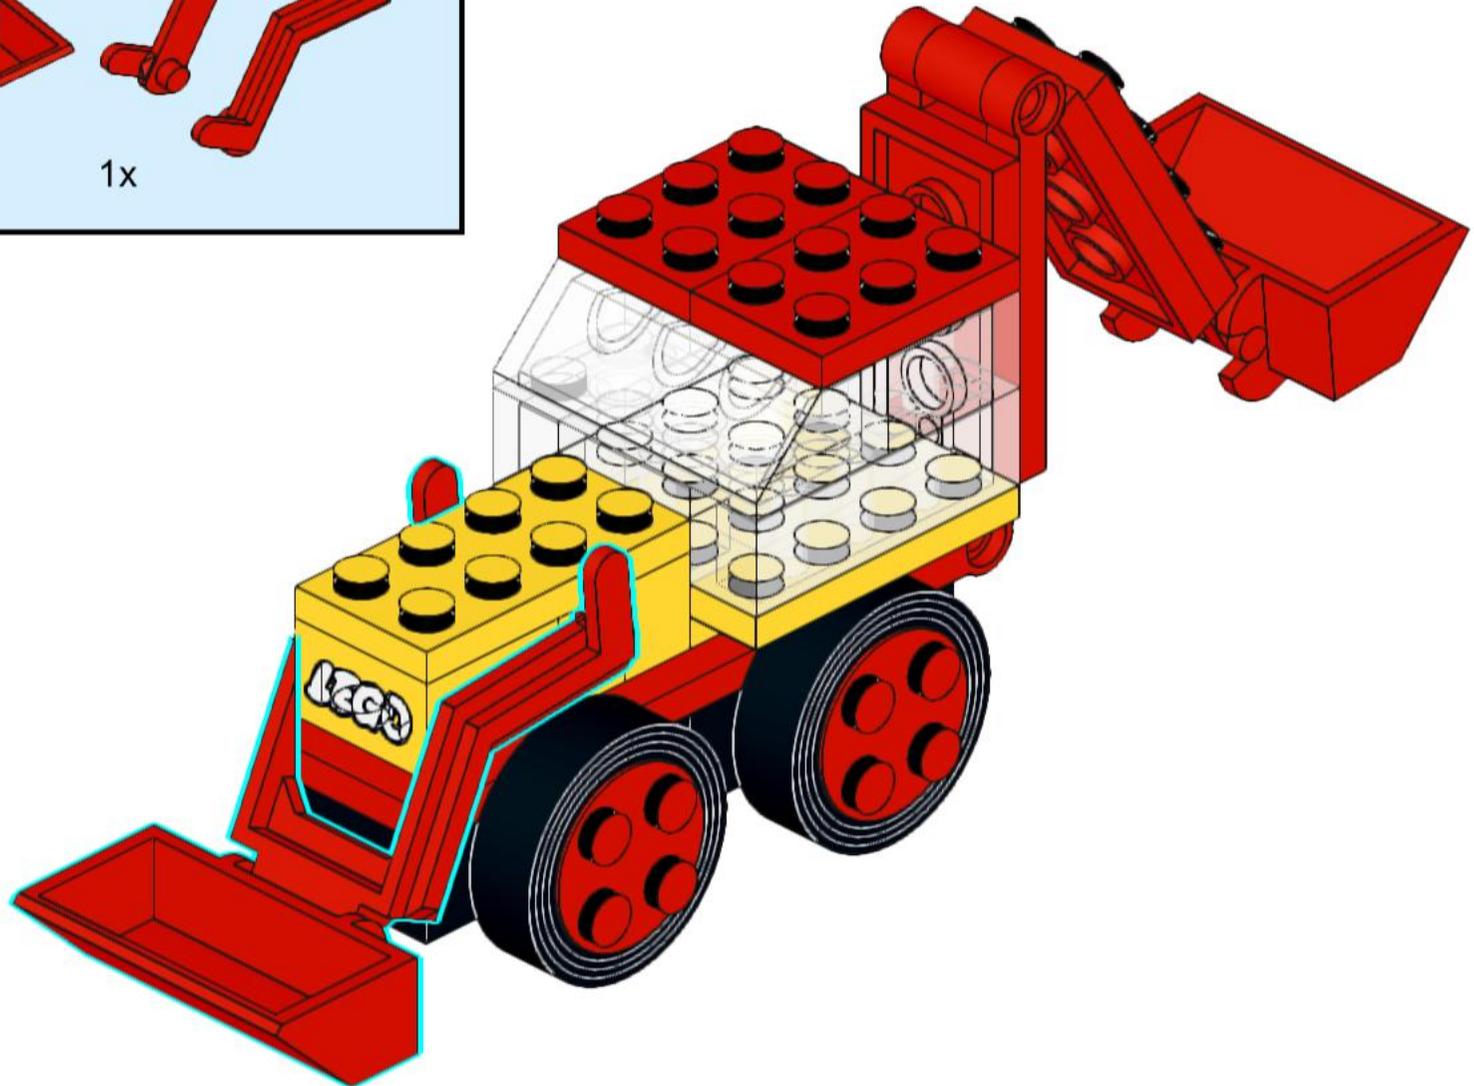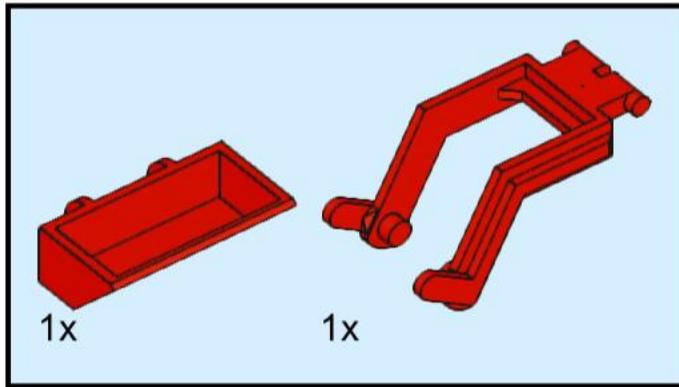


# 12







1x  
3062a  
Black

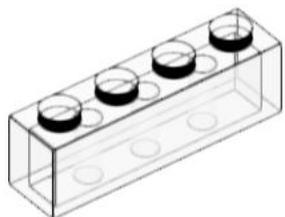


2x  
3010  
Trans-Clear

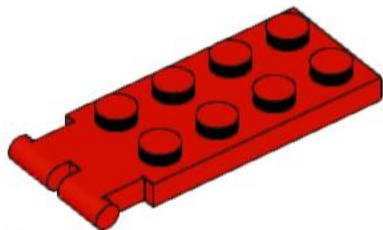

1x  
3315  
Red

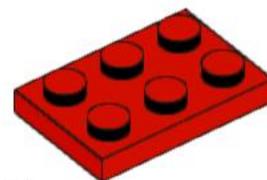


2x  
3021  
Red

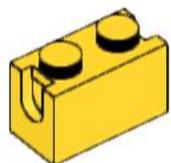


1x  
3317  
Yellow




2x  
7049b  
Black

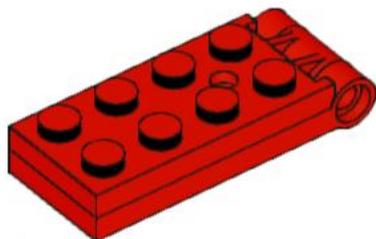


1x  
3149c01  
Red

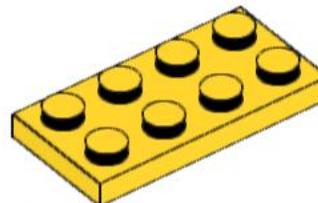


4x  
3020  
Yellow

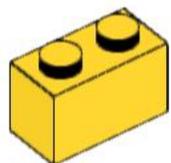


1x  
3004  
Yellow

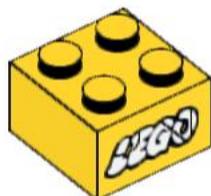


1x  
3003pb008  
Yellow

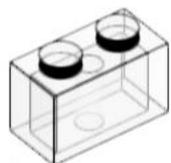


3x  
3004  
Trans-Clear

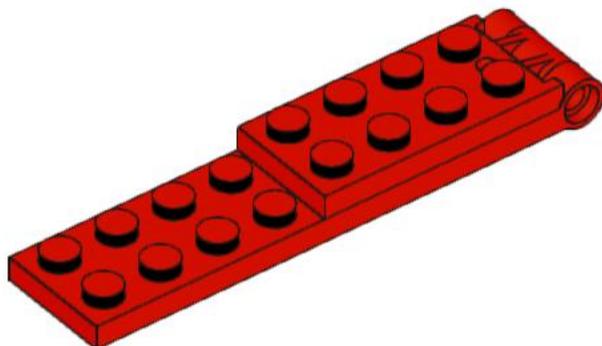


1x  
3324c01  
Red

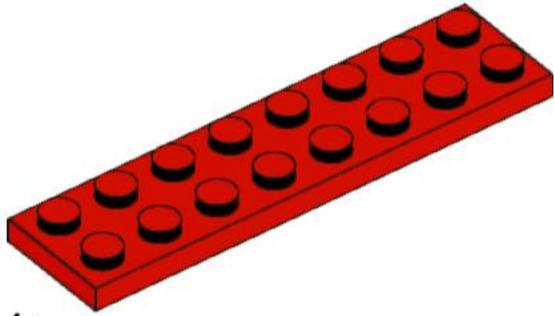

1x  
3034  
Red

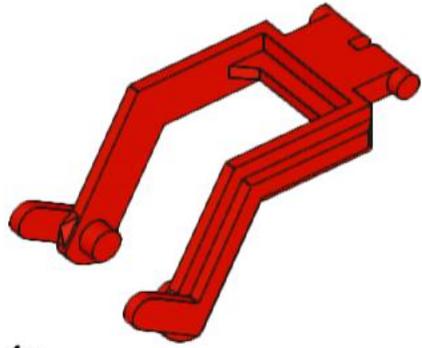


1x  
3314  
Red

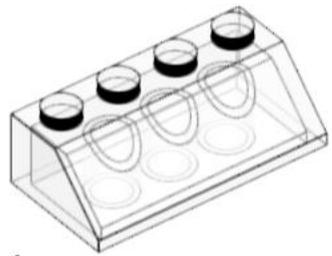

1x  
3037  
Trans-Clear



4x  
7039  
Red

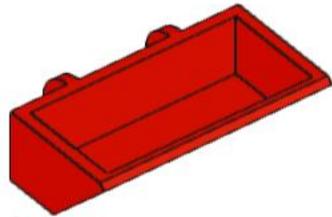

2x  
784  
Red



4x  
132old  
Black