




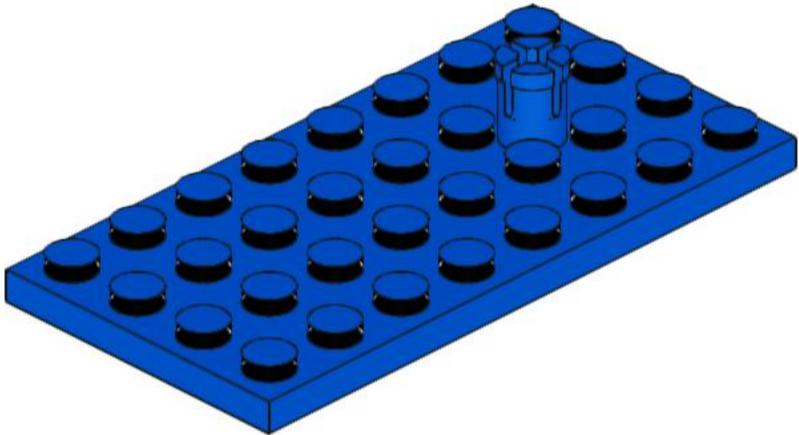



644-1

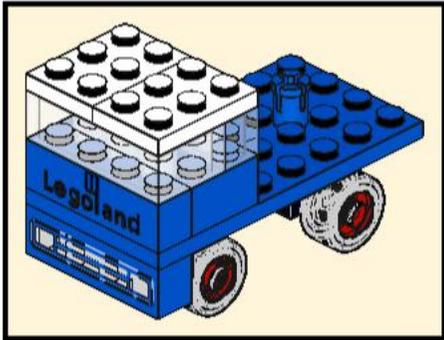



1

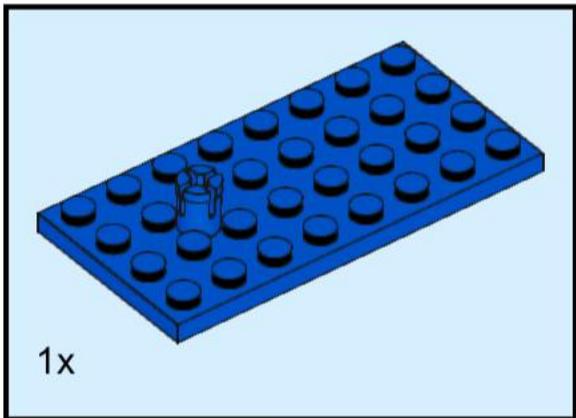


2

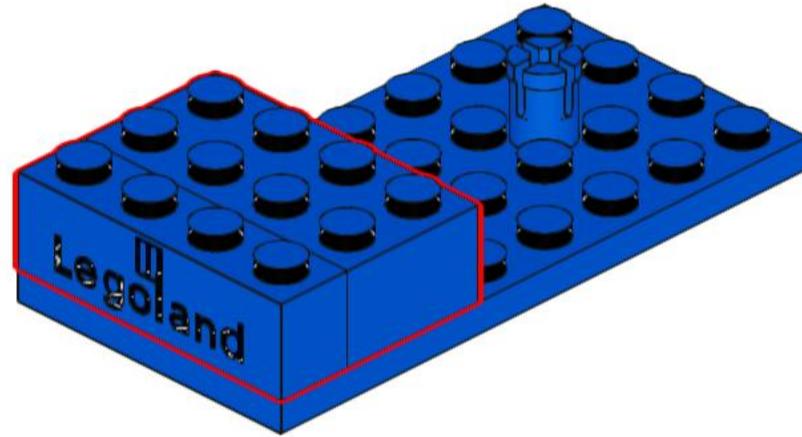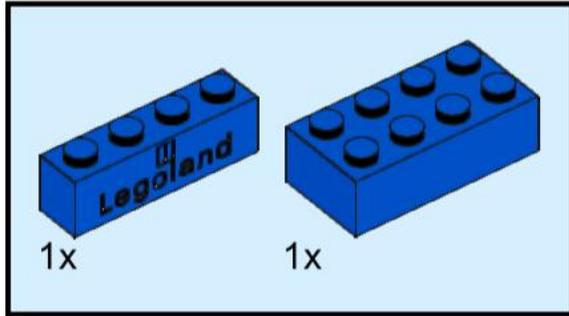




3

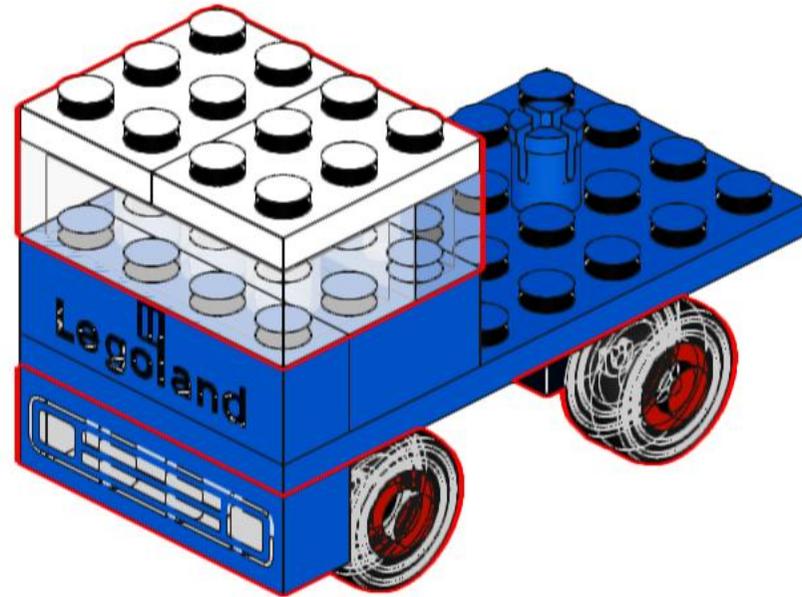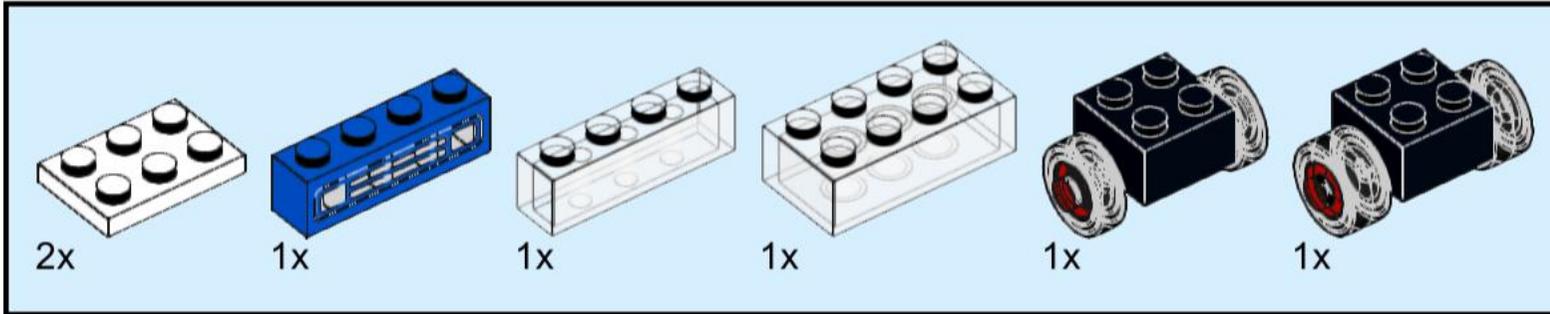



4

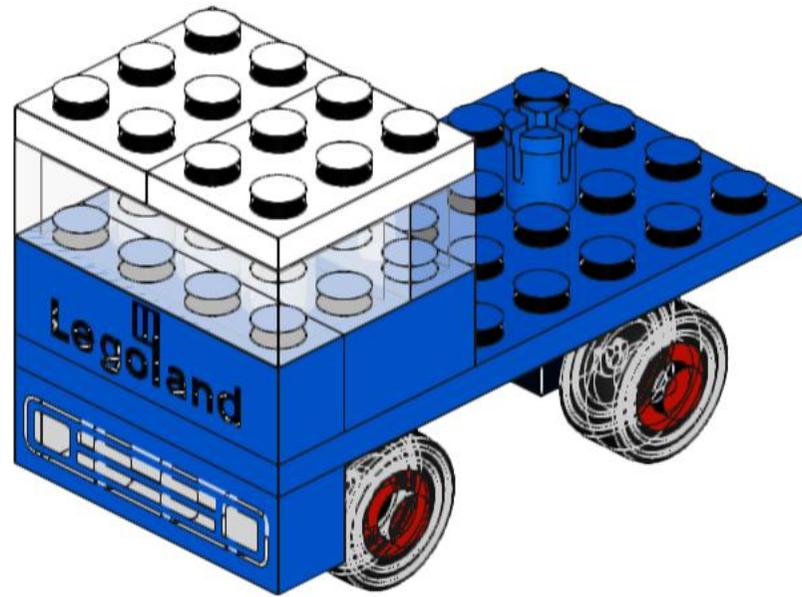



5

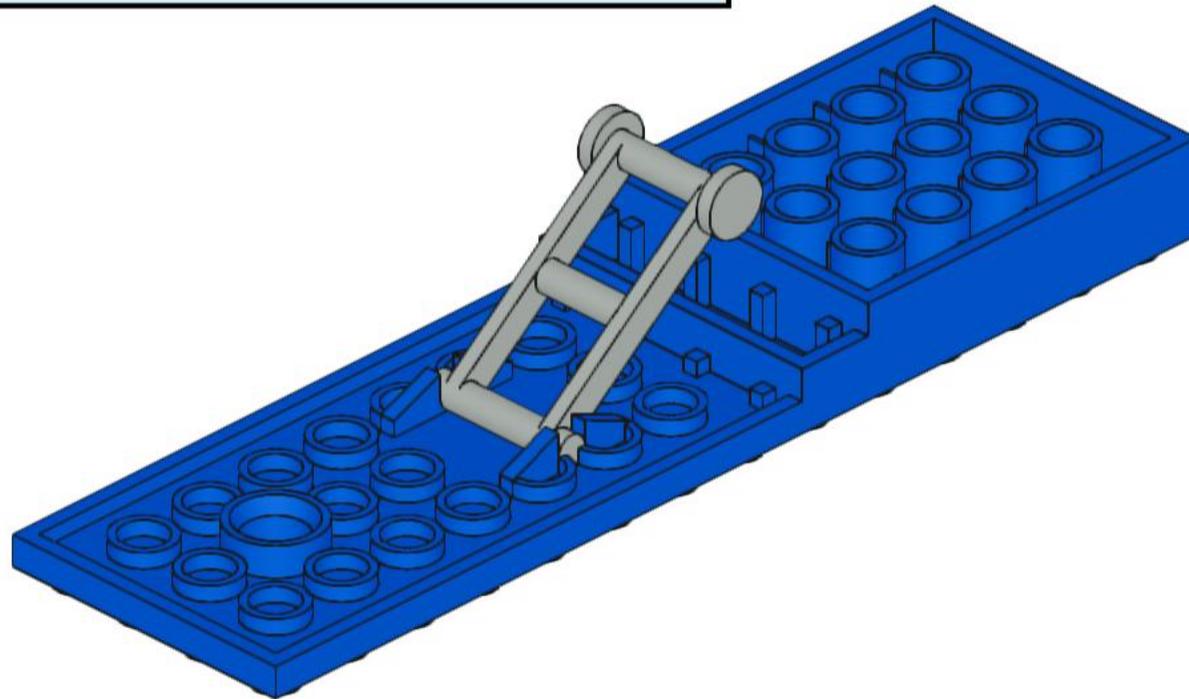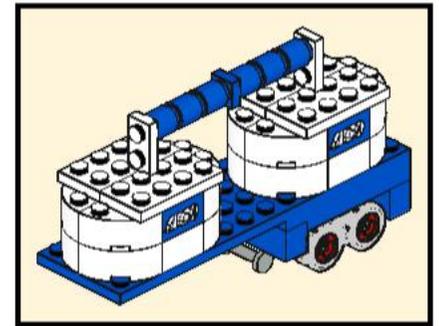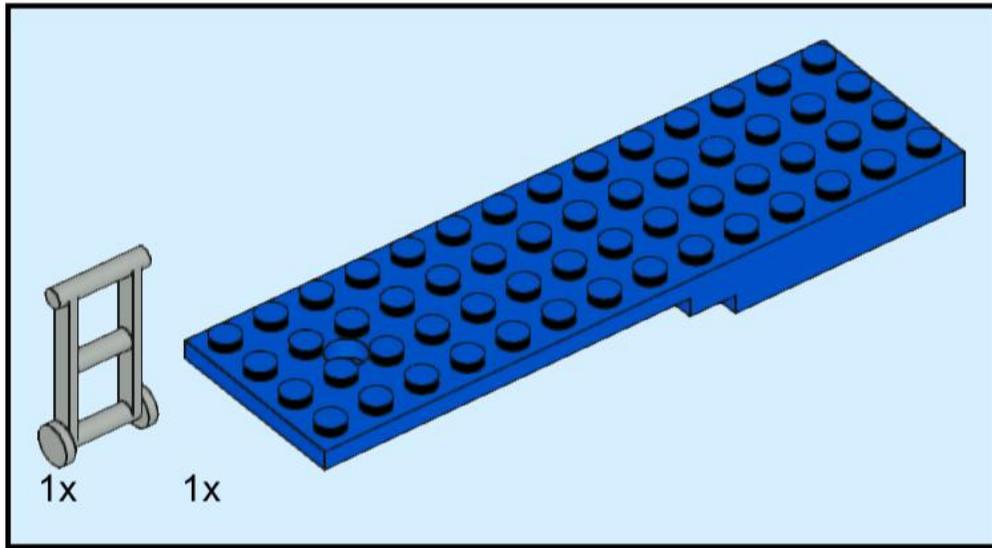



6

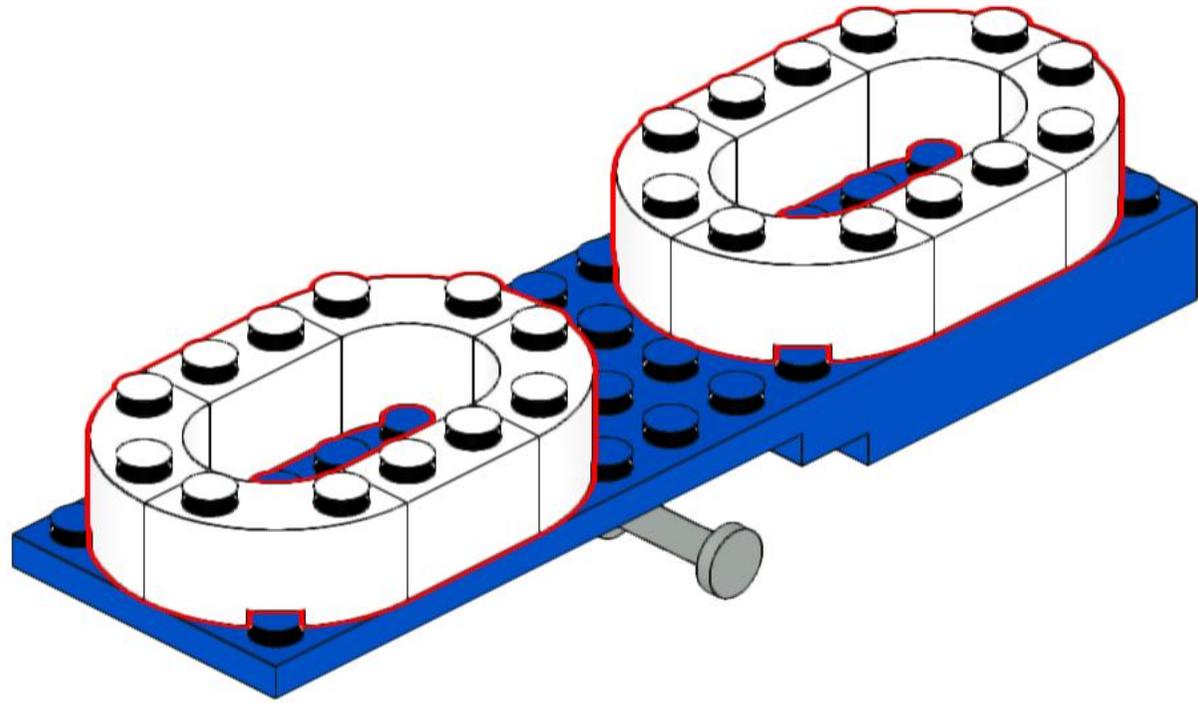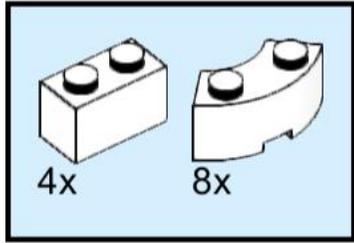




7

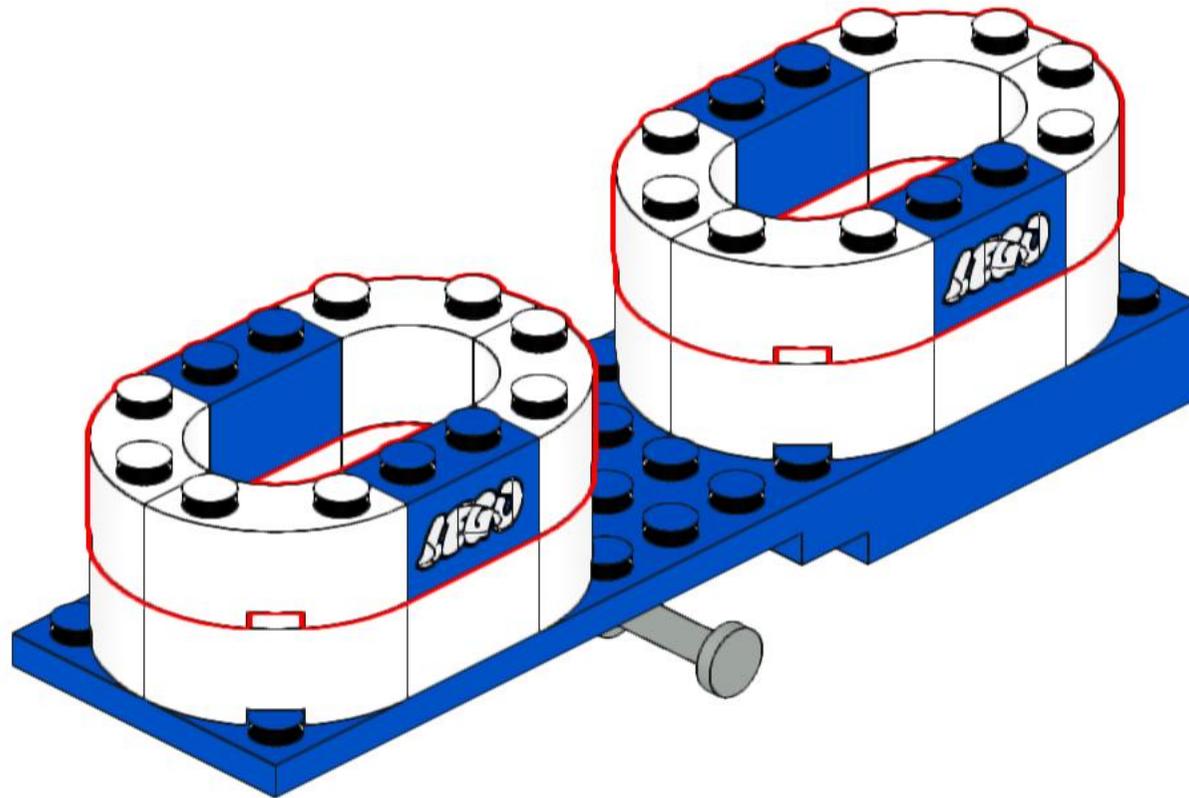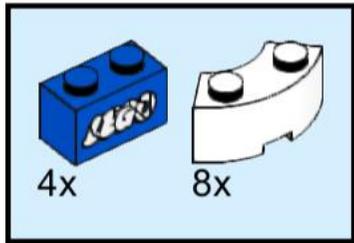


9

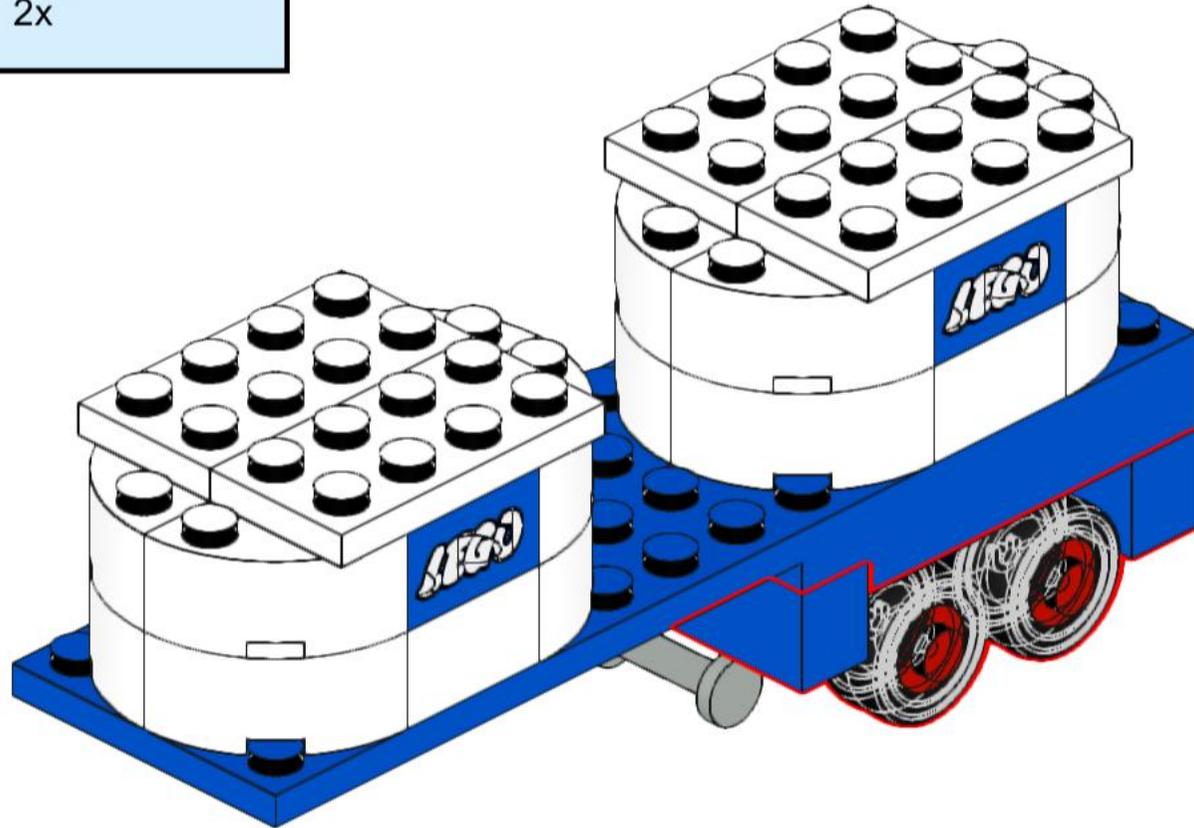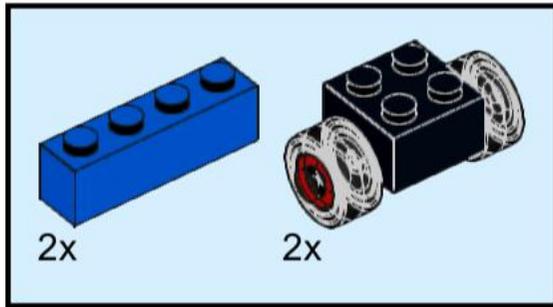

10

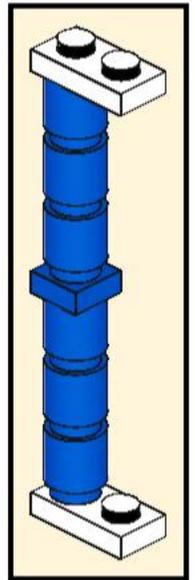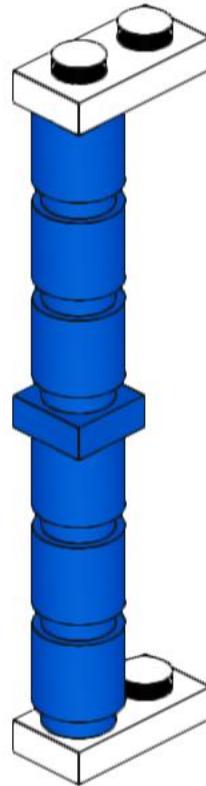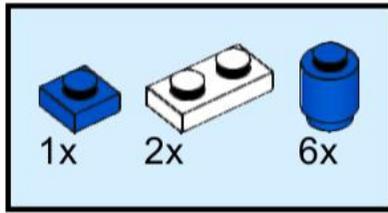


11

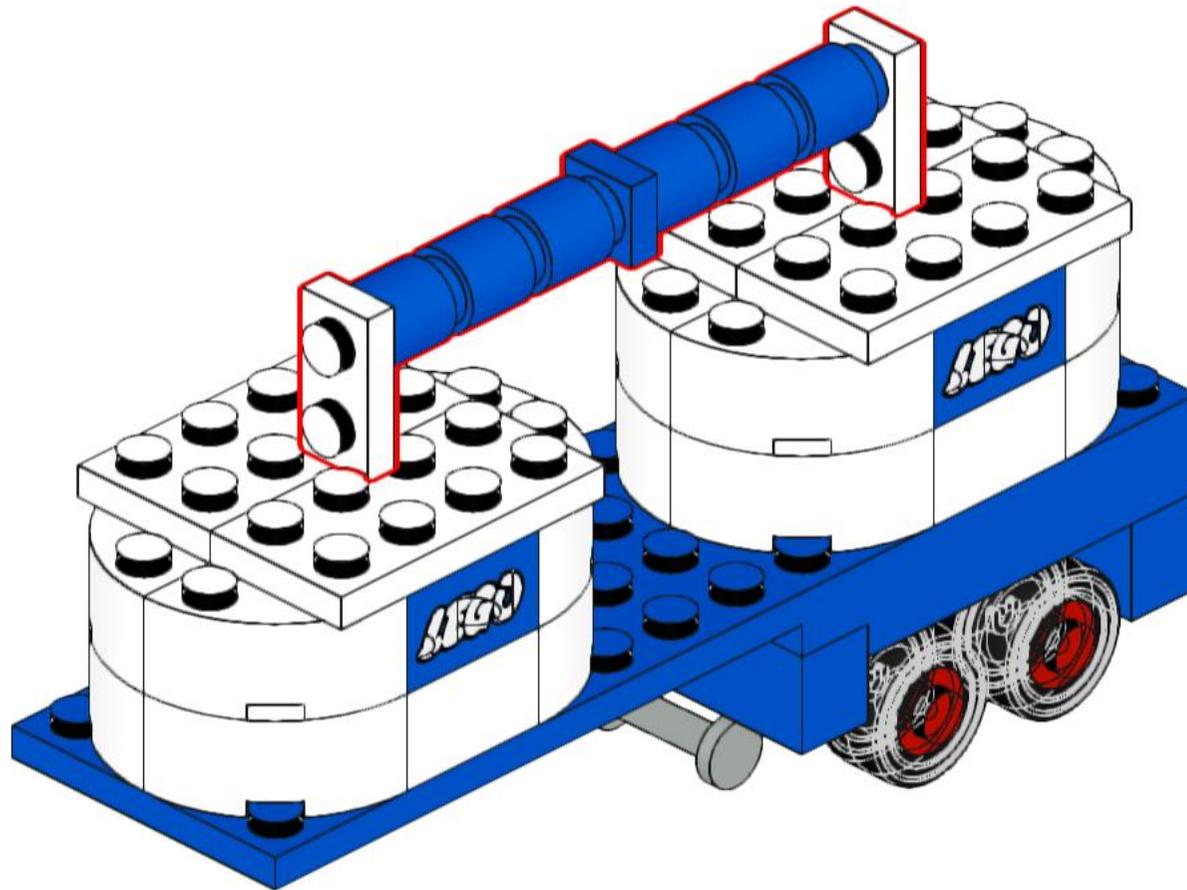





6x
3062a
Blue

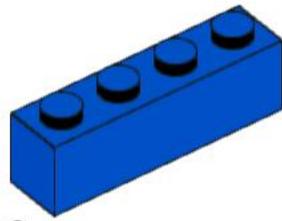


2x
3010
Blue

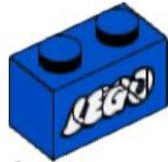


4x
3004p50
Blue

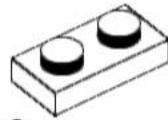


2x
3023
White

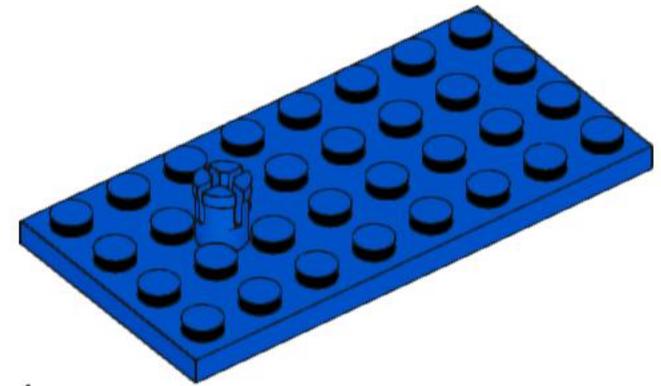


1x
967
Blue

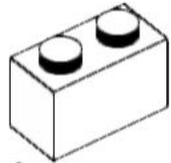


4x
3004
White

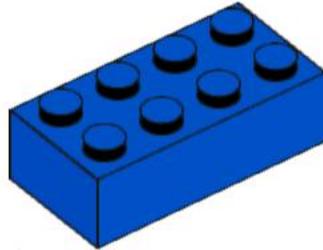

1x
3001
Blue

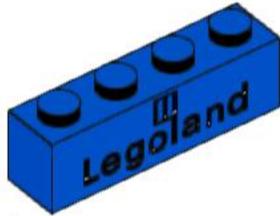


1x
3010p30
Blue

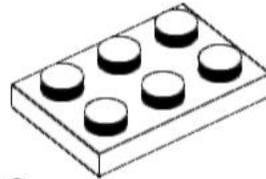


2x
3021
White




16x
3063
White

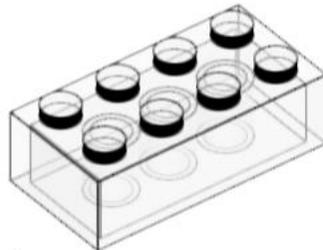


1x
3001
Trans-Clear

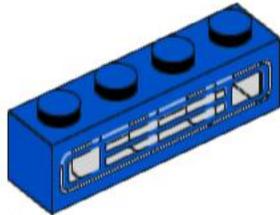


1x
3010pb035s
Blue

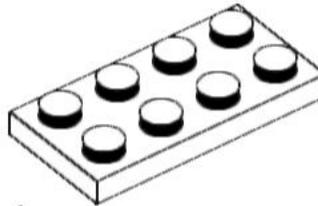


4x
3020
White

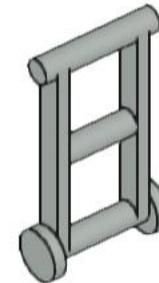



1x
969
Light Gray

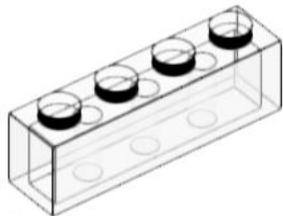

1x
3010
Trans-Clear




1x
3024
Blue

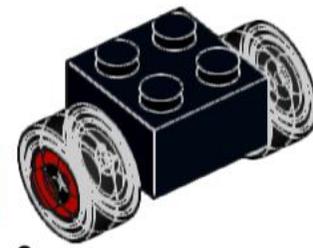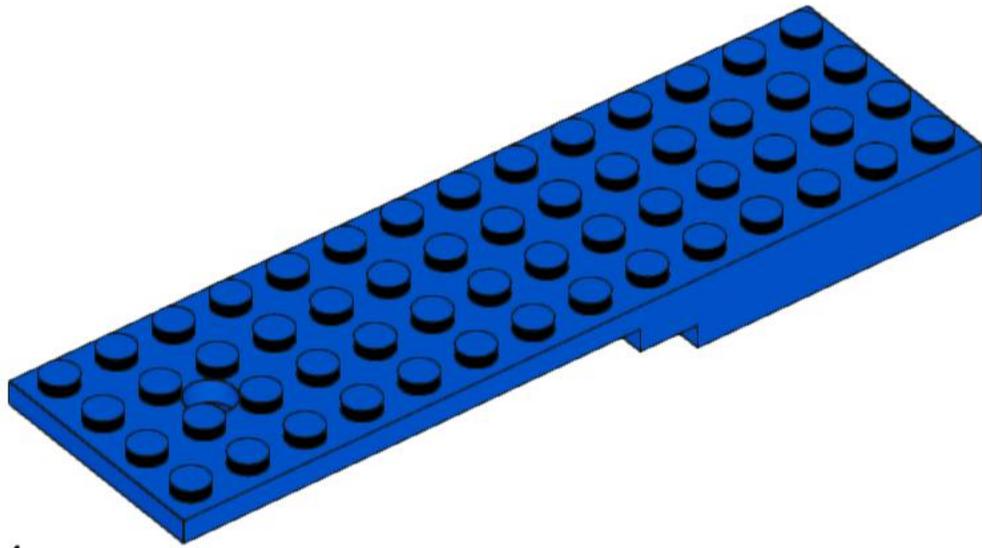

3x
3137c02assy1
Black

1x
968
Blue

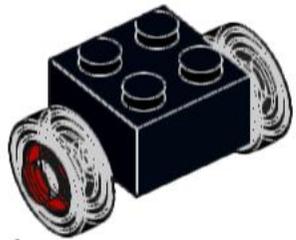

1x
3137c01assy1
Black