




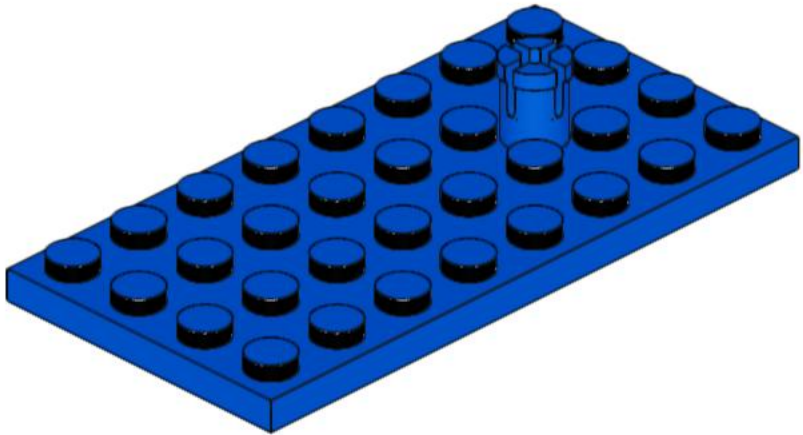



655-1

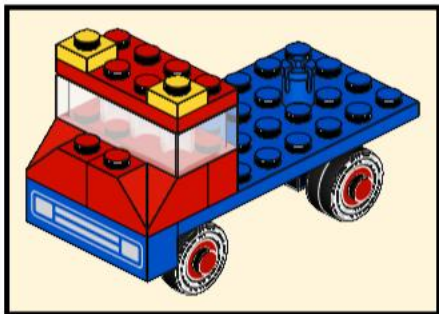



1

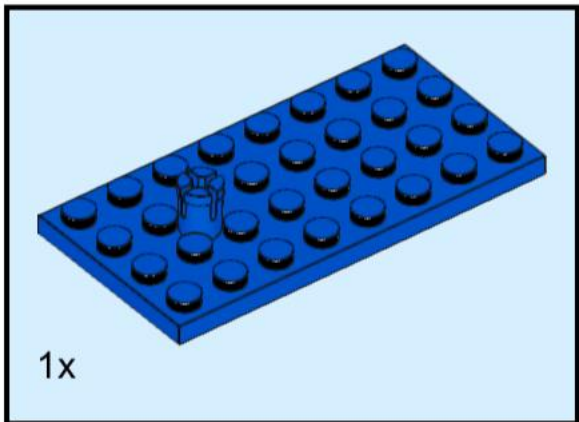



2

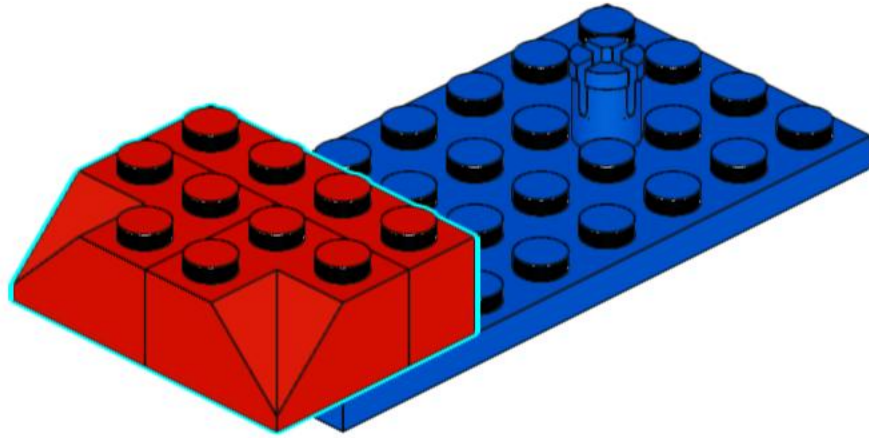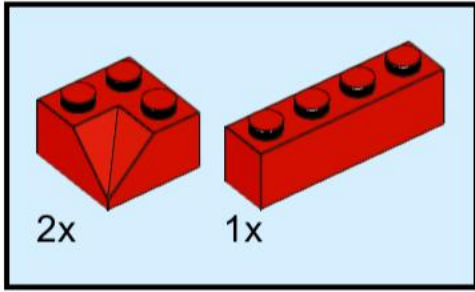



3

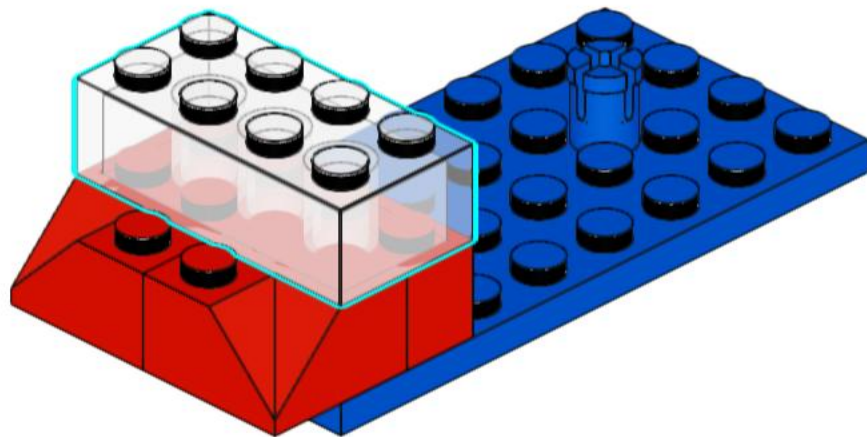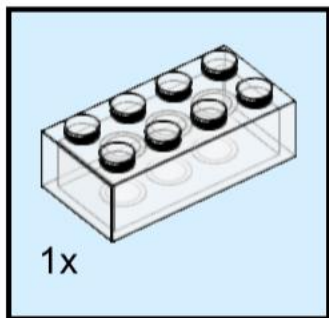


4

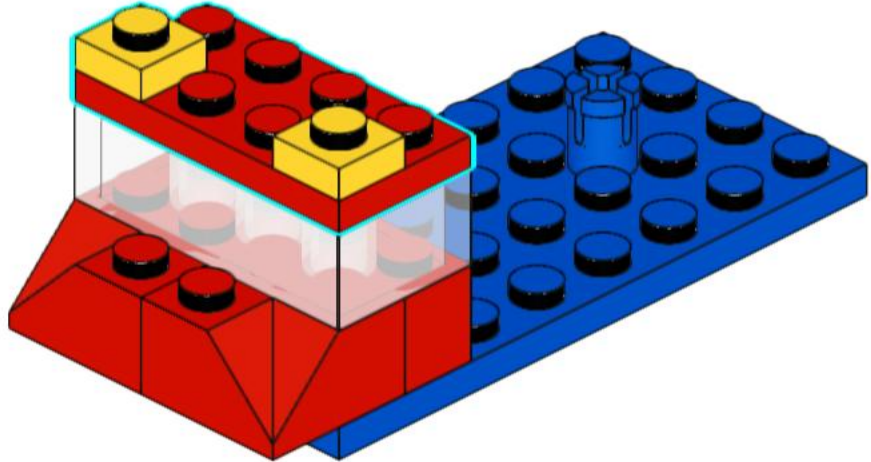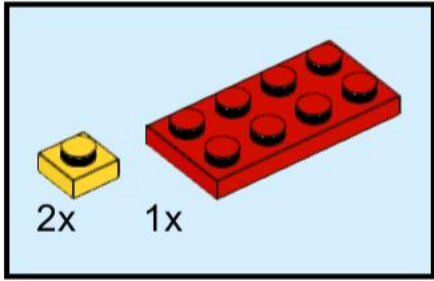




5

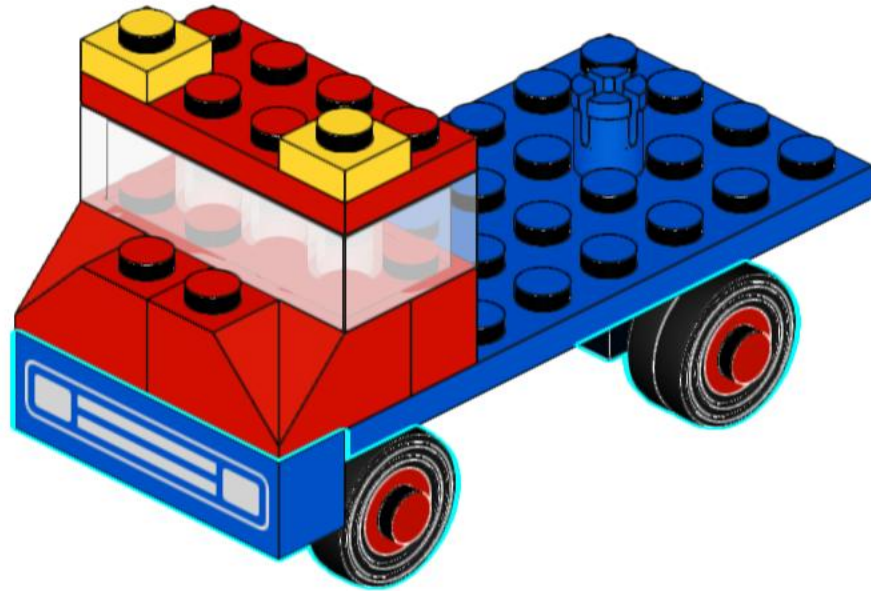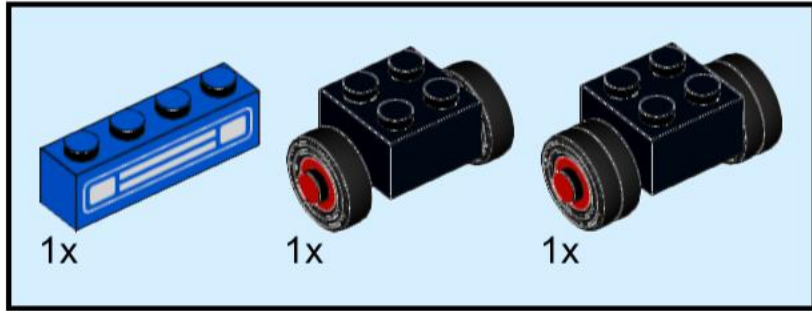



6

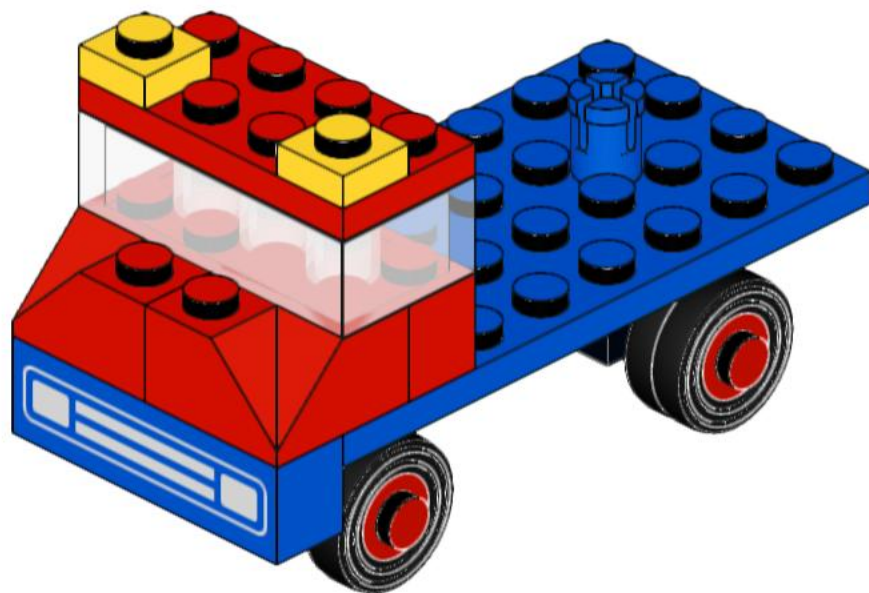



7

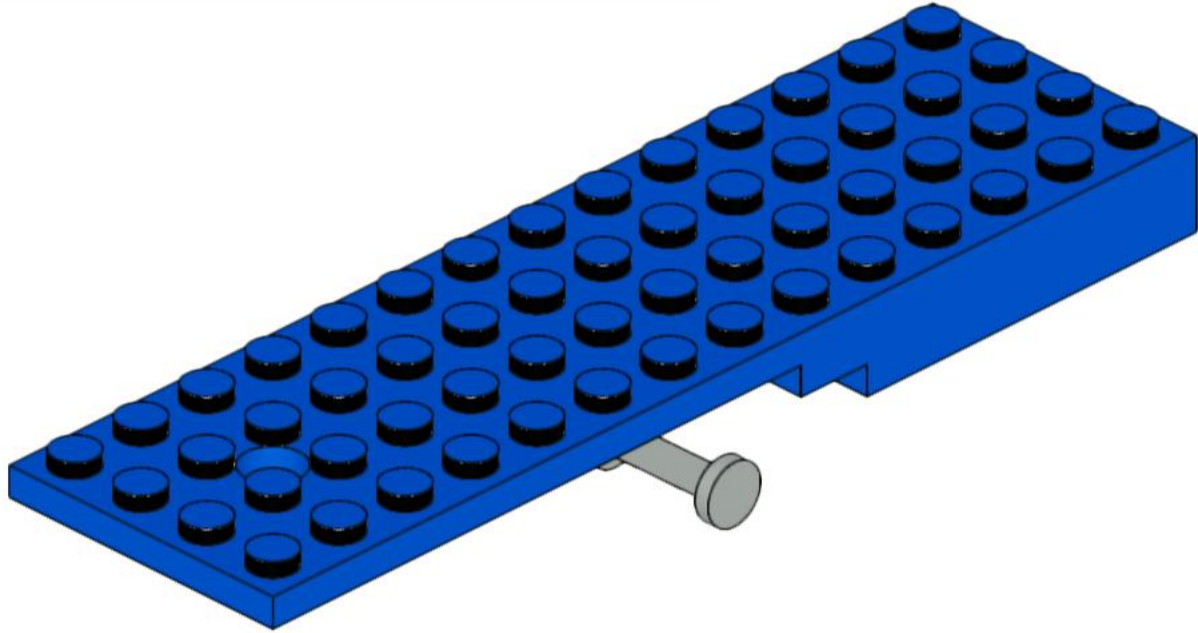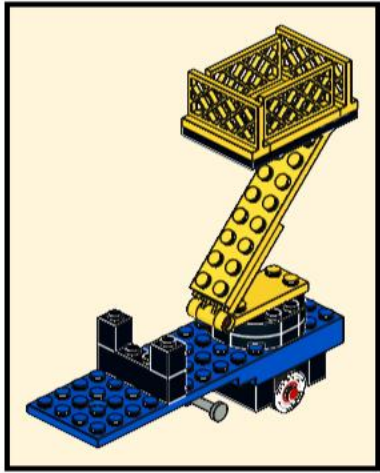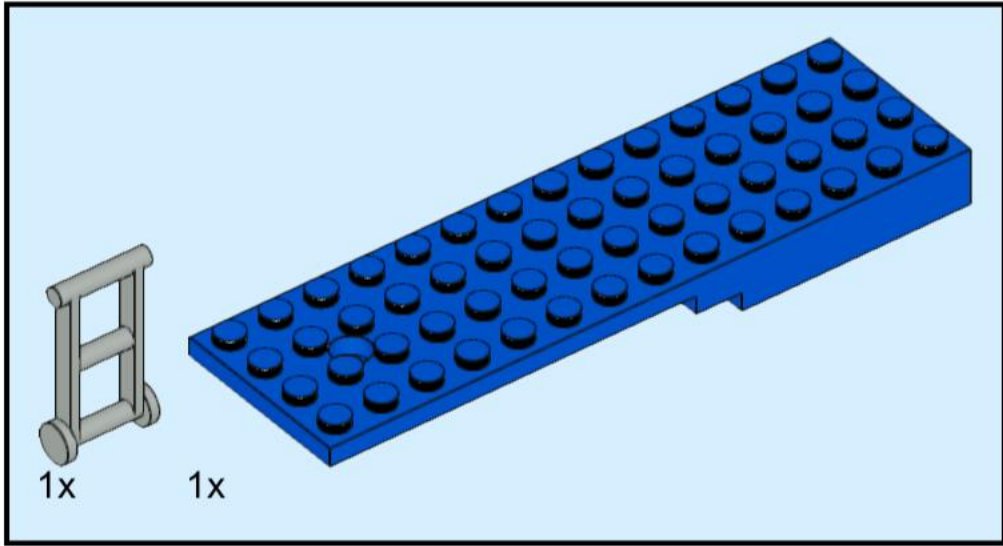



8

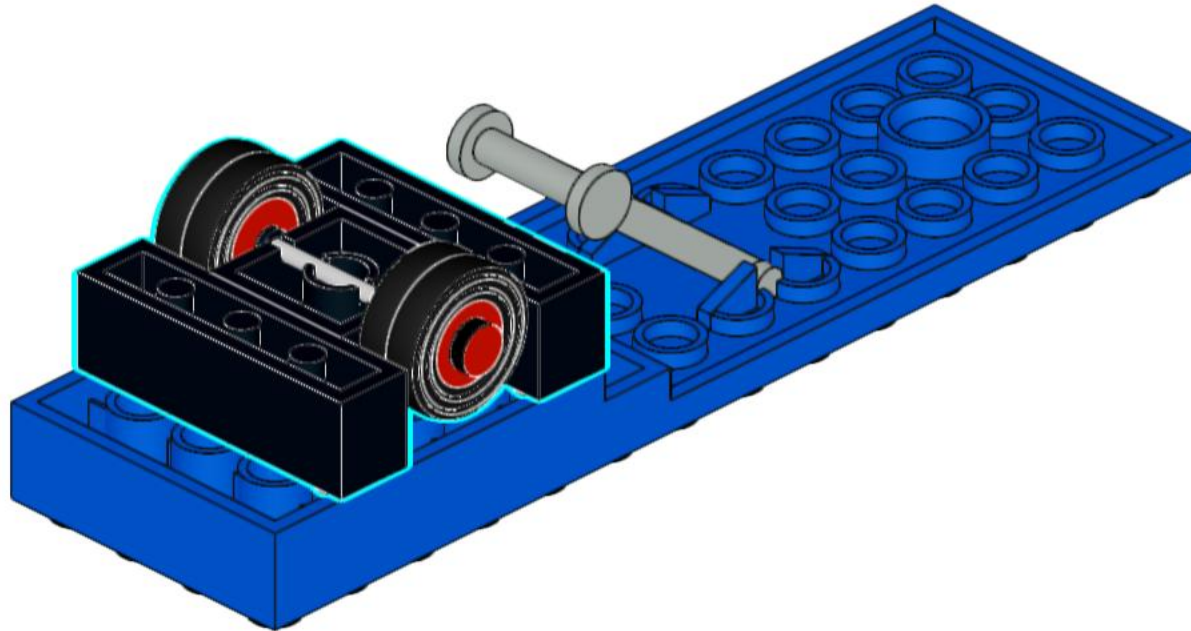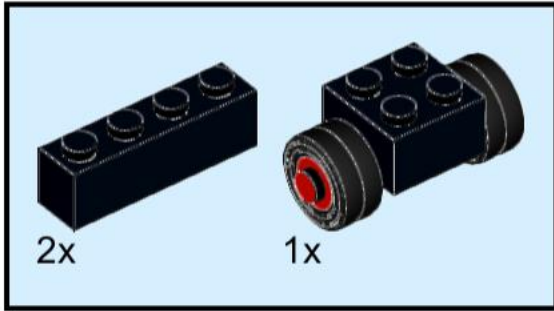



9

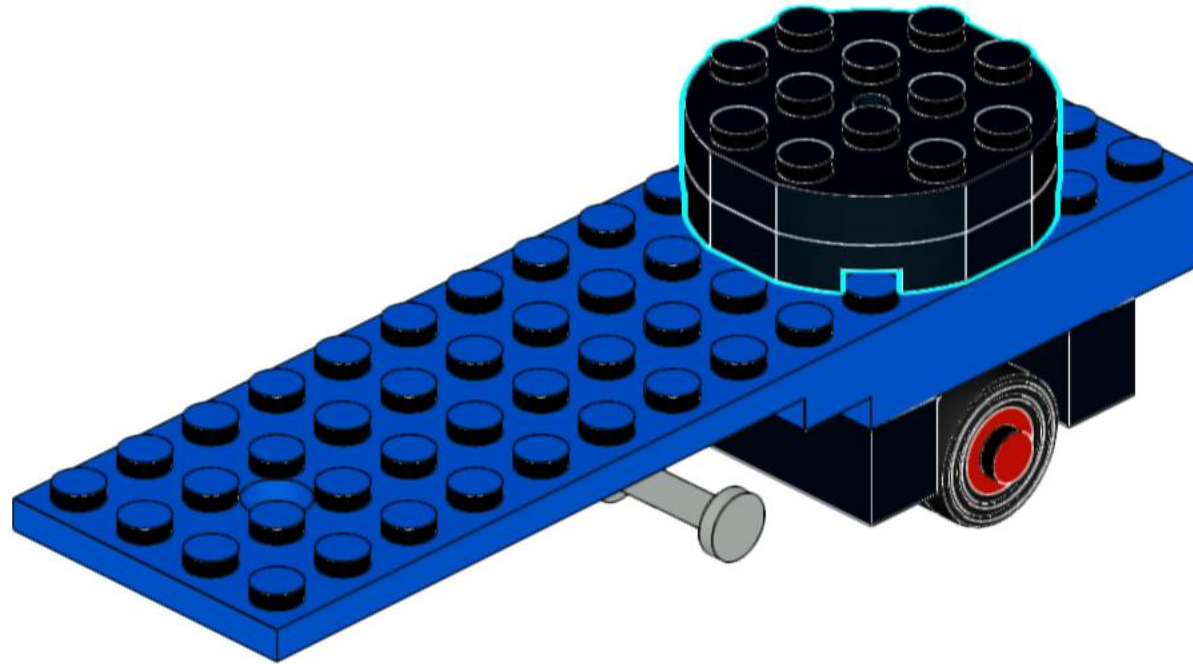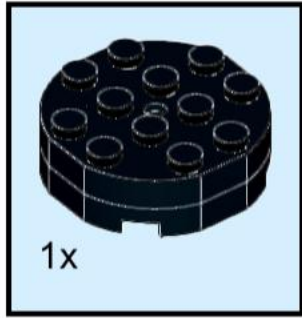




# 10

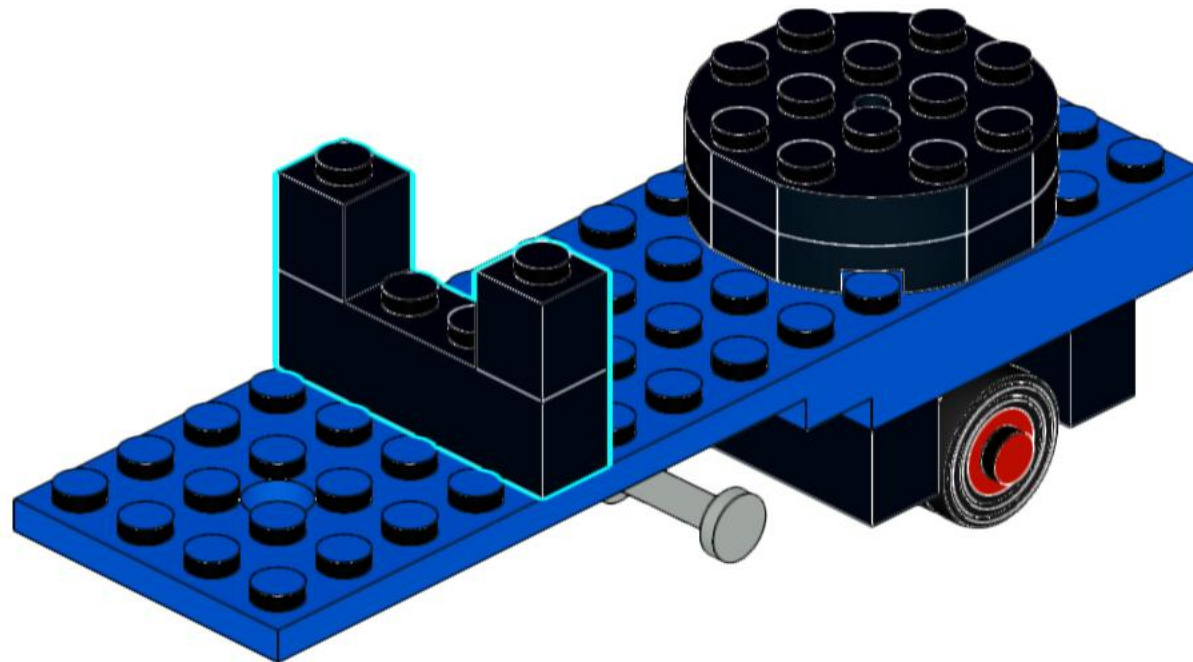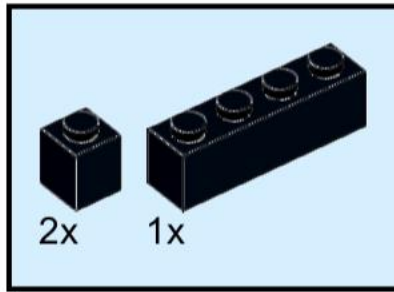


# 11

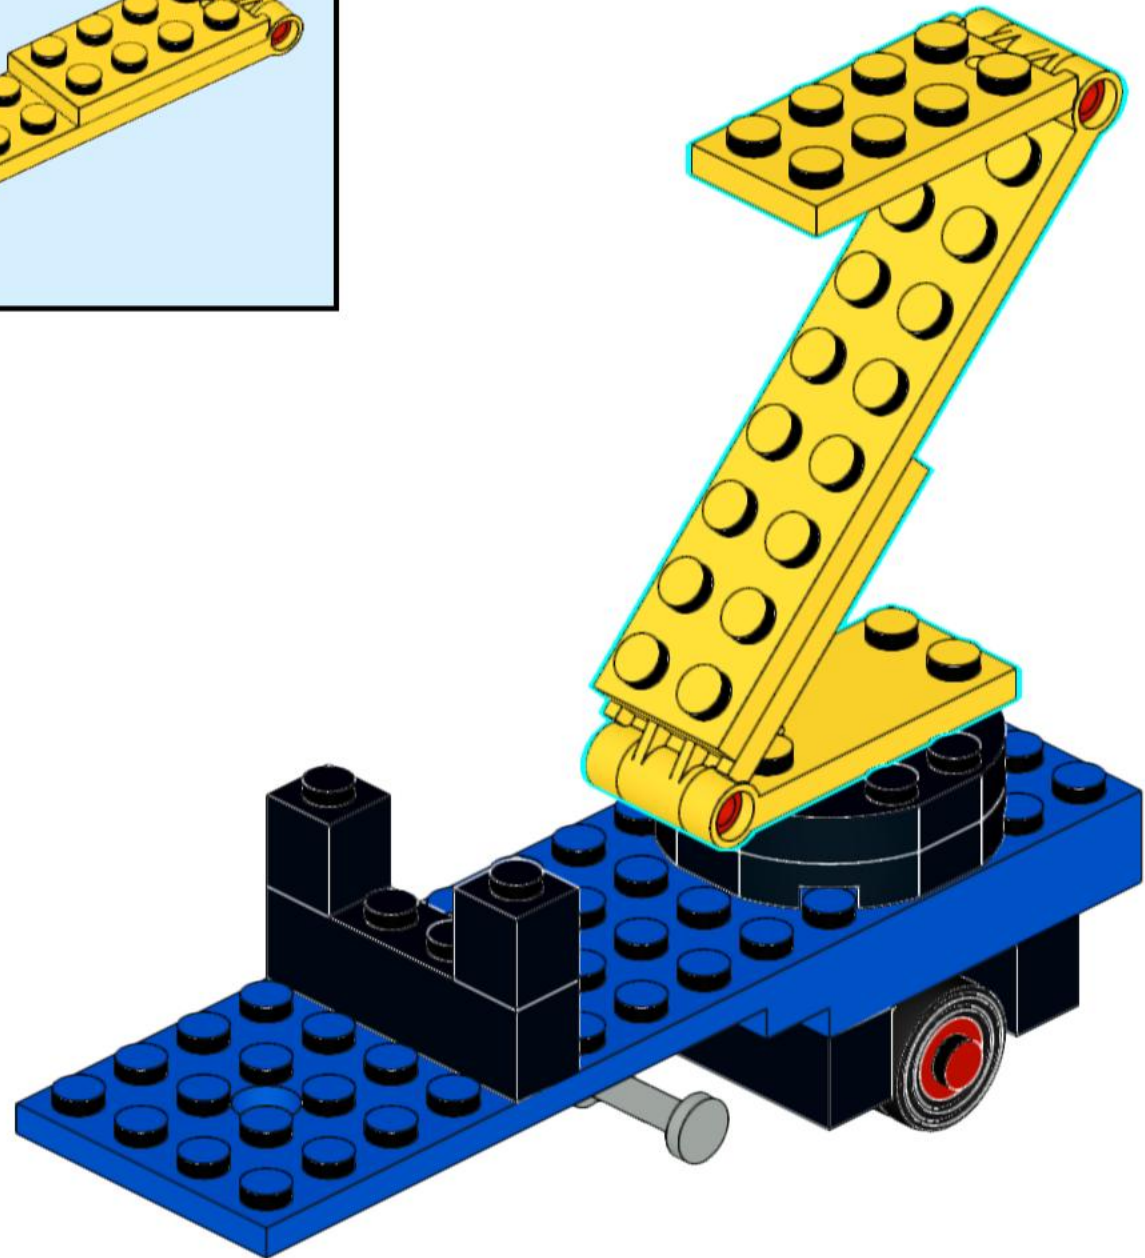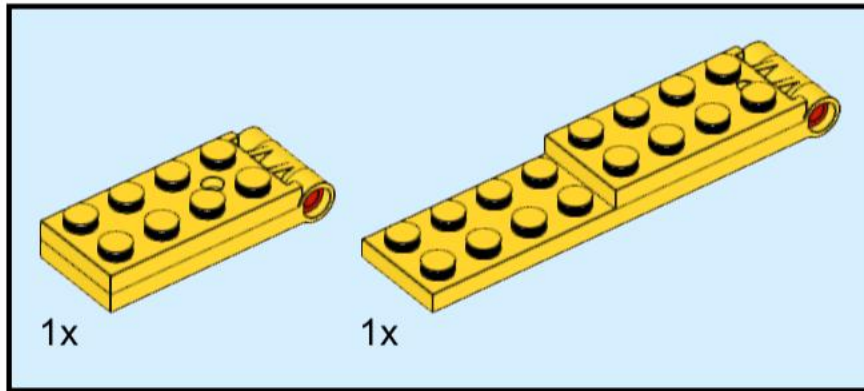


# 12

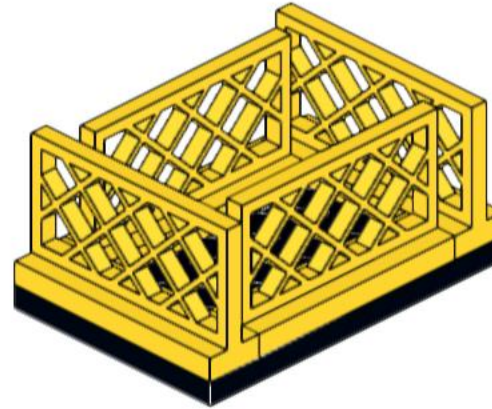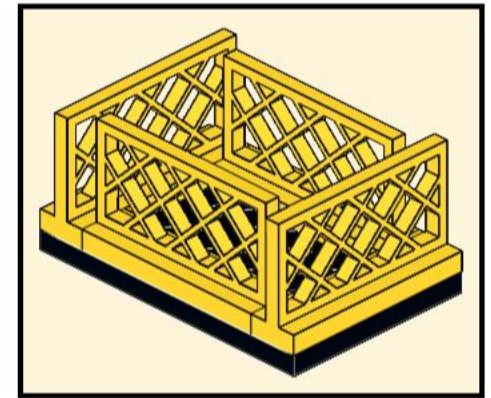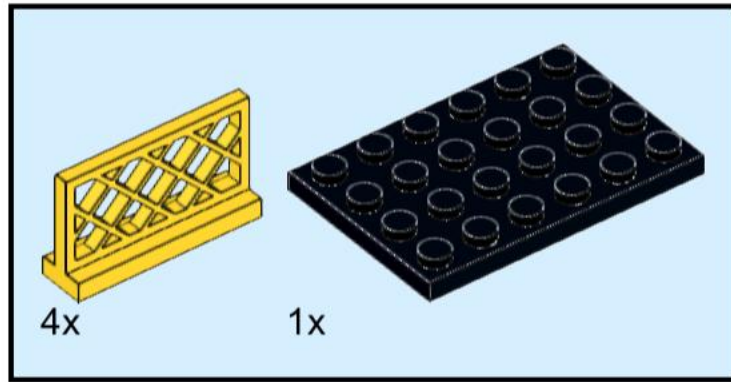


# 13

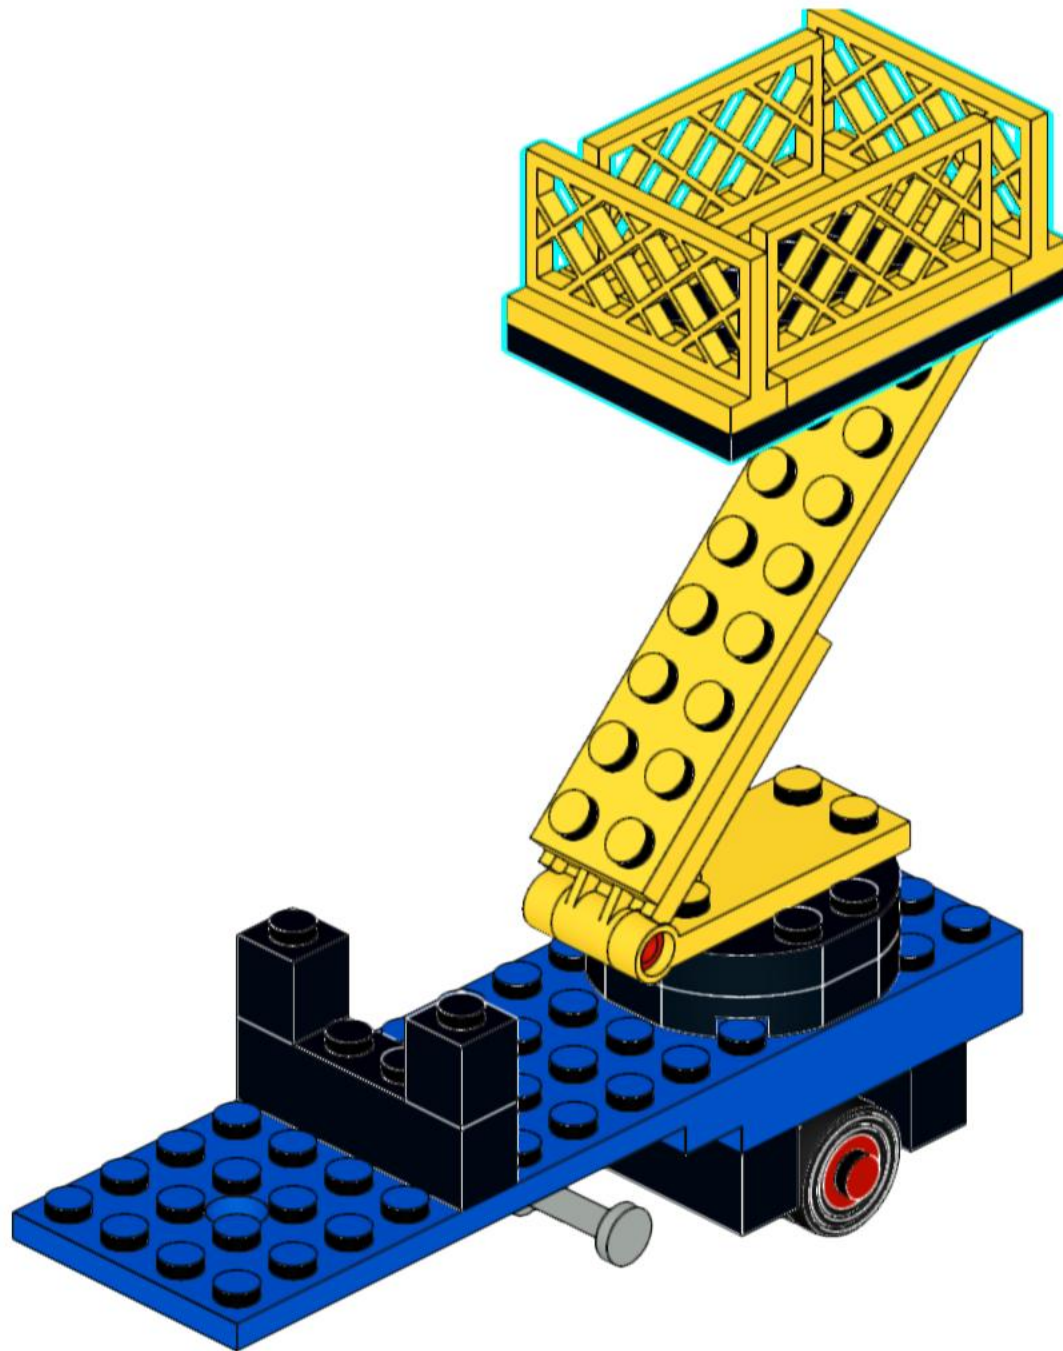

14

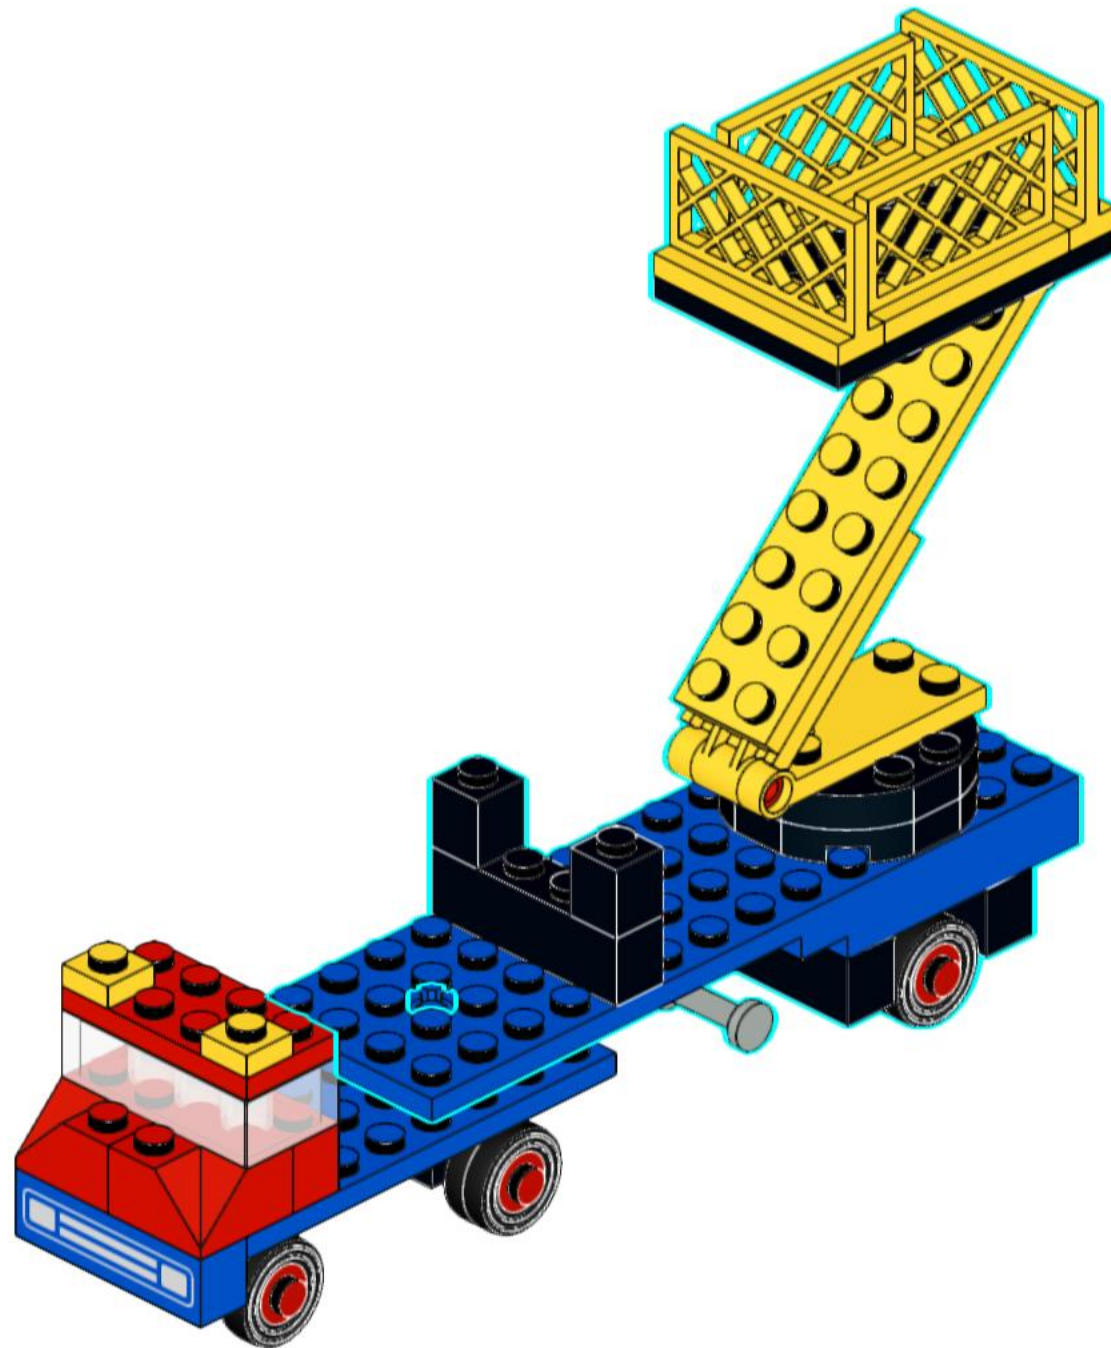


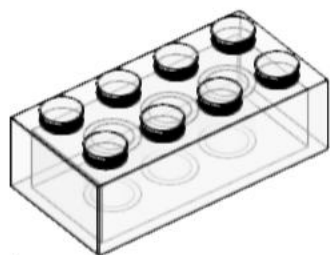


1x  
3001  
Trans-Clear




1x  
3010pb035s  
Blue

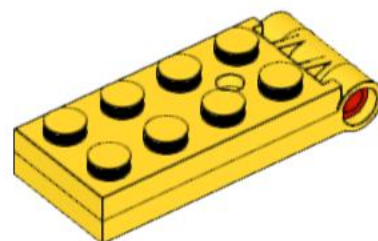


1x  
3149c01  
Yellow

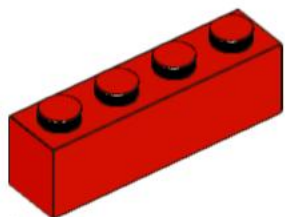

1x  
3010  
Red

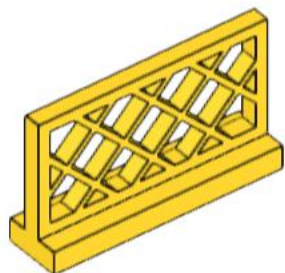


4x  
3185  
Yellow

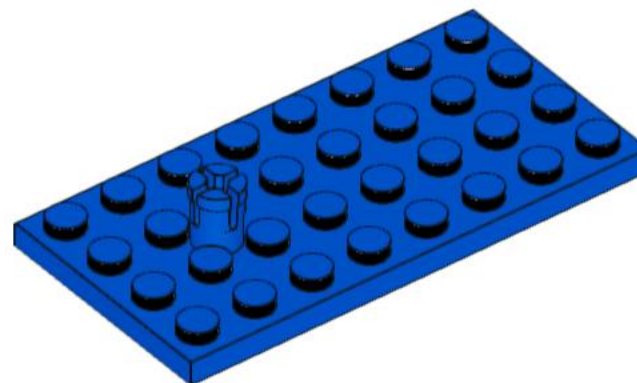

1x  
967  
Blue



3x  
3010  
Black

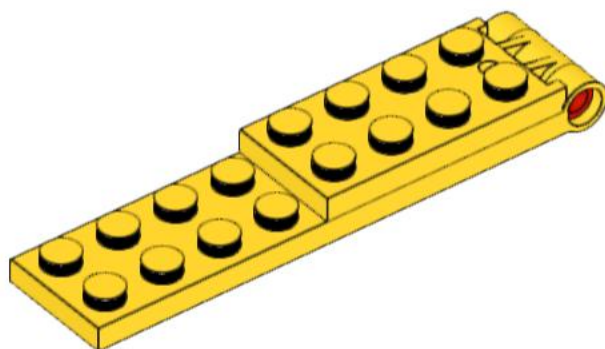


1x  
3324c01  
Yellow




2x  
3005  
Black




1x  
3032  
Black

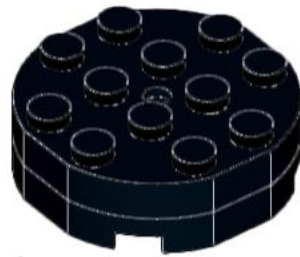

1x  
3404ac01  
Black

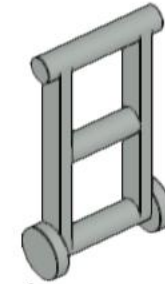


1x  
969  
Light Gray

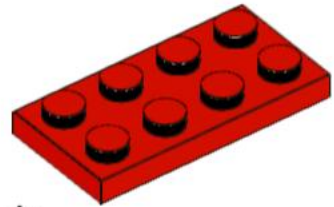


1x  
3020  
Red



2x  
3024  
Yellow

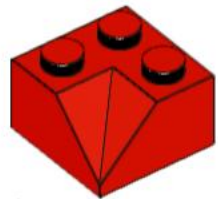

2x  
3046  
Red

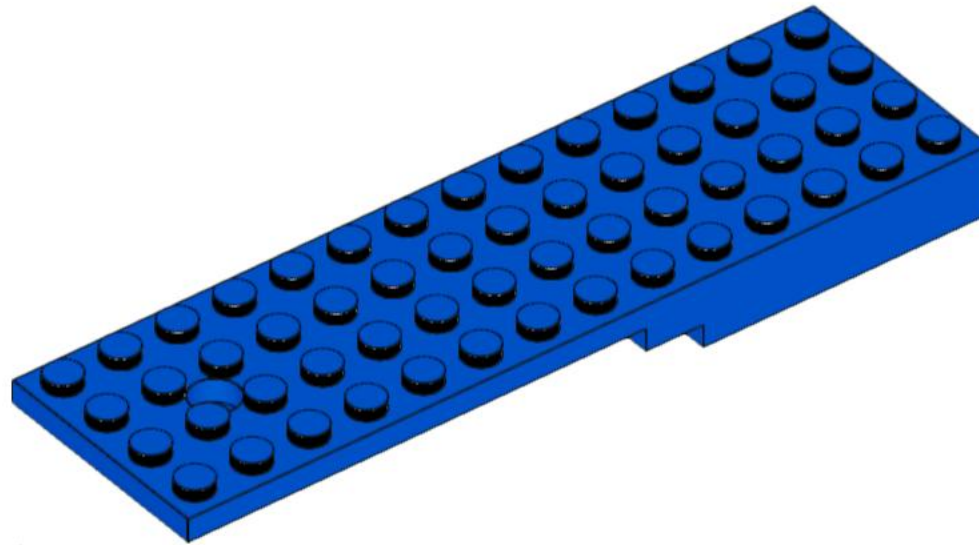

1x  
968  
Blue



2x  
3137c02assy1  
Black



1x  
3137c01assy1  
Black

